


JA3PR/FL






KammBar

Instructions

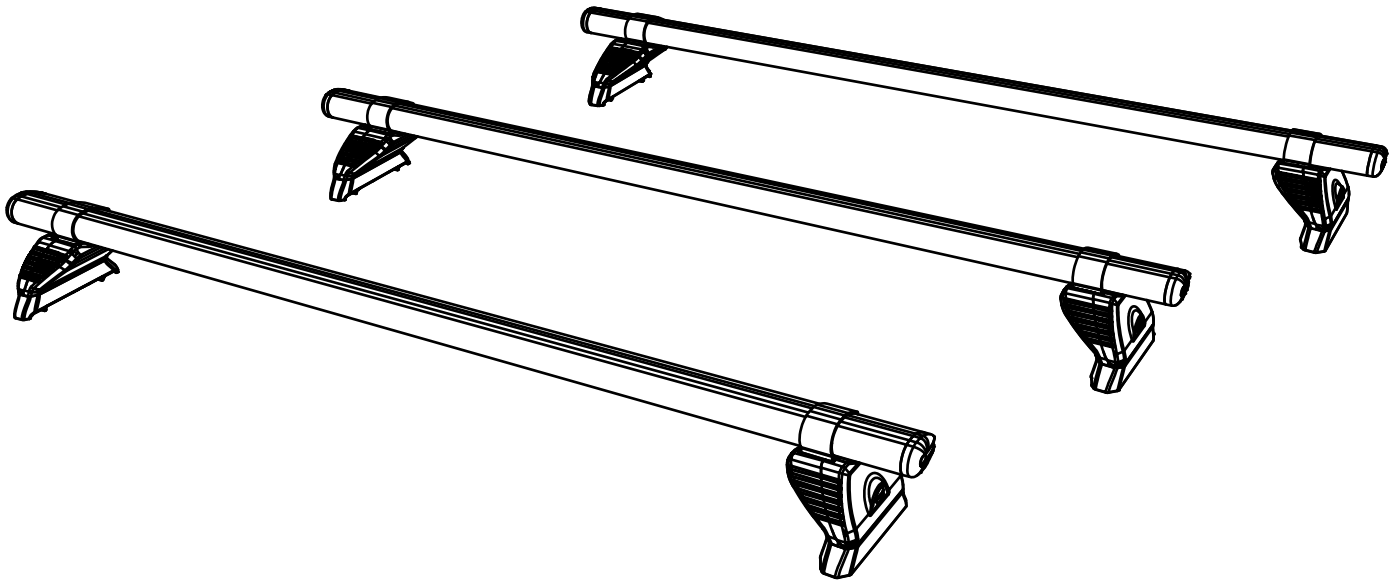


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

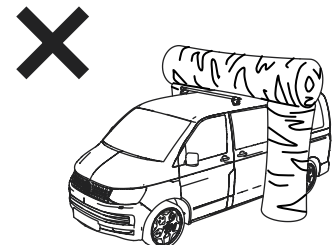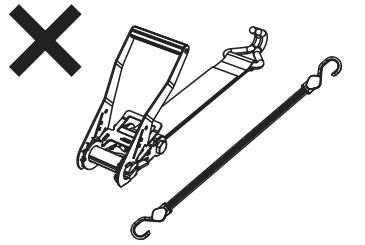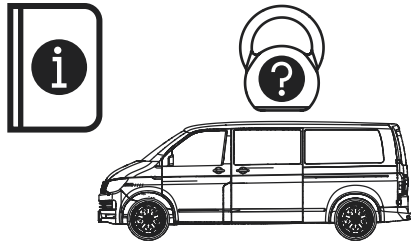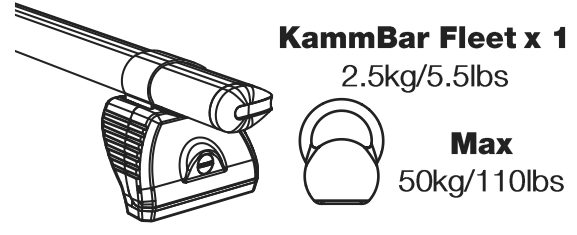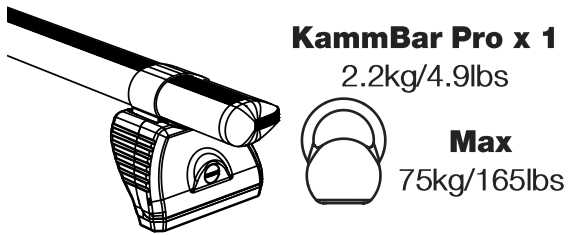


KammBar Pro

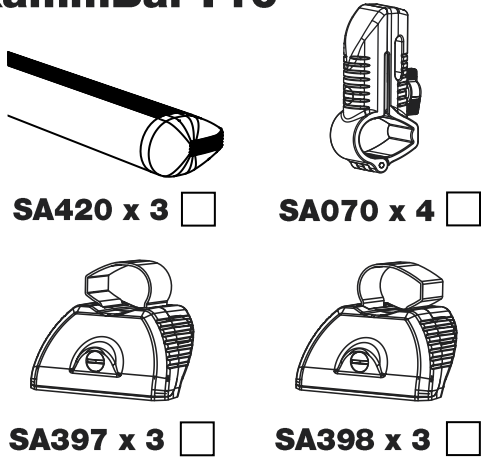

KammBar Fleet

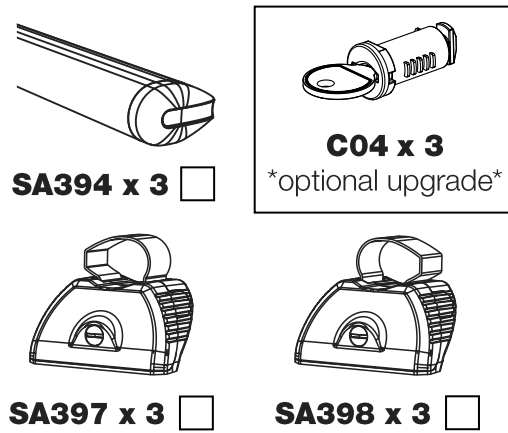

Fitting Kit

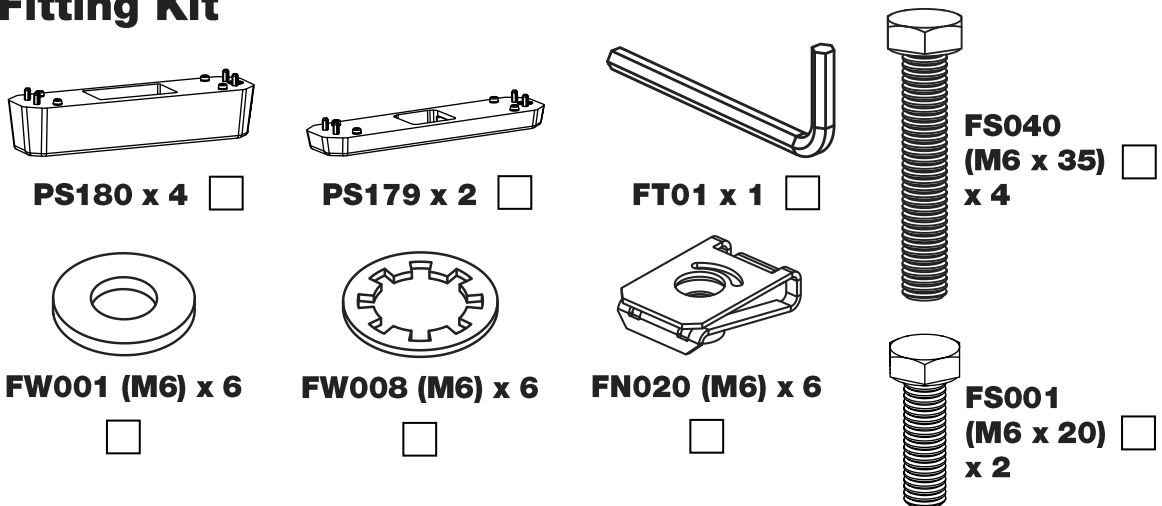

1.



2.



3.




SA397
PS180




SA397
PS179




SA397
PS180

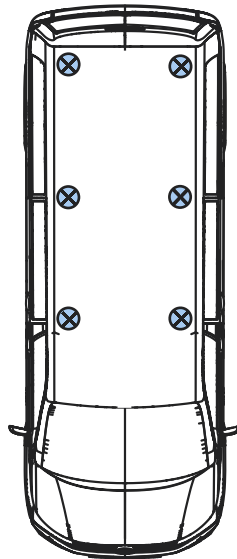


SA398
PS180




SA398
PS179




SA398
PS180









4.

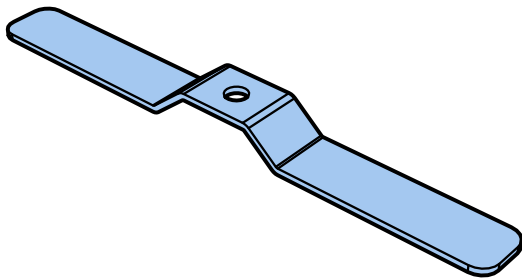


5.

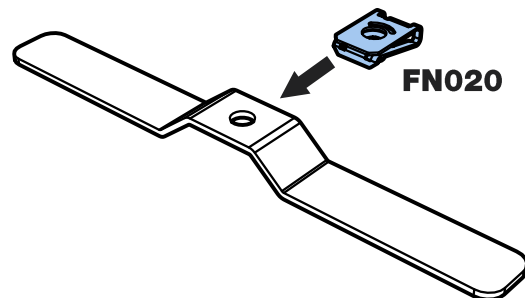


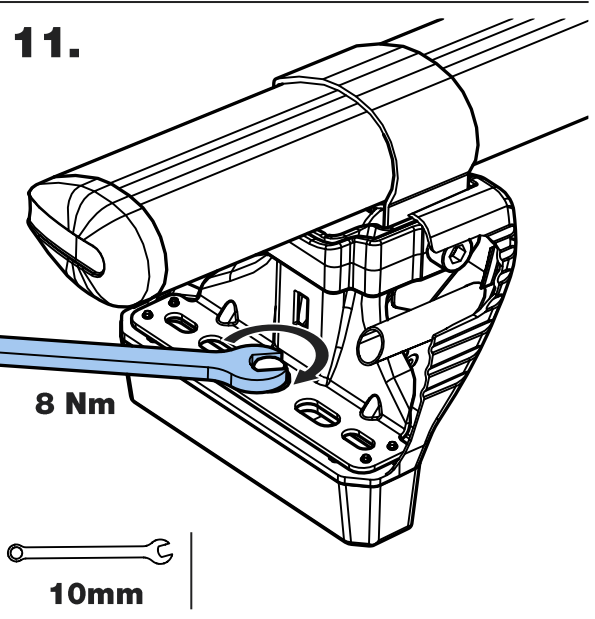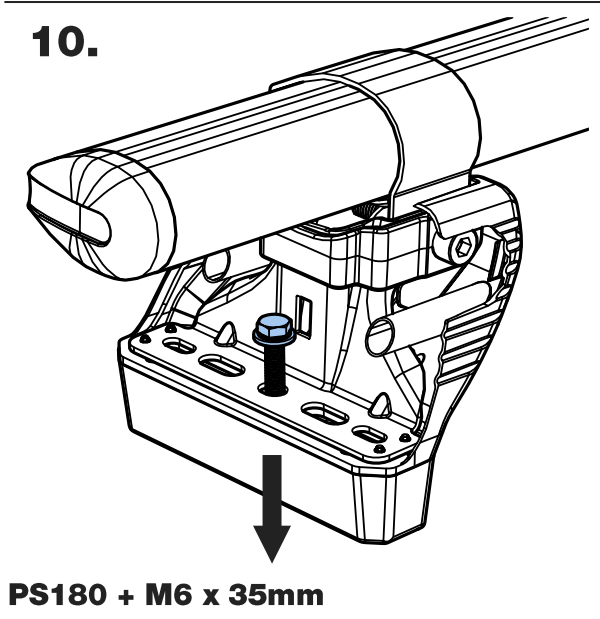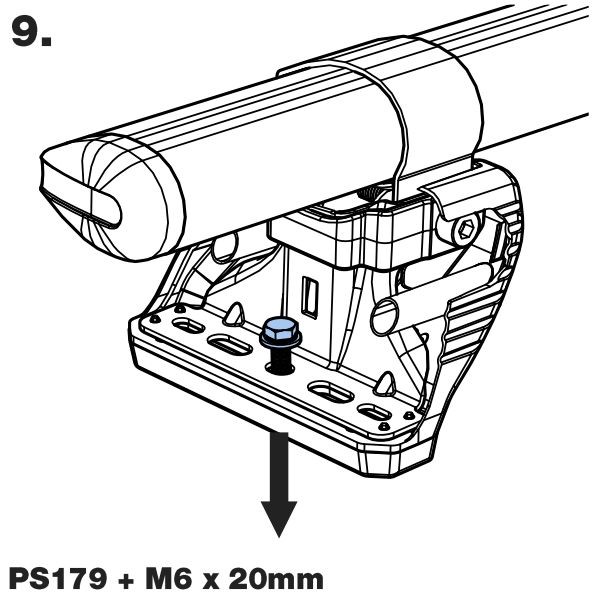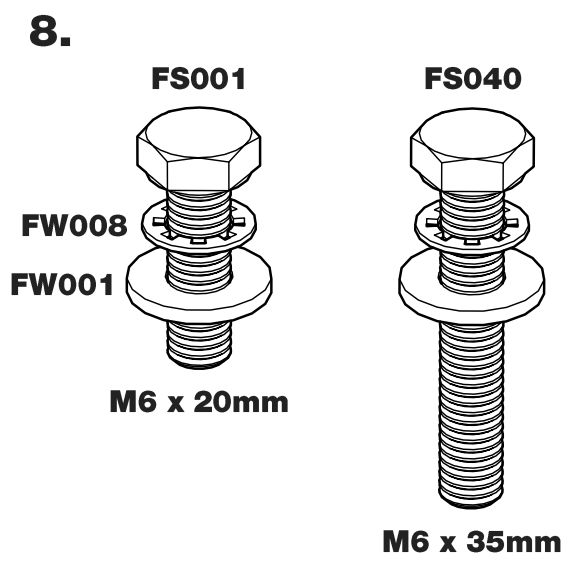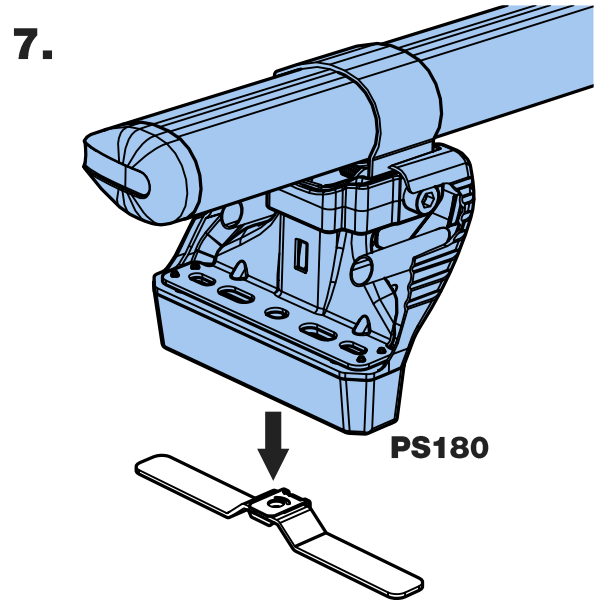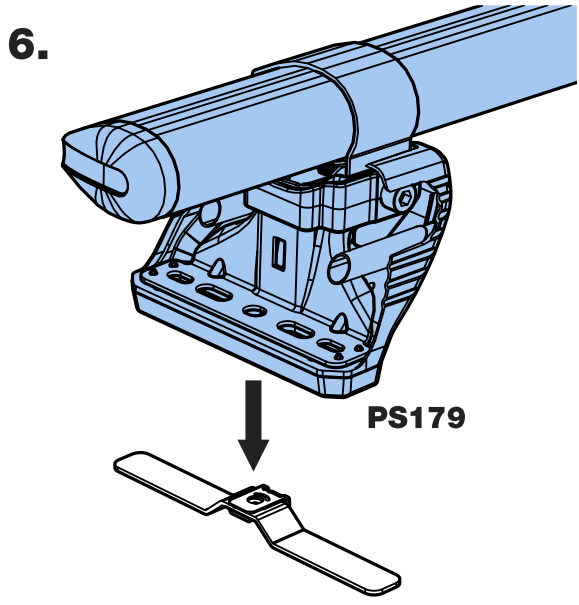


12.

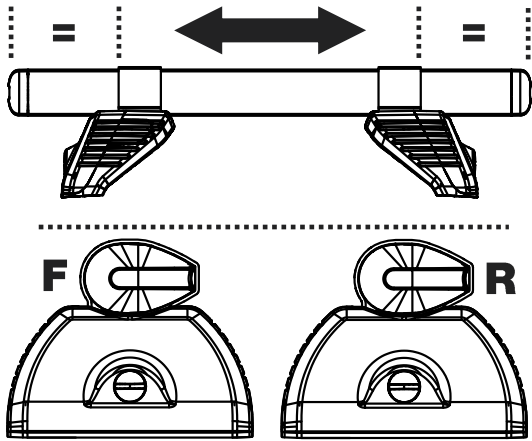

13.

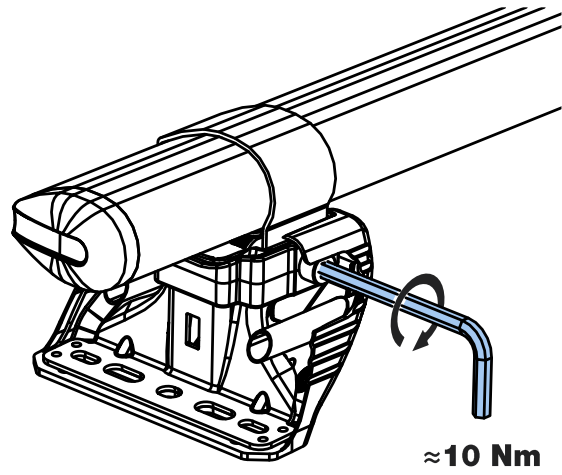

14.

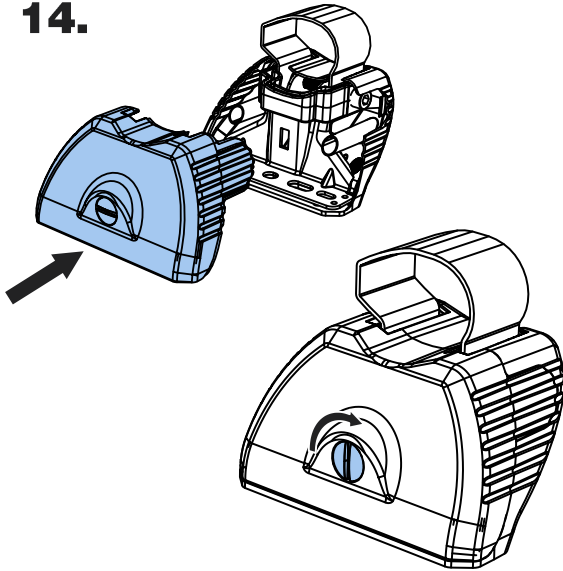

15.

