


# WD2PR/FL




# KammBar

## Instructions

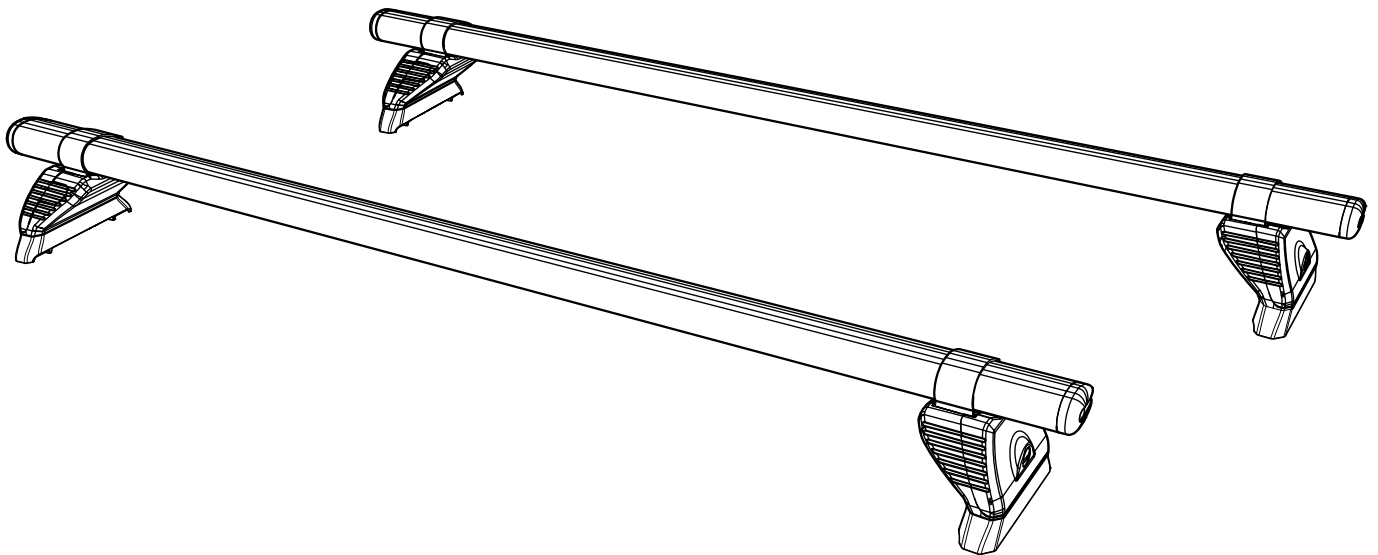


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

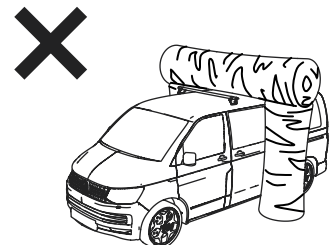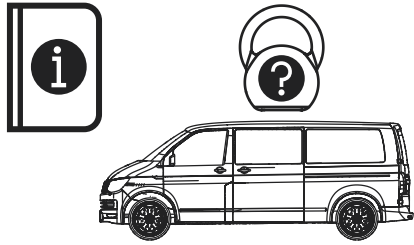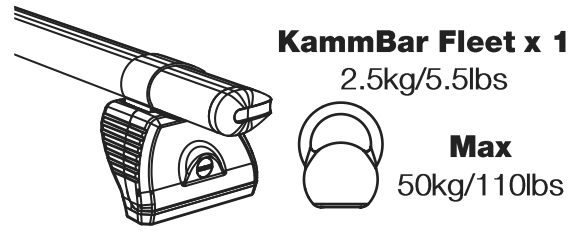


### KammBar Pro

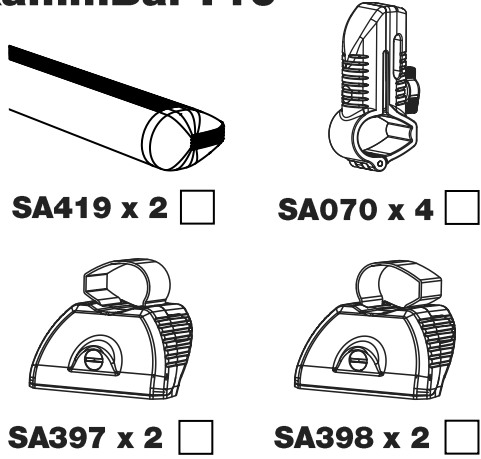

### KammBar Fleet

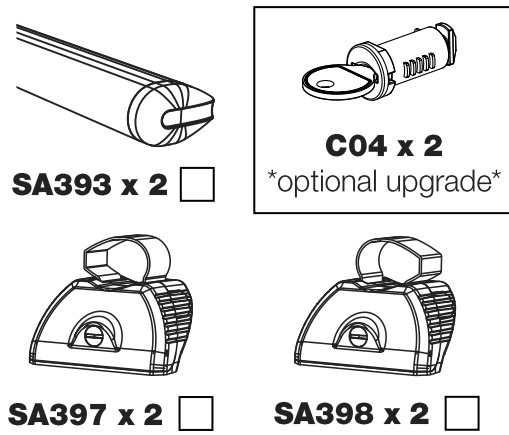

### Fitting Kit

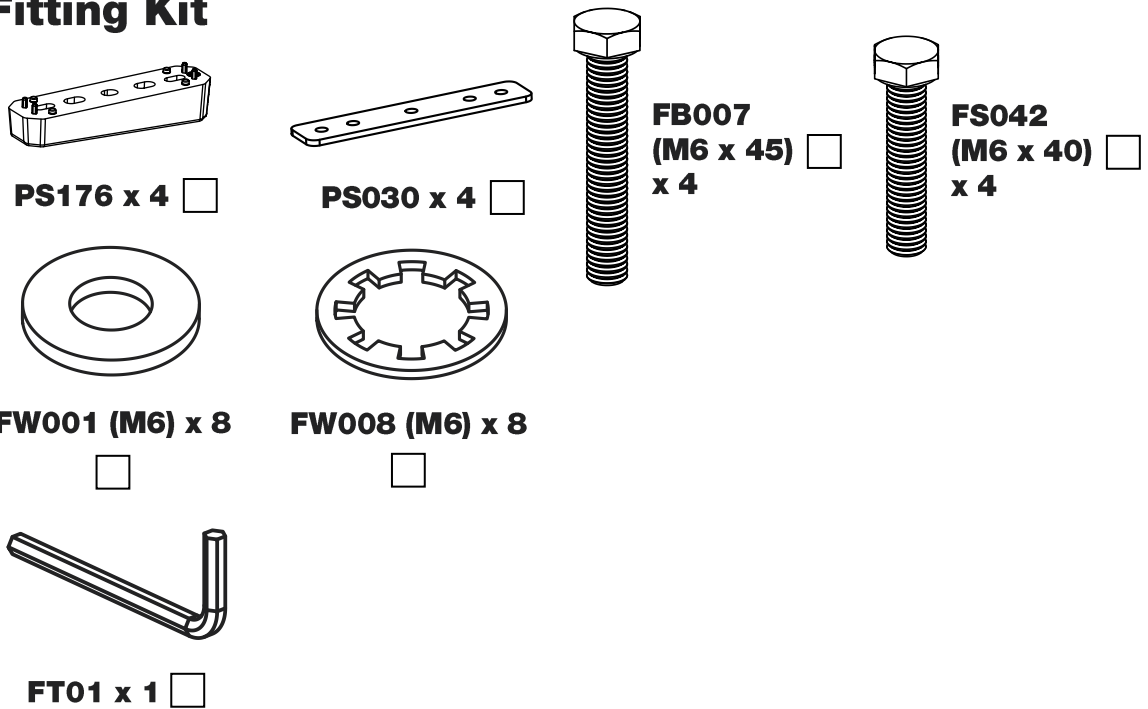


1.




2.





3.



SA397  
PS176

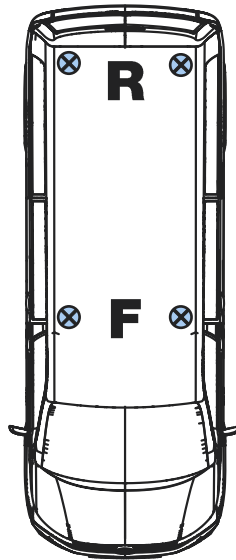

SA398  
PS176




SA397  
PS176

SA398  
PS176




4.

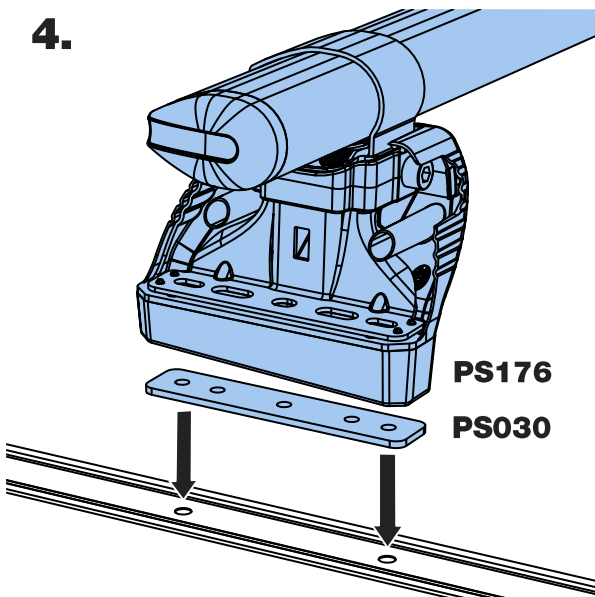

5.

FB007

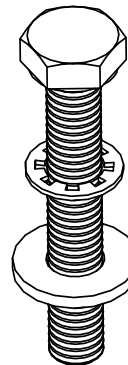


FW008

FW001

M6 x 45mm







FS042

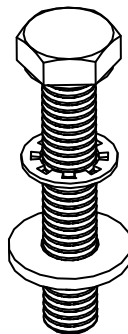


FW008

FW001

M6 x 40mm

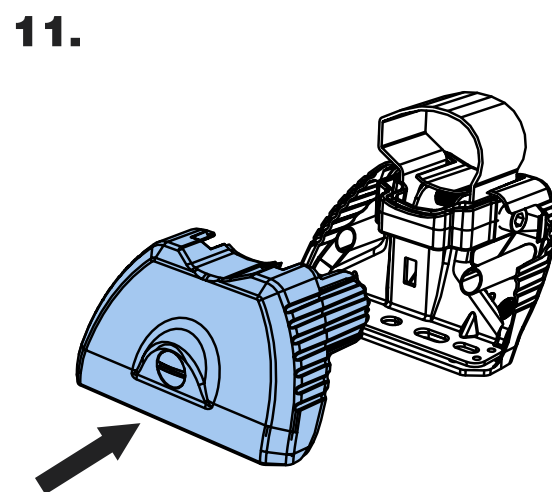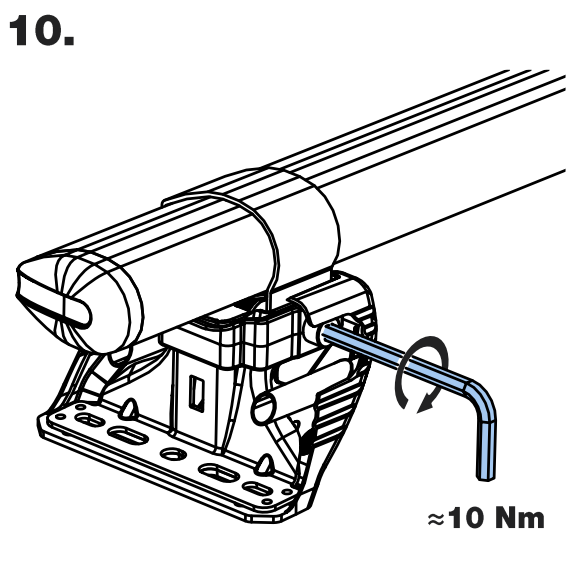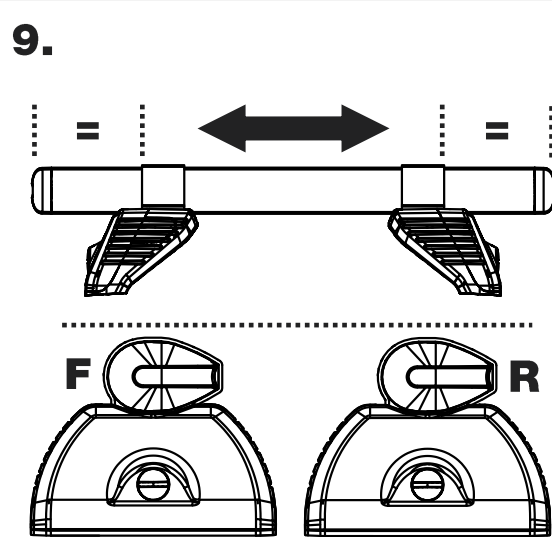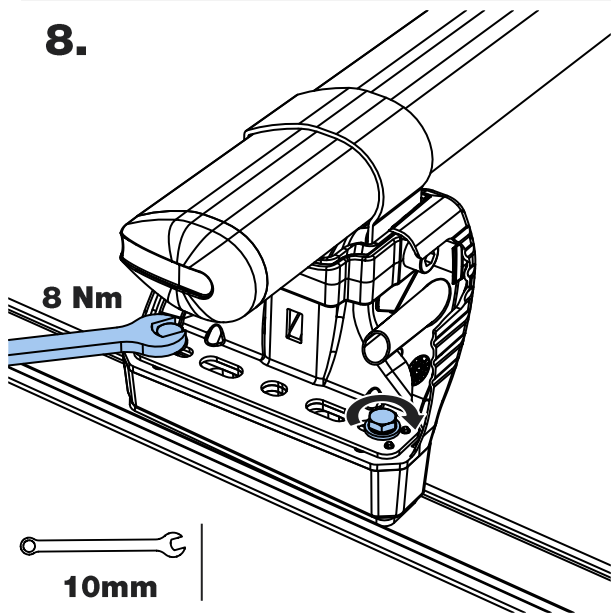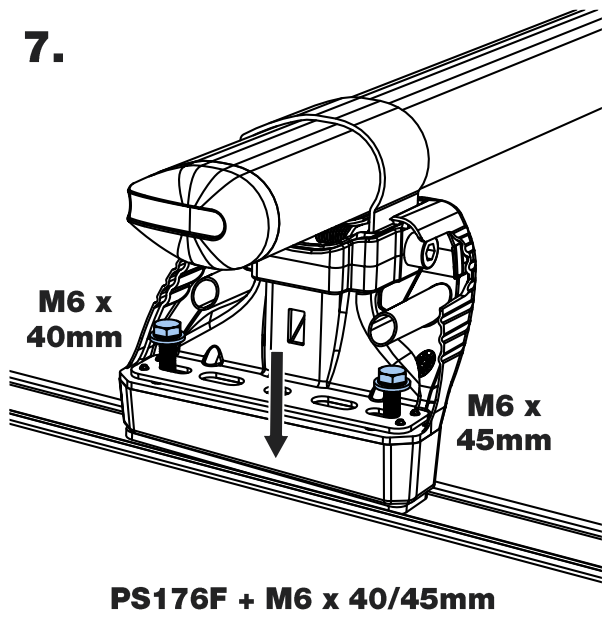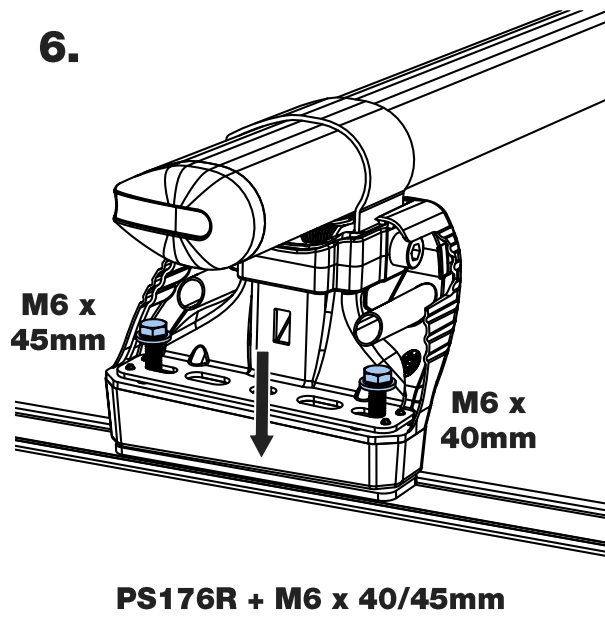

12.

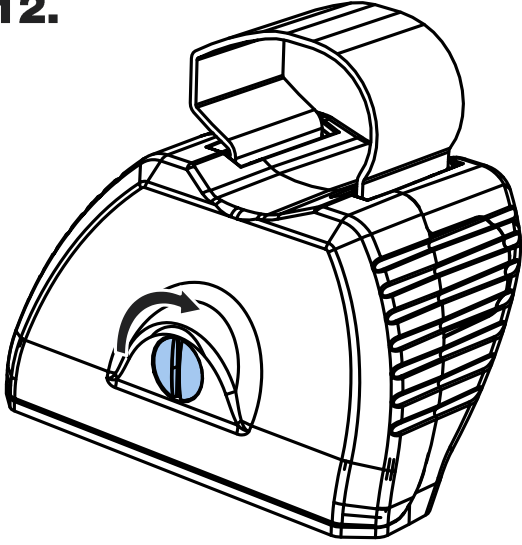

13.

