



VA2FL KammBar

Instructions

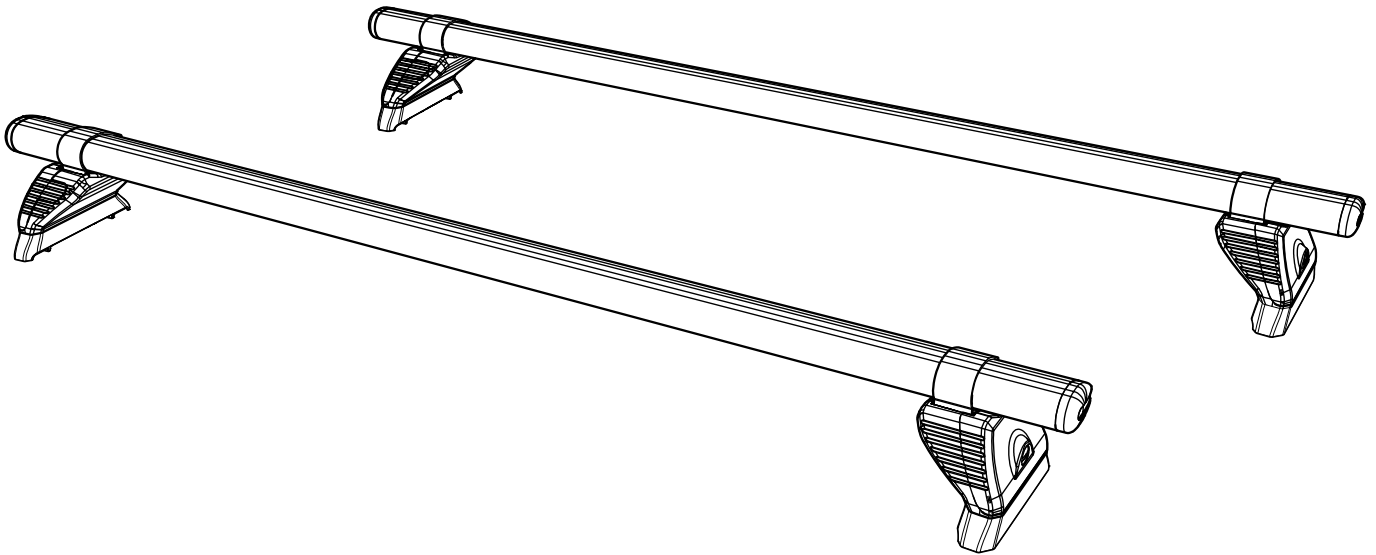

CITY CRASH (✓)




According to ISO/ PAS 11154:2006

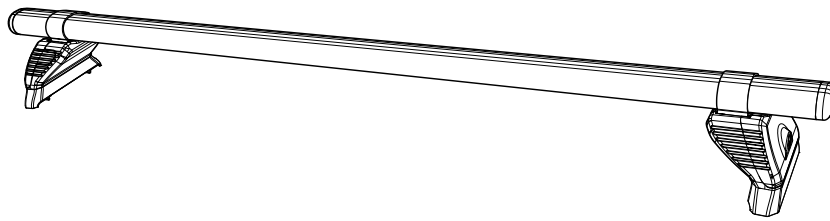


KammBar Fleet x 1
2.5kg/5.5lbs



Max
50kg/110lbs

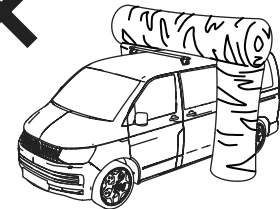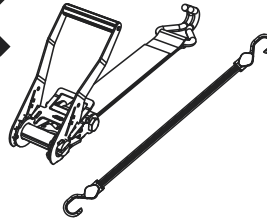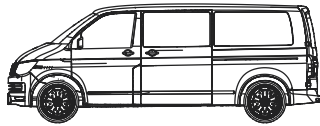


KammBar Fleet

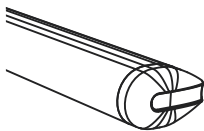


SA395 x 2



SA397 x 2

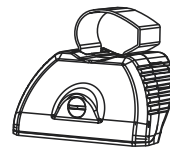


SA398 x 2




C04 x 2
optional upgrade


Fitting Kit




PS186 x 4




PS210 x 4

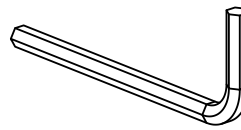


FT02 x 1

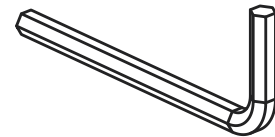

FT01 x 1



SA069 x 4



FW002 (M8) x 4




PS209 (M6) x 8



FW001 (M6) x 8




FS103 (M6 x 25) x 8




FS062 (M8 x 25) x 4


1.

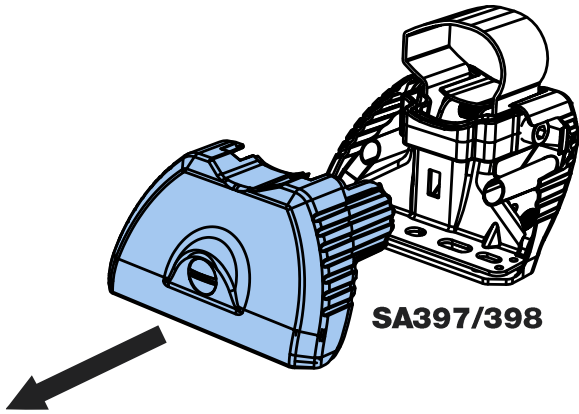


2.

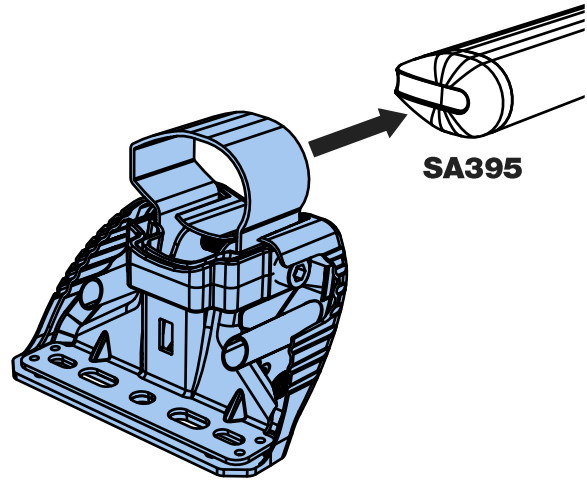


3.




SA397
PS186




SA397
PS186

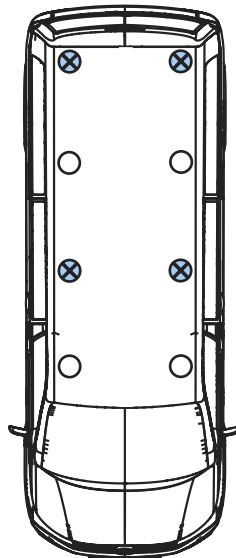



SA398
PS186




SA398
PS186









4.

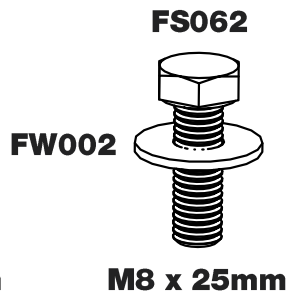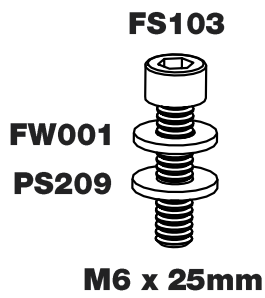


5.

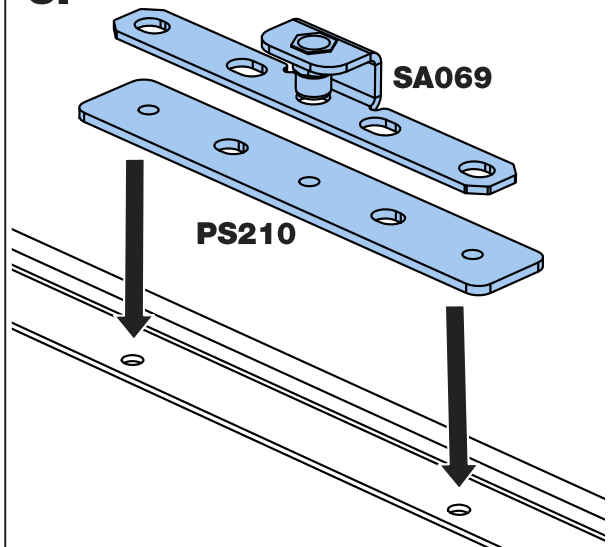


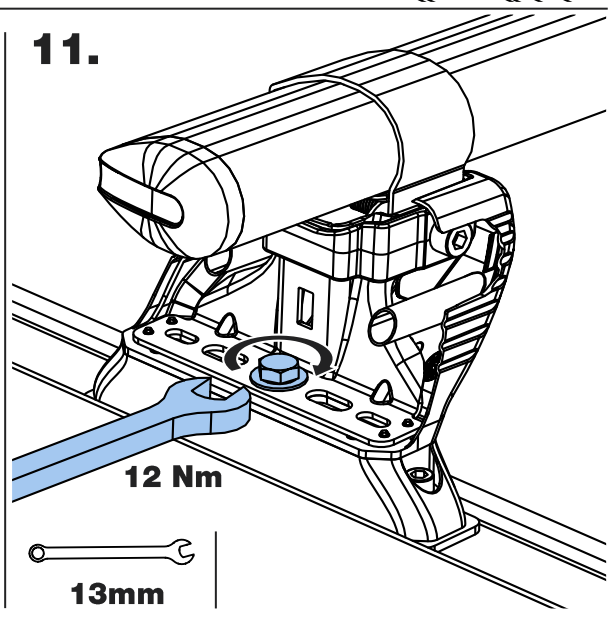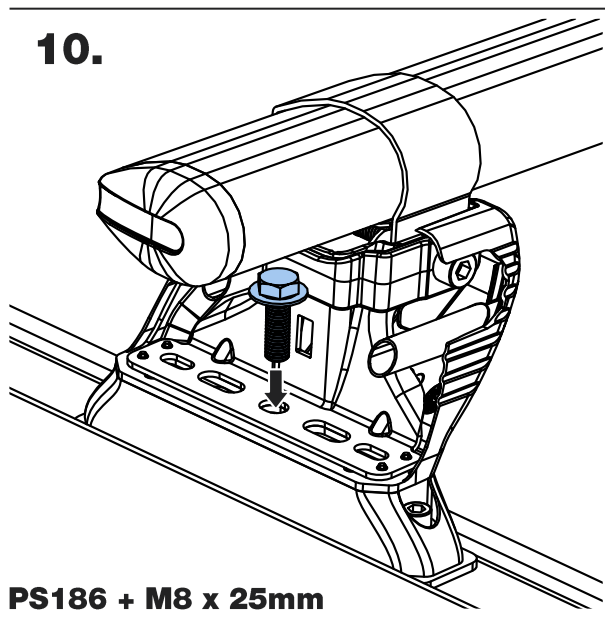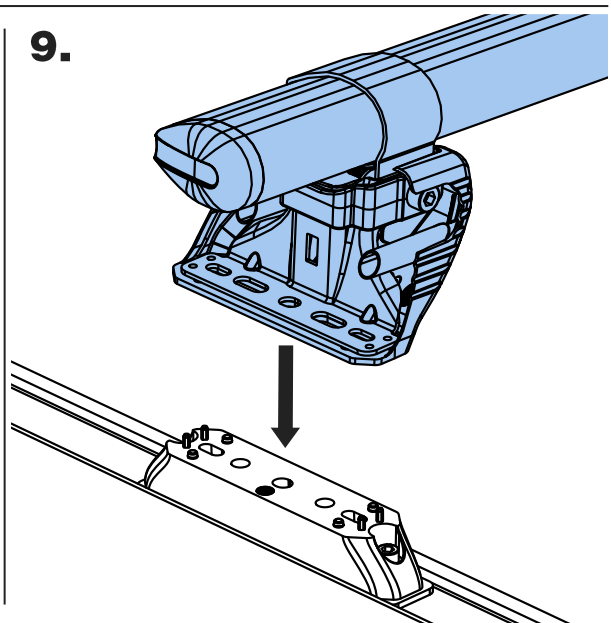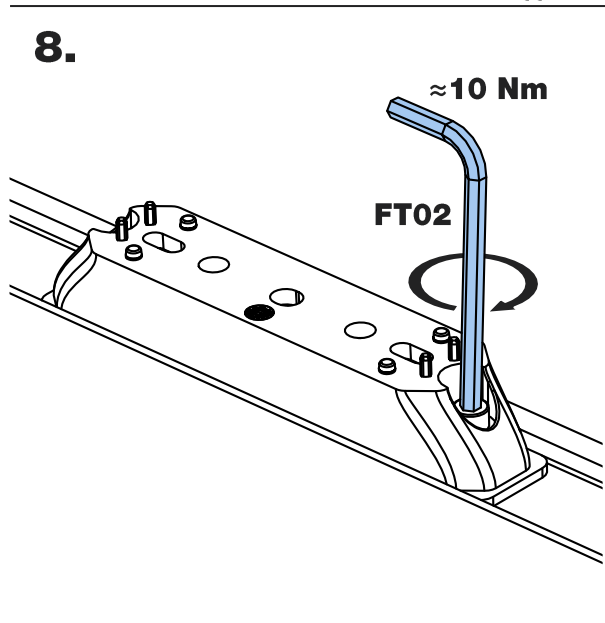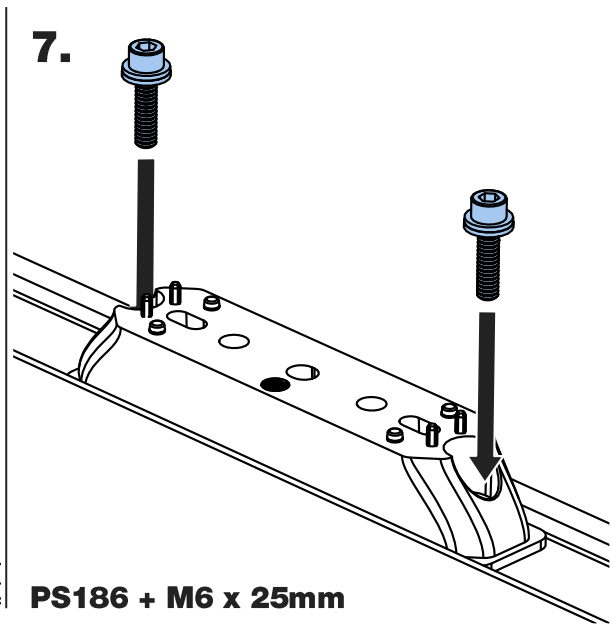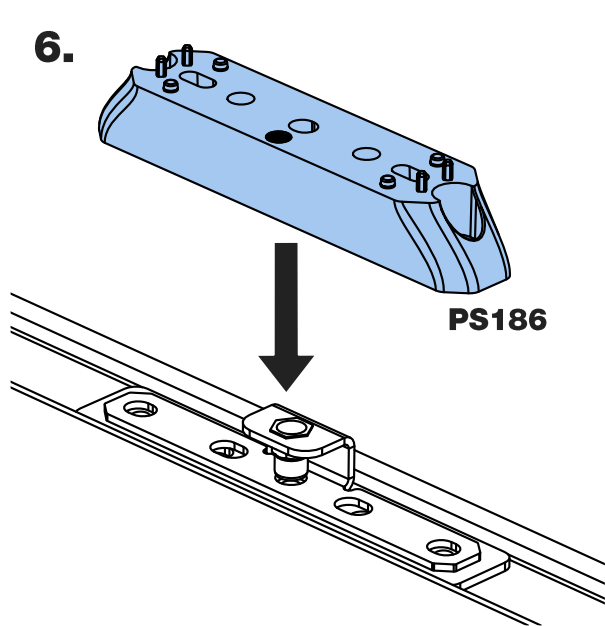


12.

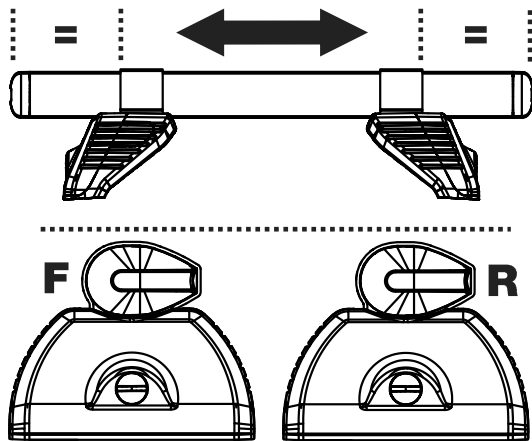

13.

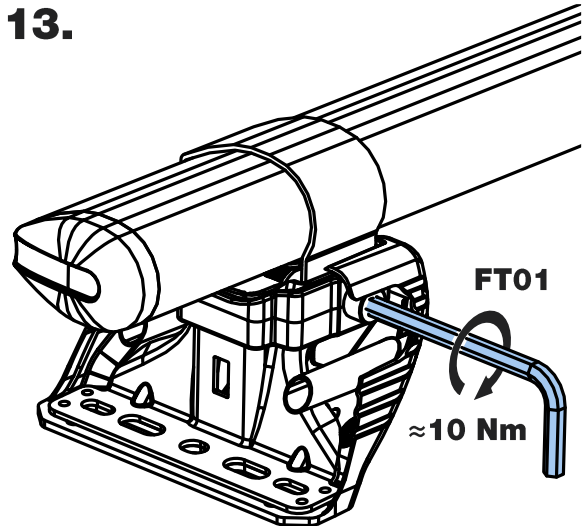

14.

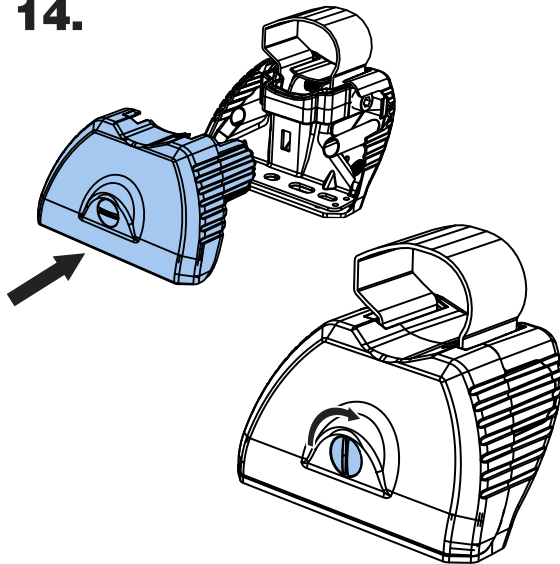

15.

