



VA3FL KammBar

Instructions

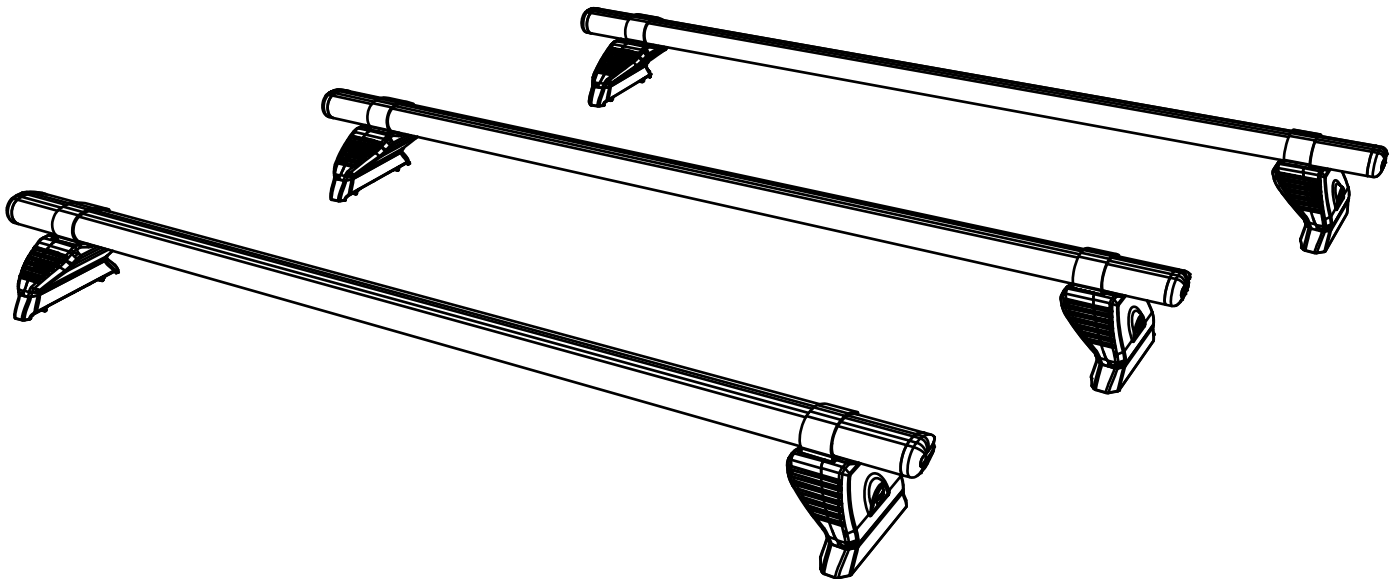

CITY CRASH (✓)



According to ISO/ PAS 11154:2006

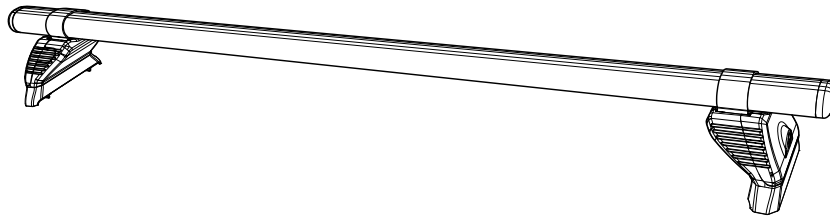


KammBar Fleet x 1
2.5kg/5.5lbs




Max
50kg/110lbs

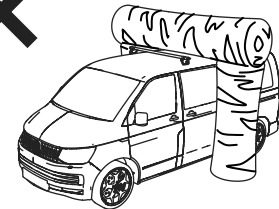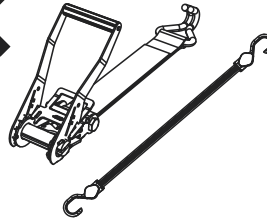


KammBar Fleet

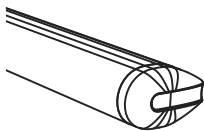


SA395 x 3

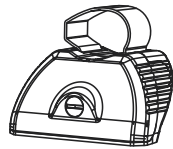

SA397 x 3

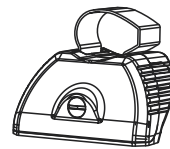


SA398 x 3




C04 x 3

optional upgrade

Fitting Kit




PS186 x 6




PS210 x 6



FT02 x 1

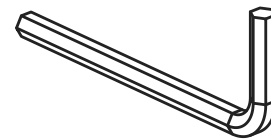

FT01 x 1



SA069 x 6



FW002
(M8) x 6




PS209
(M6) x 12



FW001
(M6) x 12




FS103
(M6 x 25) x 12




FS062
(M8 x 25) x 6




1.

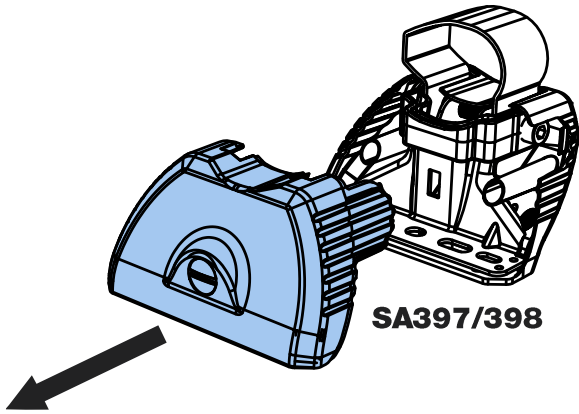


2.

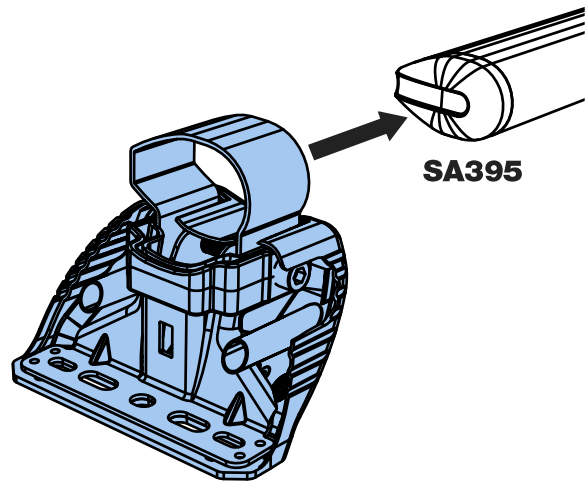


3.




SA397
PS186




SA397
PS186




SA397
PS186

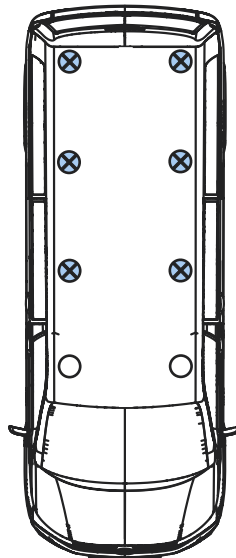


SA398
PS186





SA398
PS186




SA398
PS186









4.

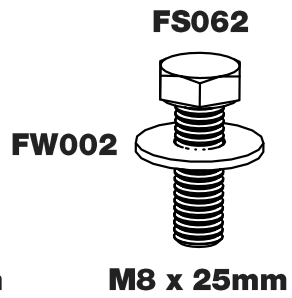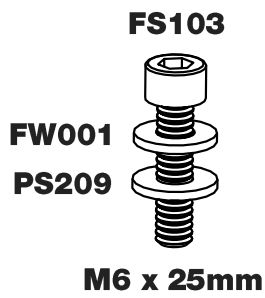


5.

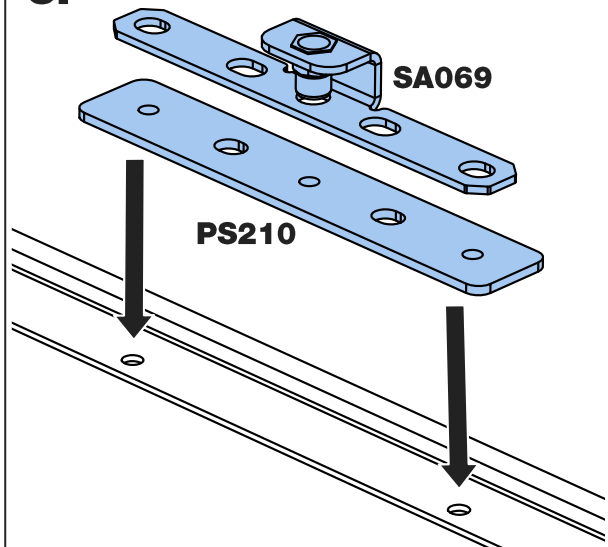


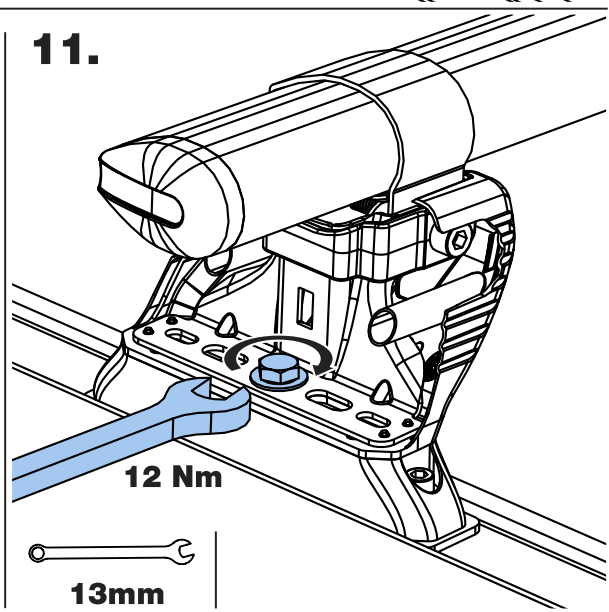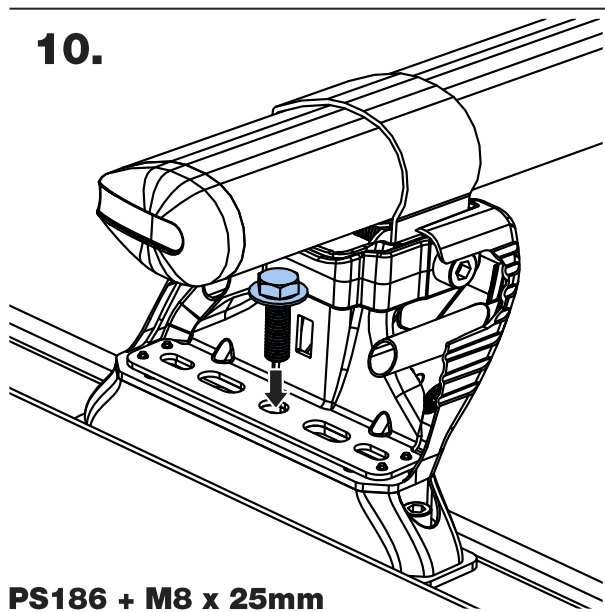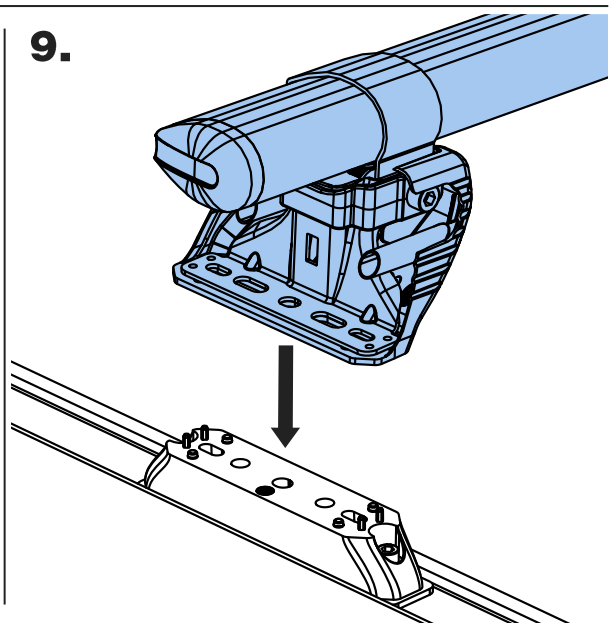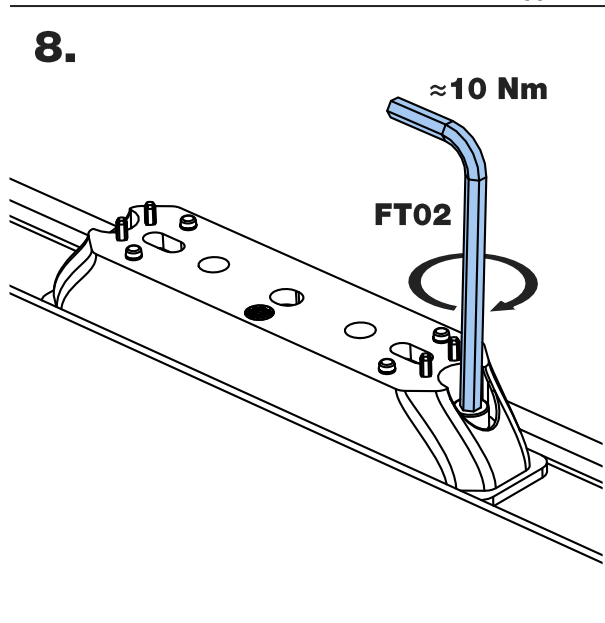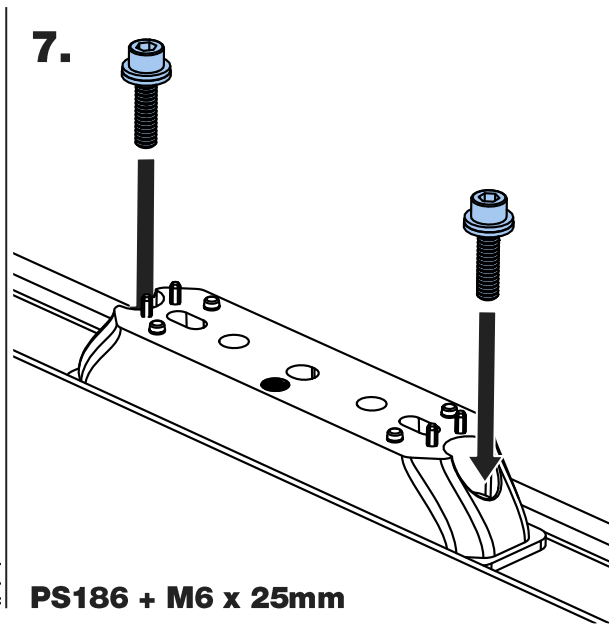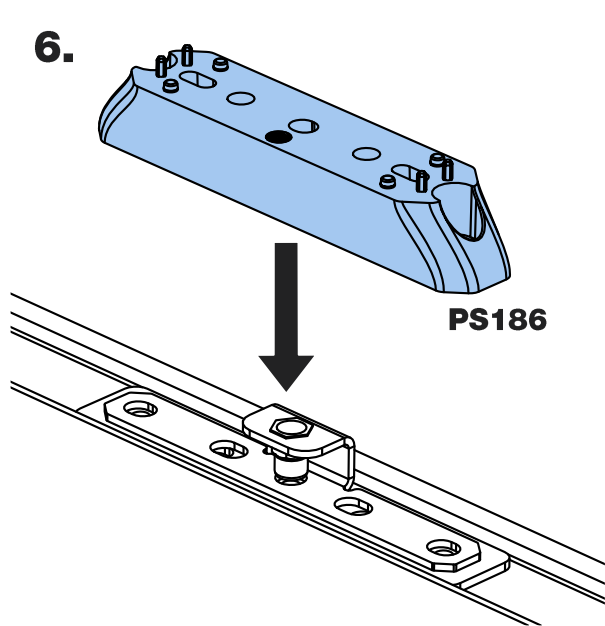


12.

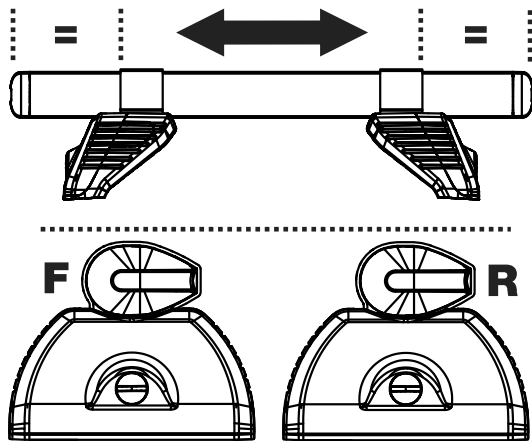

13.

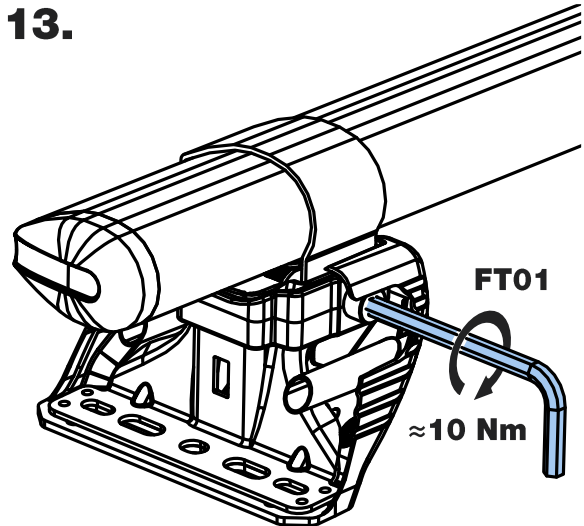

14.

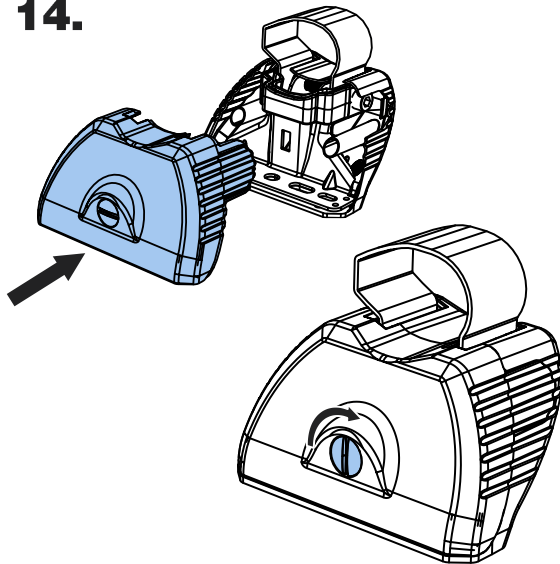

15.

