


# TA4PR/FL





# KammBar

## Instructions

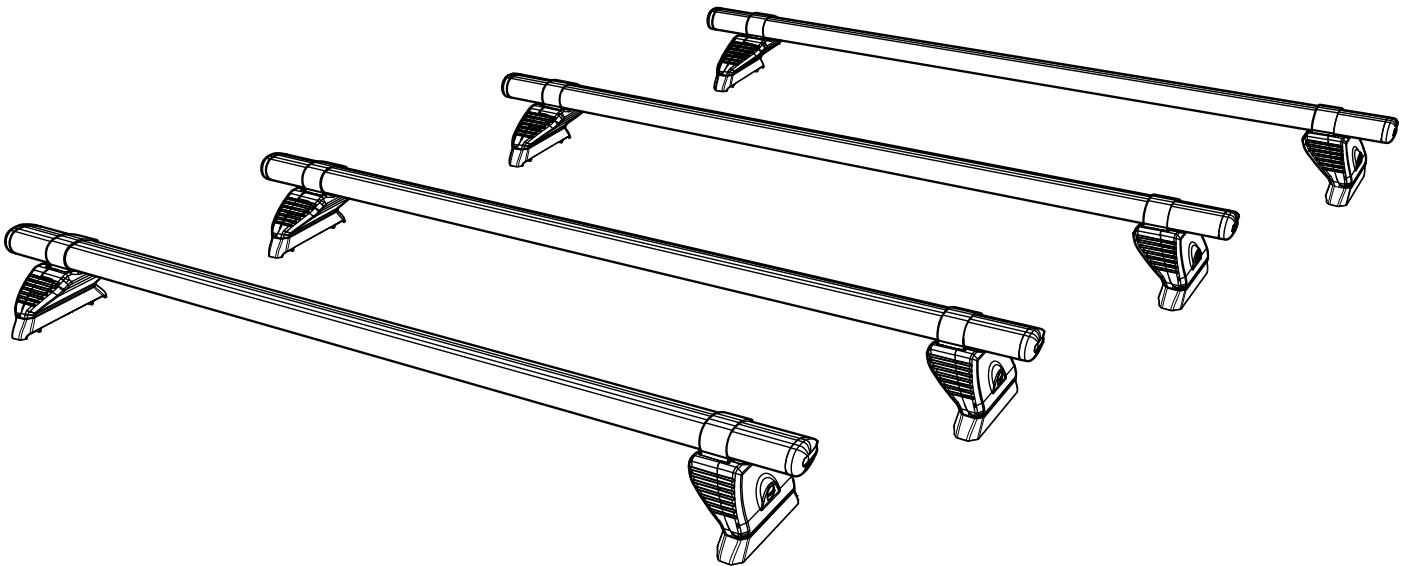


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

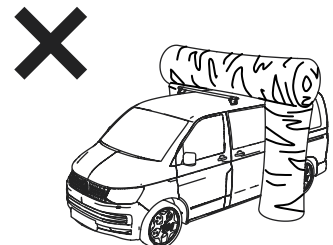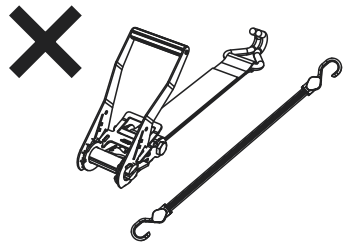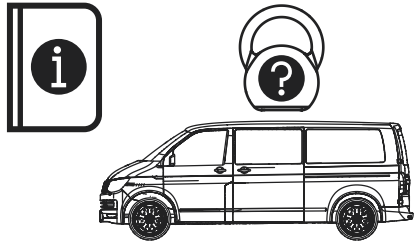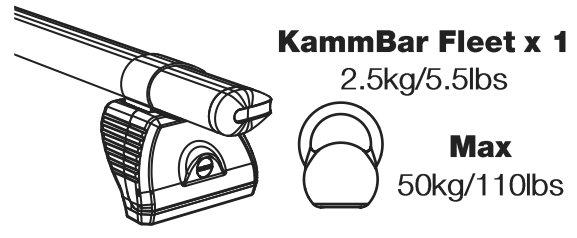


### KammBar Pro

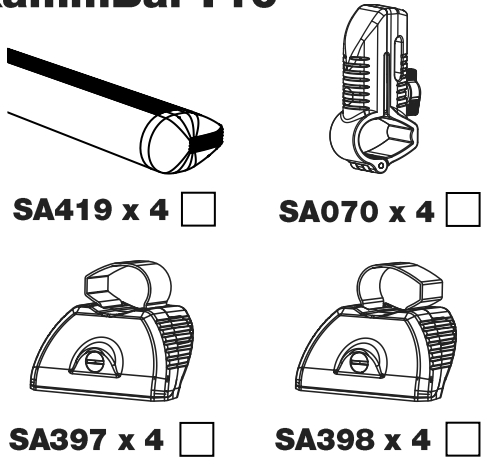


### KammBar Fleet

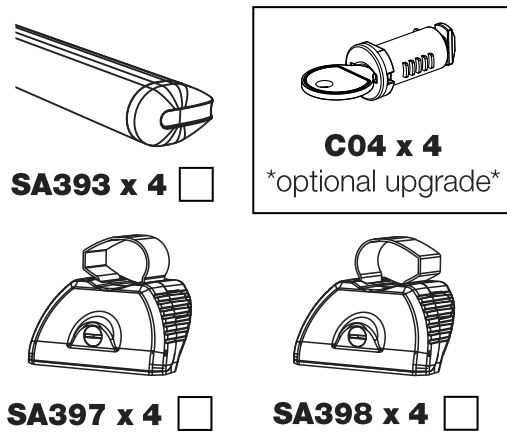


### Fitting Kit

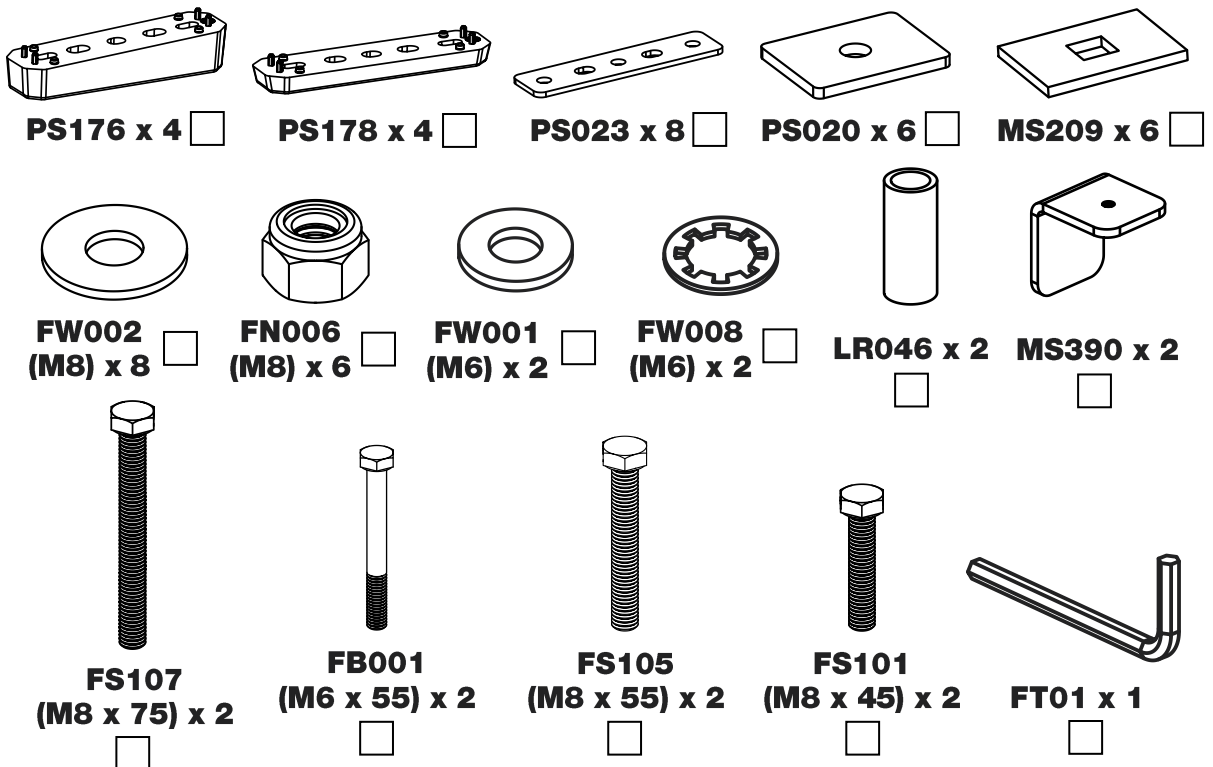


1.

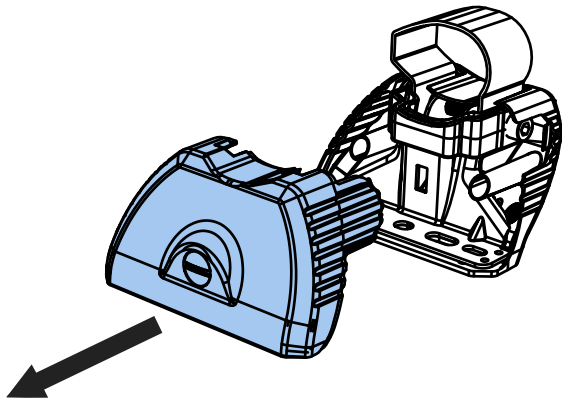

2.

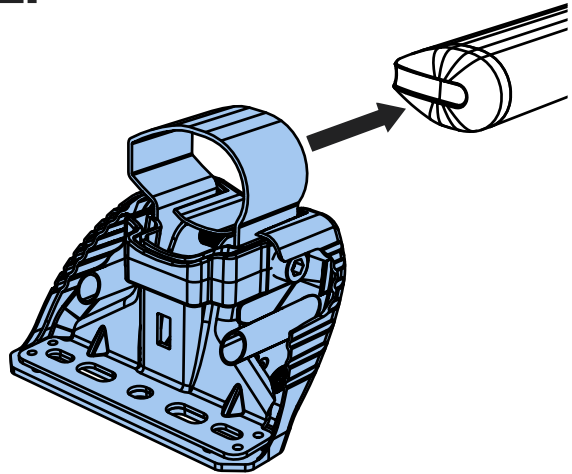


3.



SA397




PS176



SA397




PS178



SA397




PS178




SA397



PS176

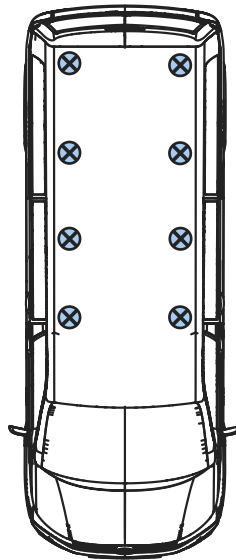


SA398



PS176



SA398



PS178




SA398



PS178





SA398





PS176















4.

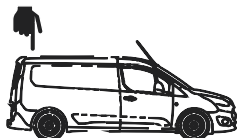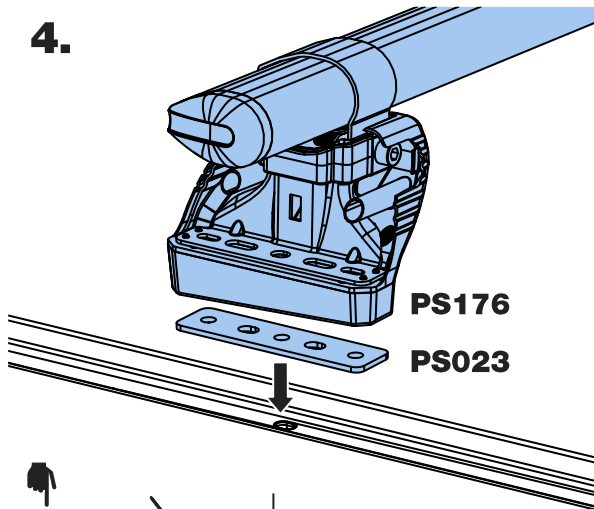


5.

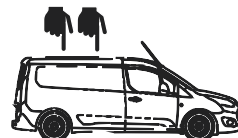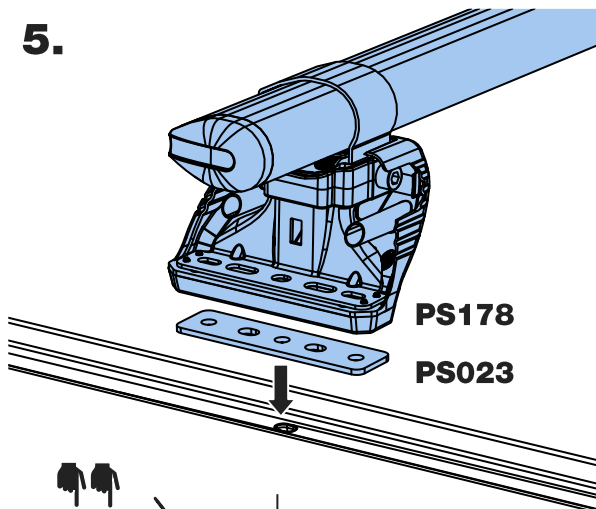

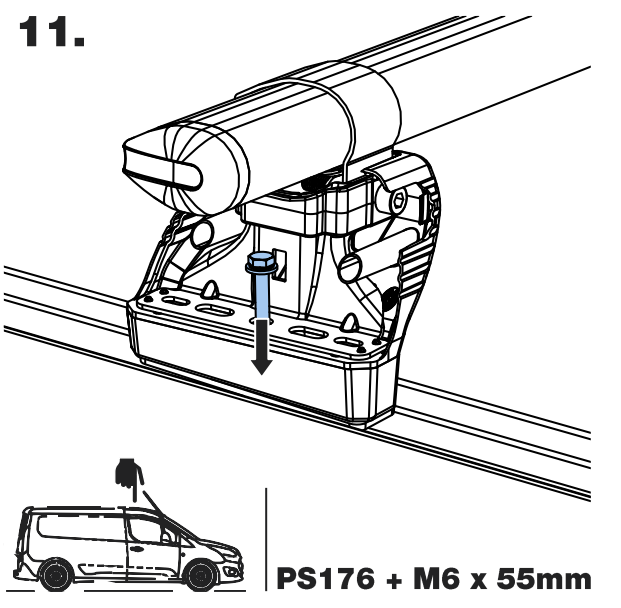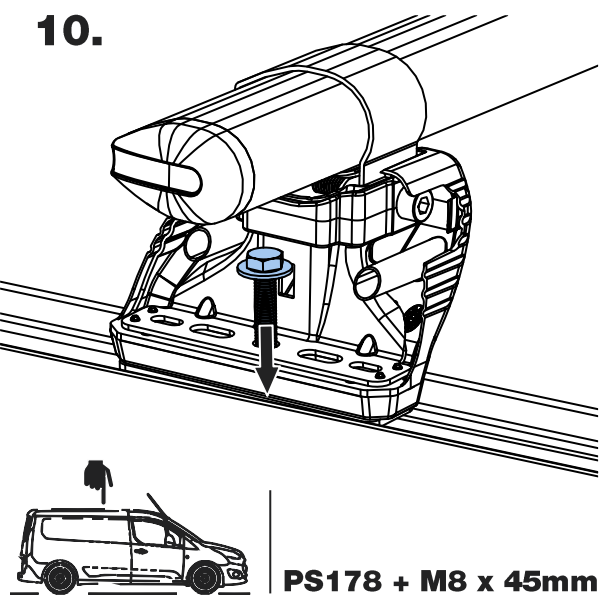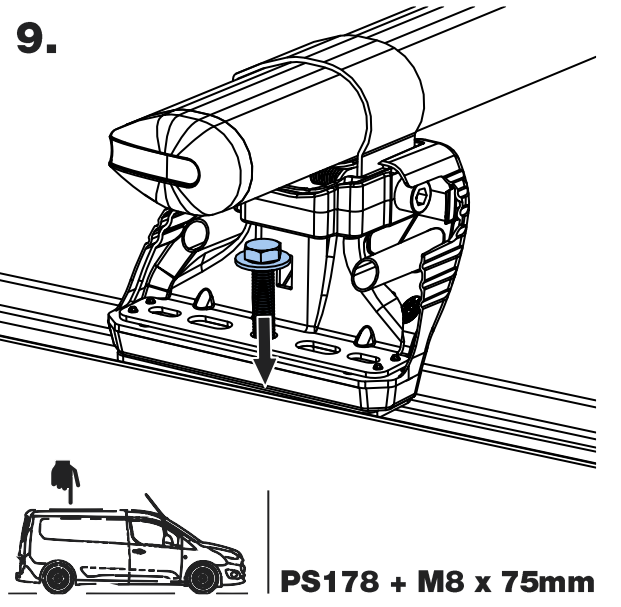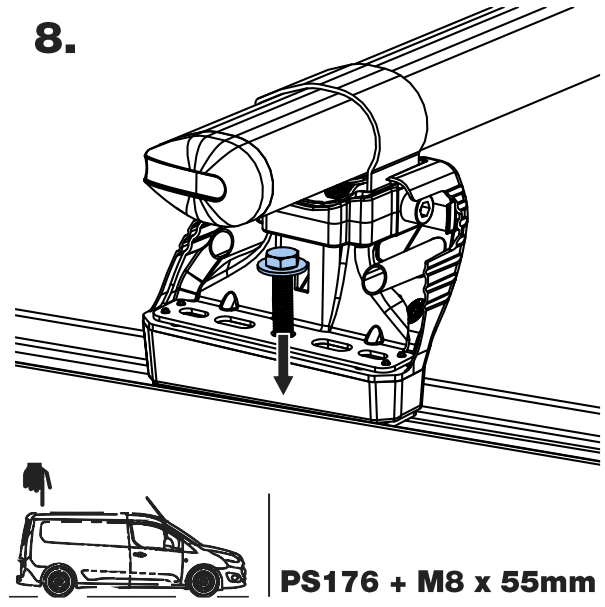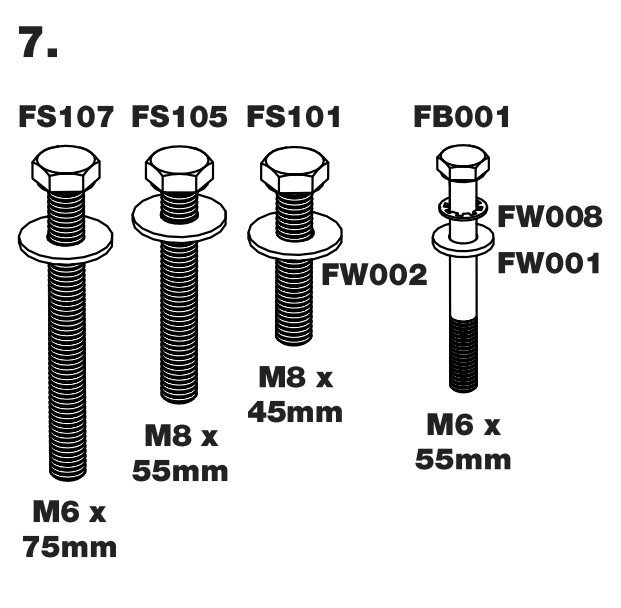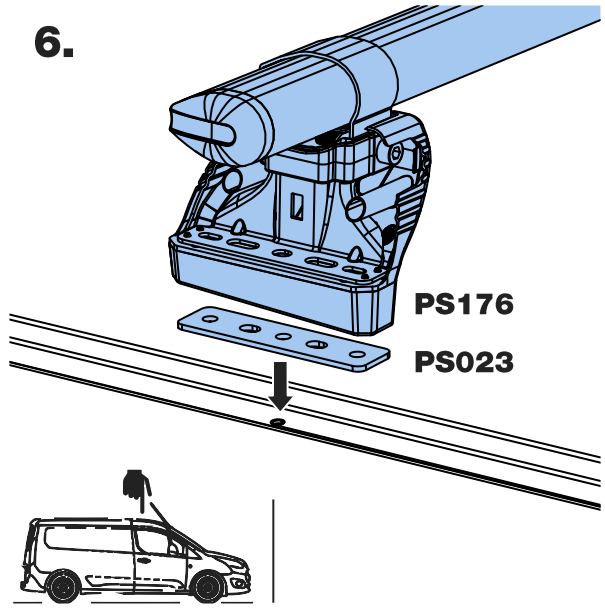

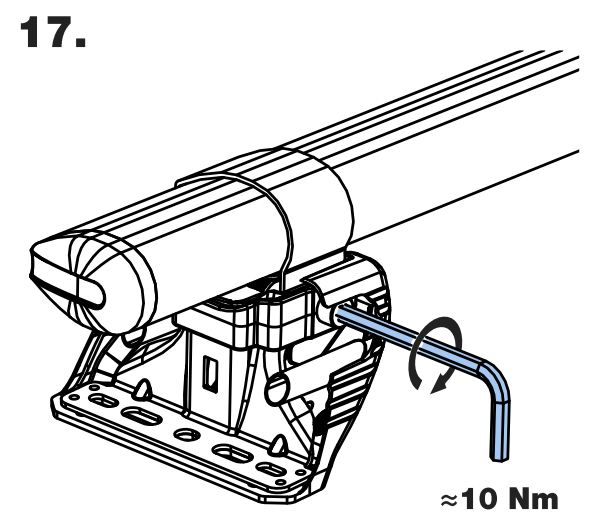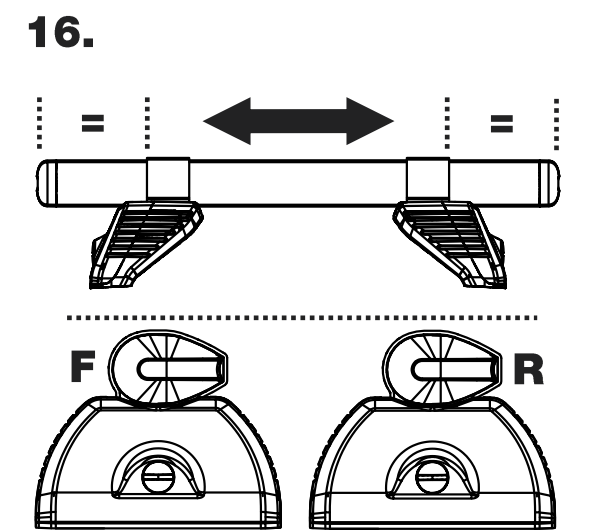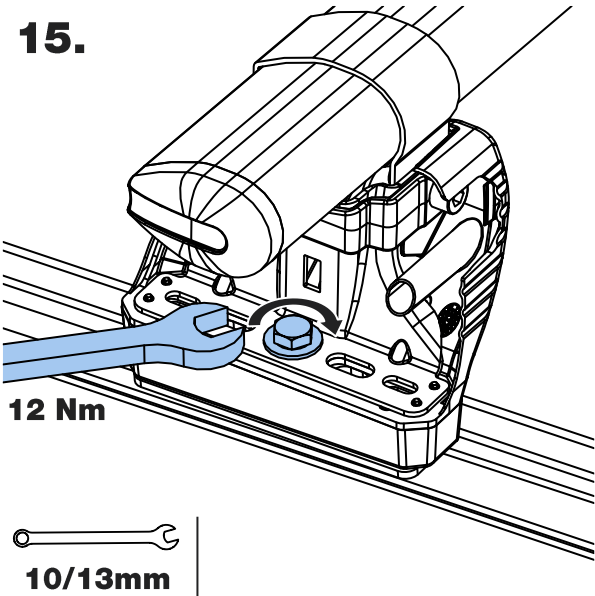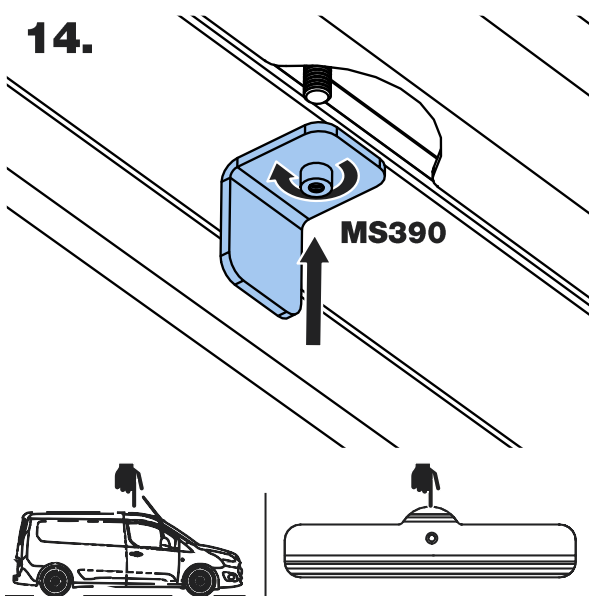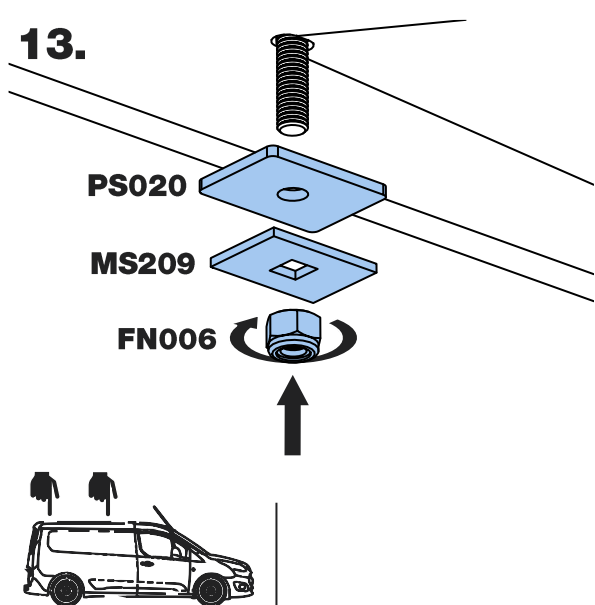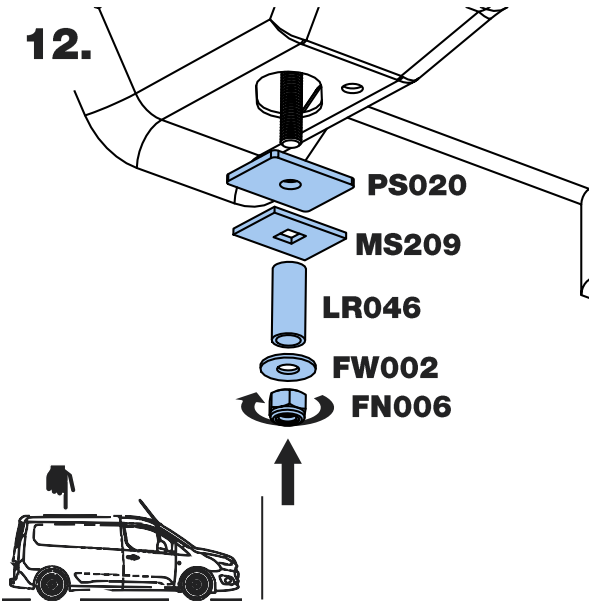

18.

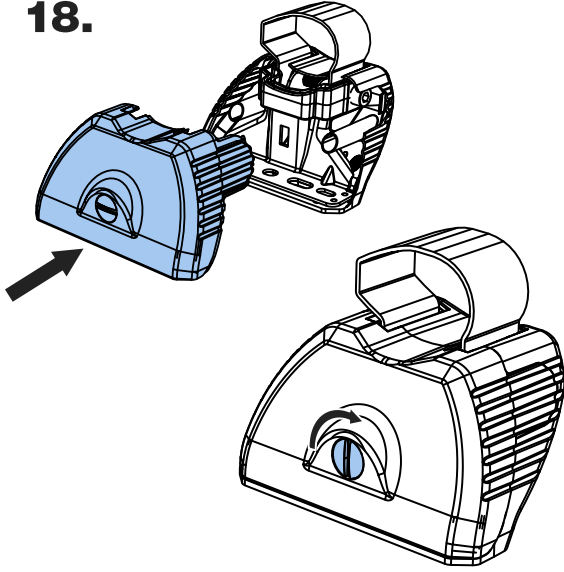

19.

