






TB3PR/FL KammBar

Instructions


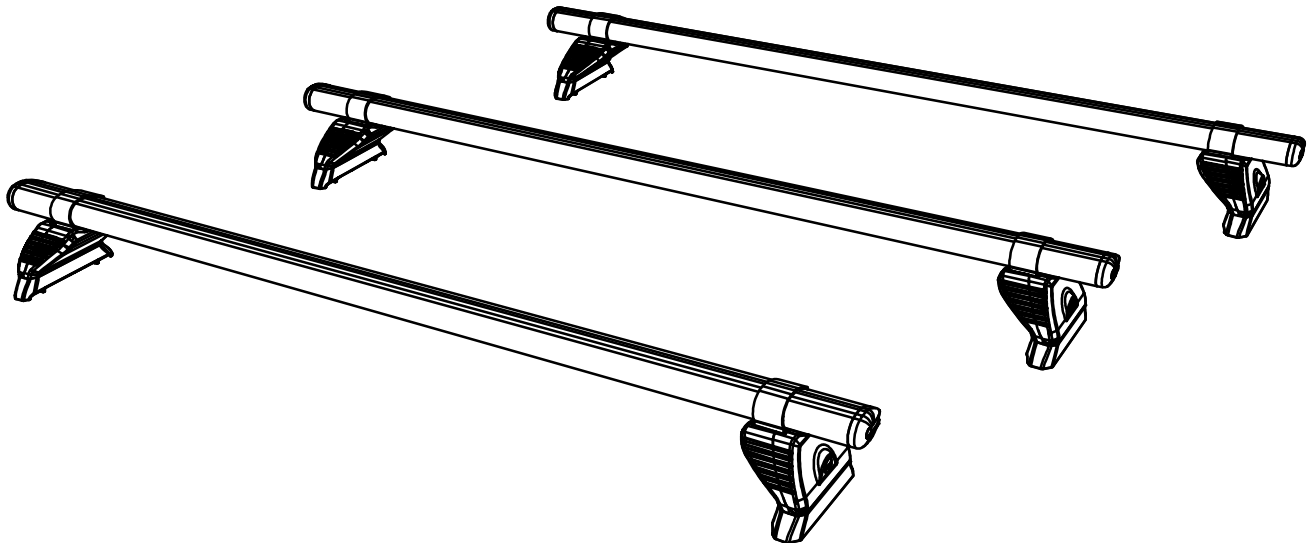


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

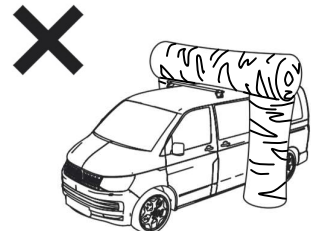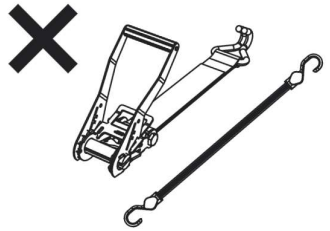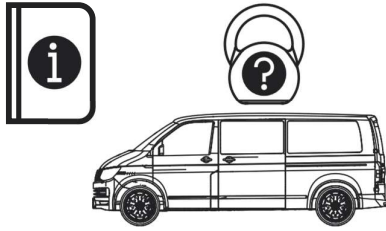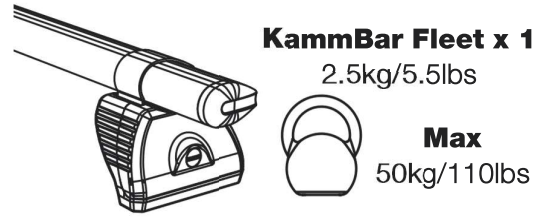


KammBar Pro

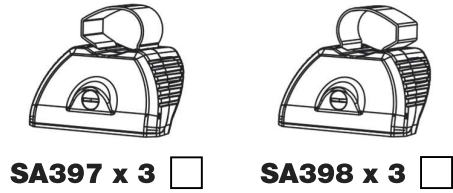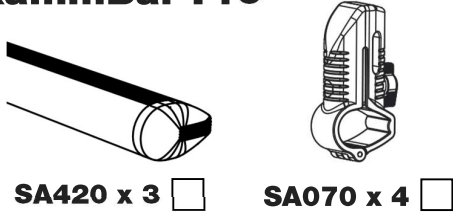


KammBar Fleet

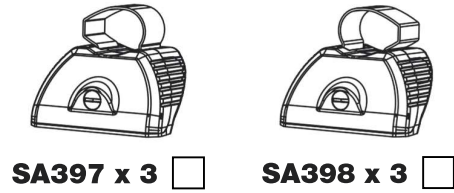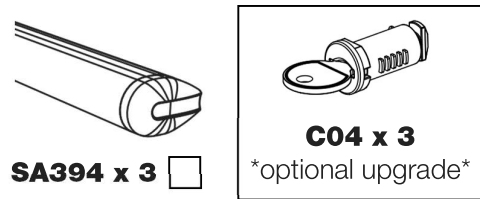


Fitting Kit

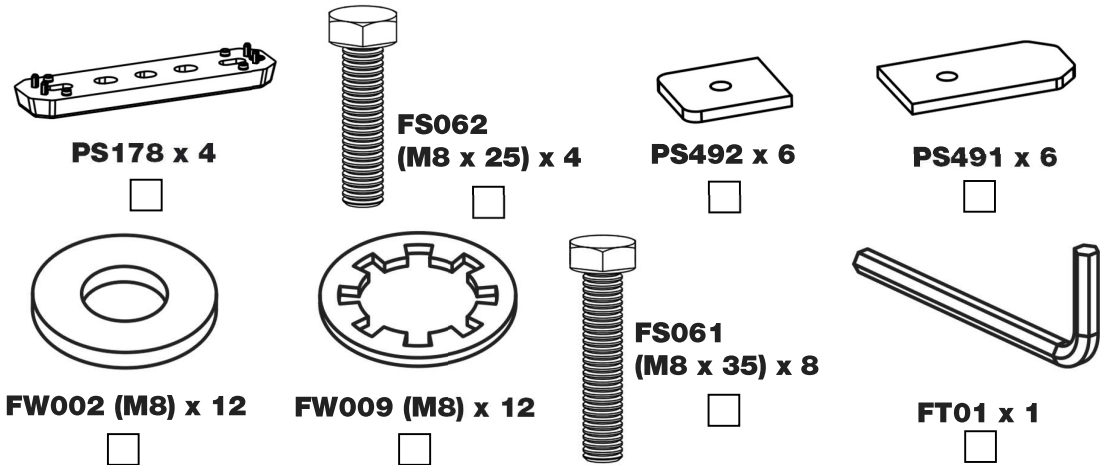


1.

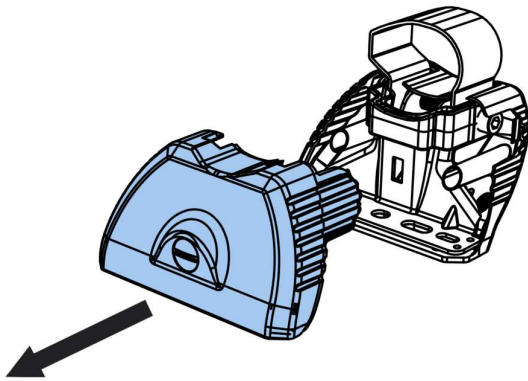

2.

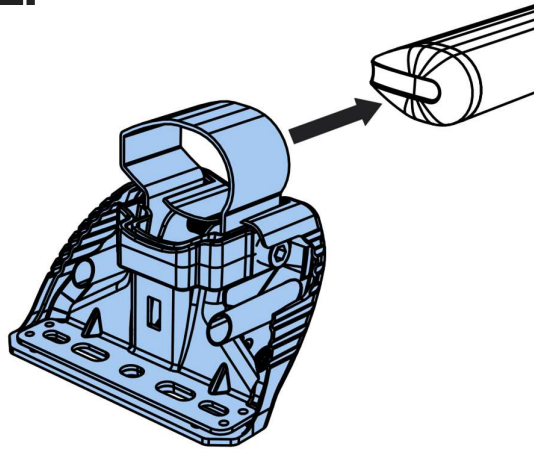


3.

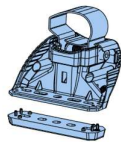


SA397
PS178




SA397

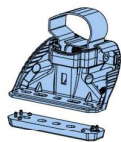


SA397
PS178

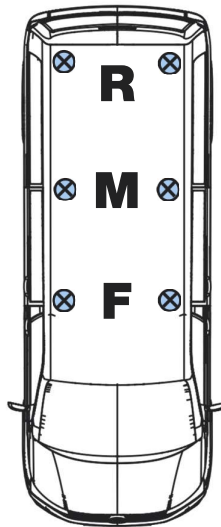

SA398
PS178

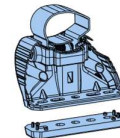


SA398




SA398
PS178









4.

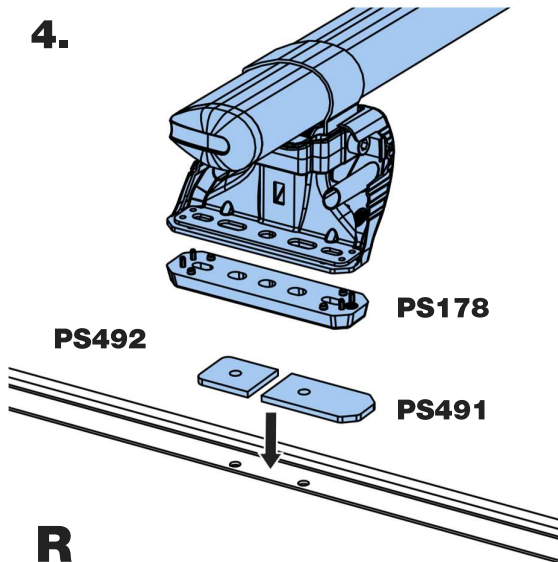


5.

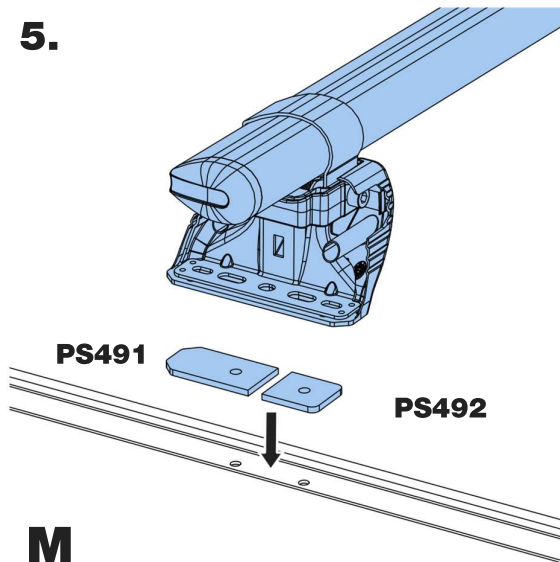

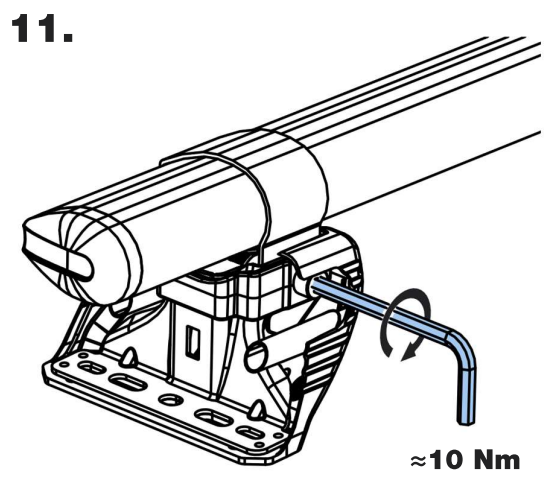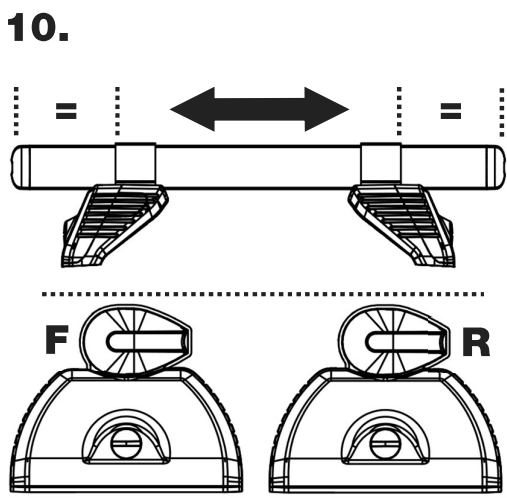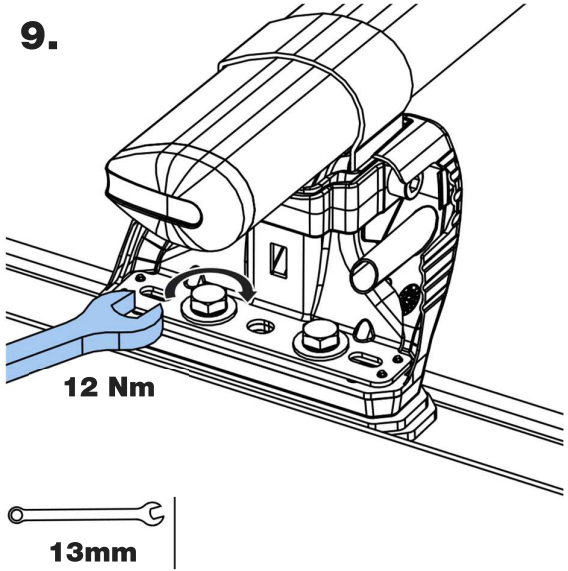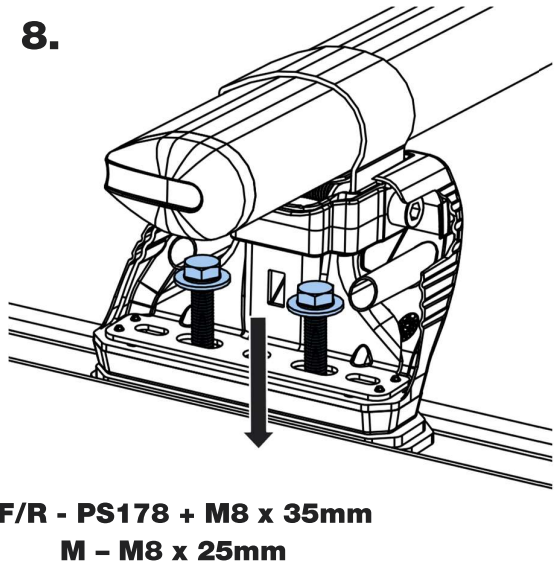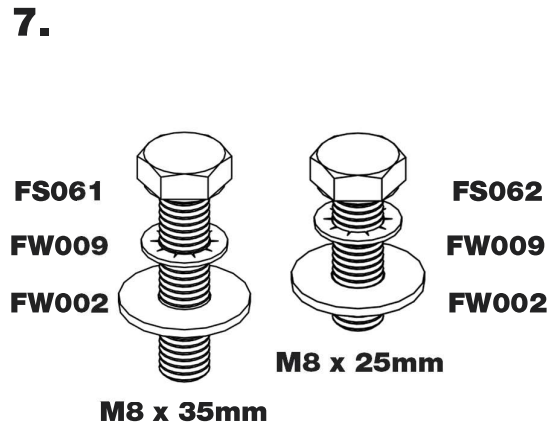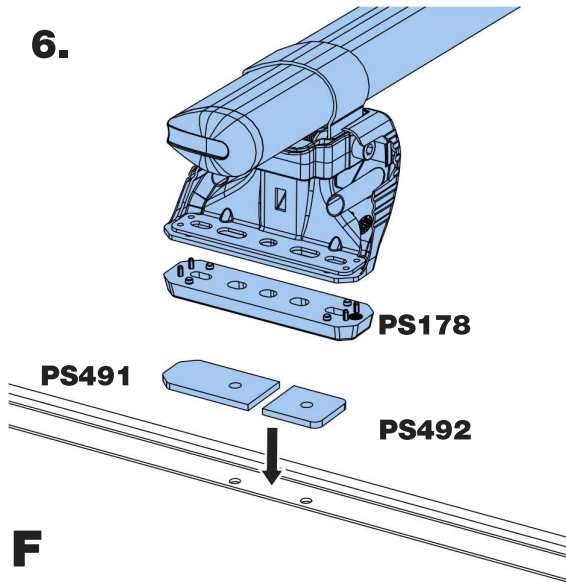

12.

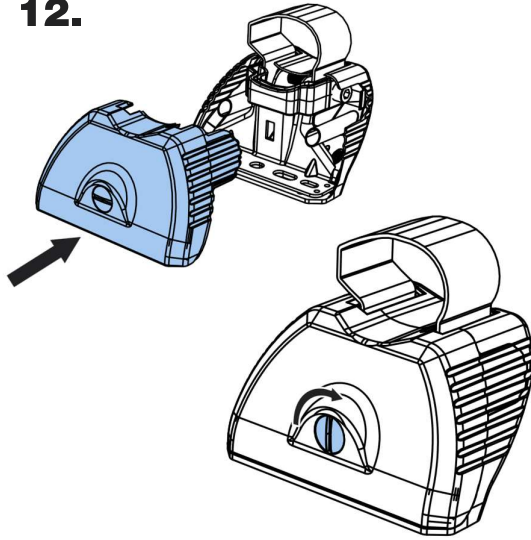

13.

