







# ID2PR/FL KammBar

## Instructions

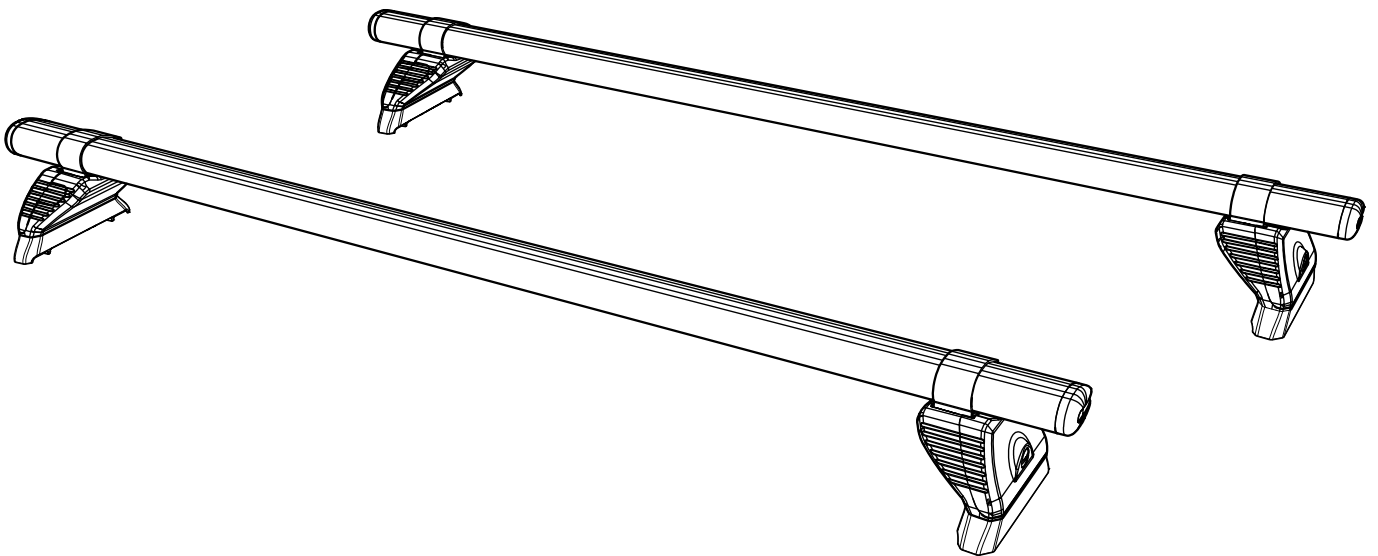


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

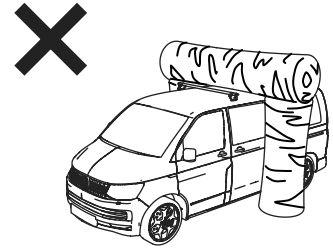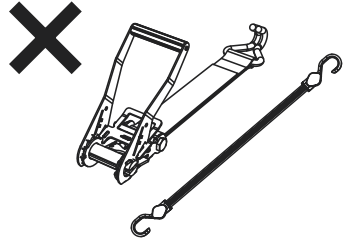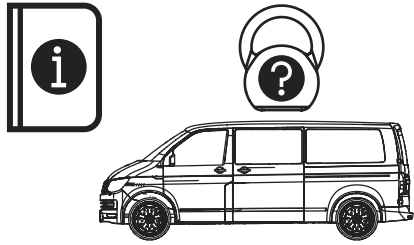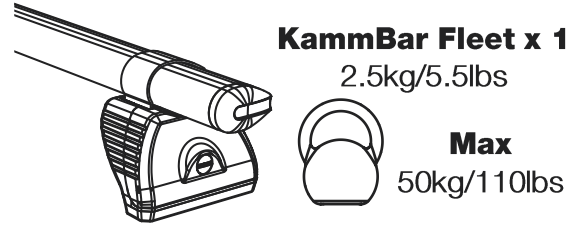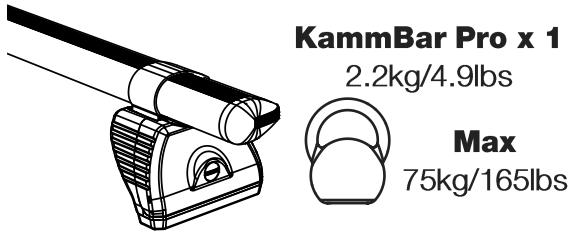


### KammBar Pro

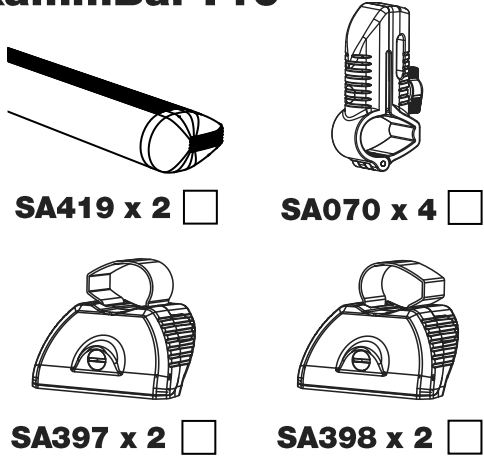


### KammBar Fleet

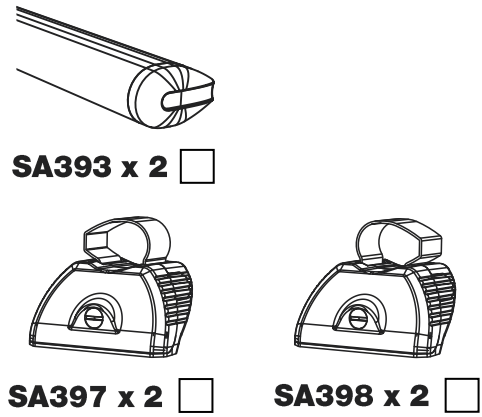


### Fitting Kit

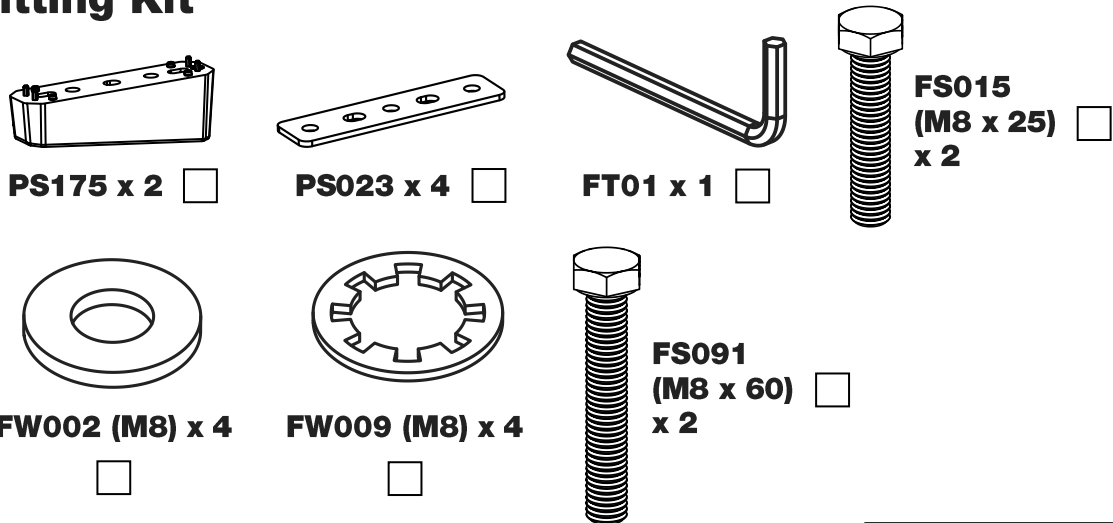


1.

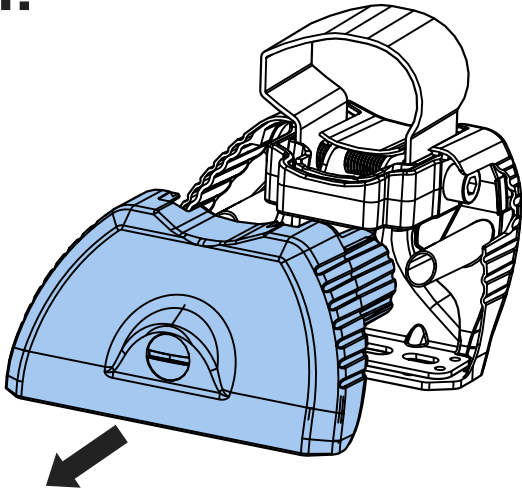


2.

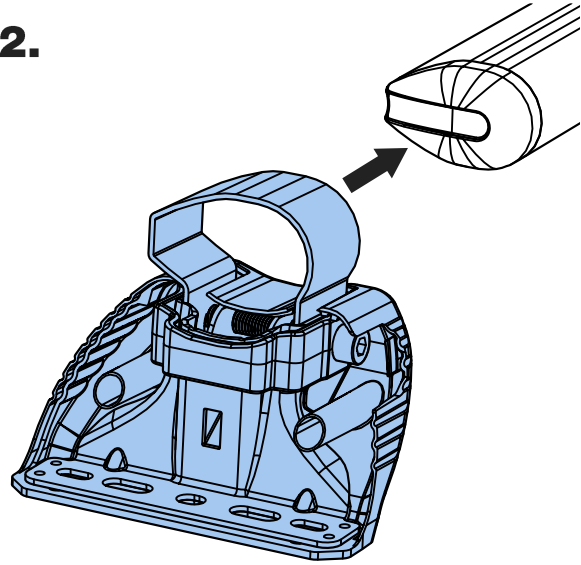



3.



SA397  
PS175

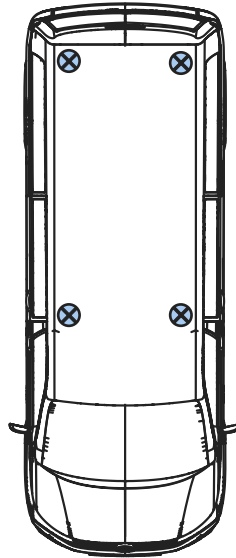


SA398  
PS175




SA397


SA398




4.

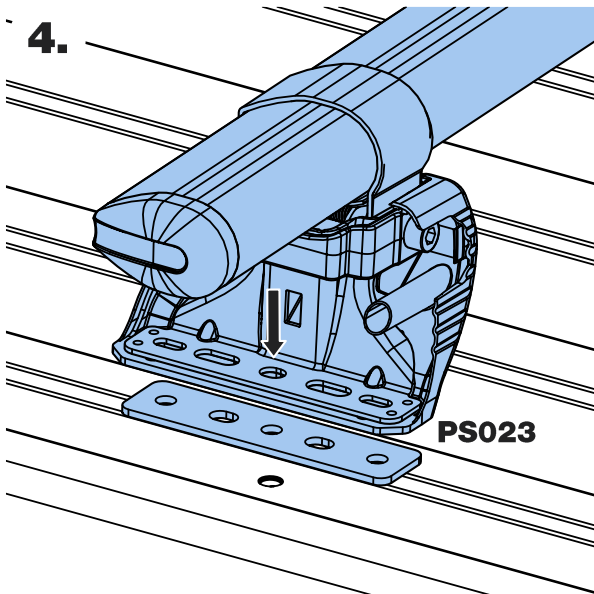


5.

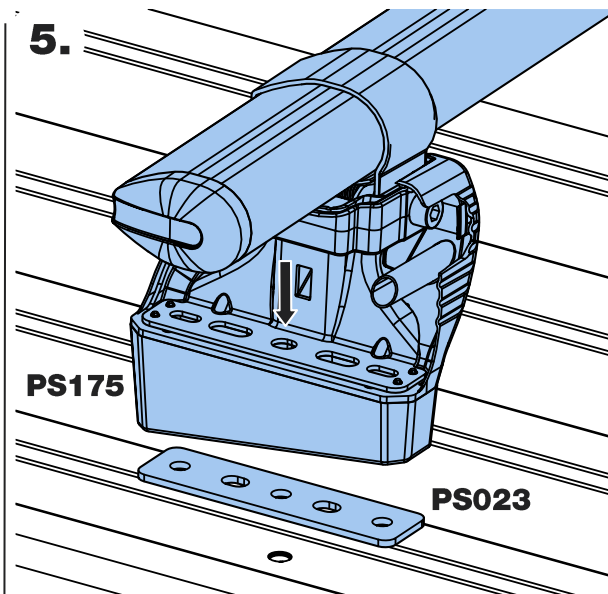


6.

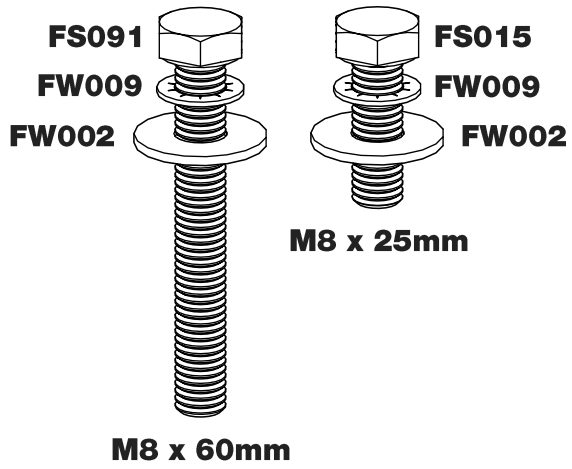


7.

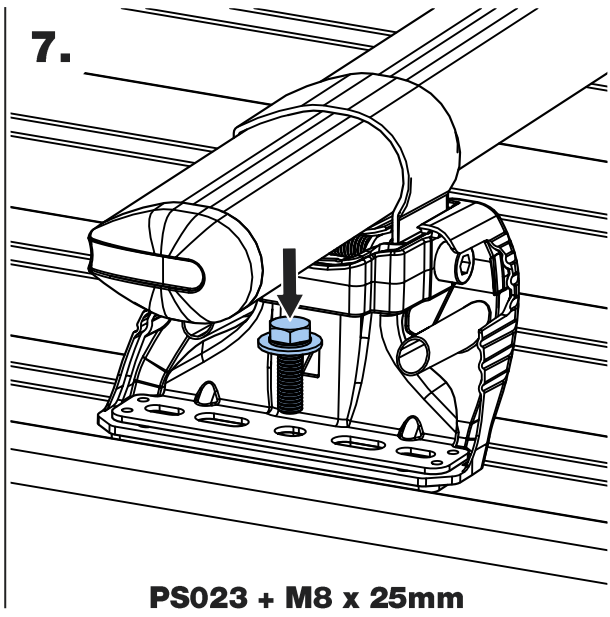


8.

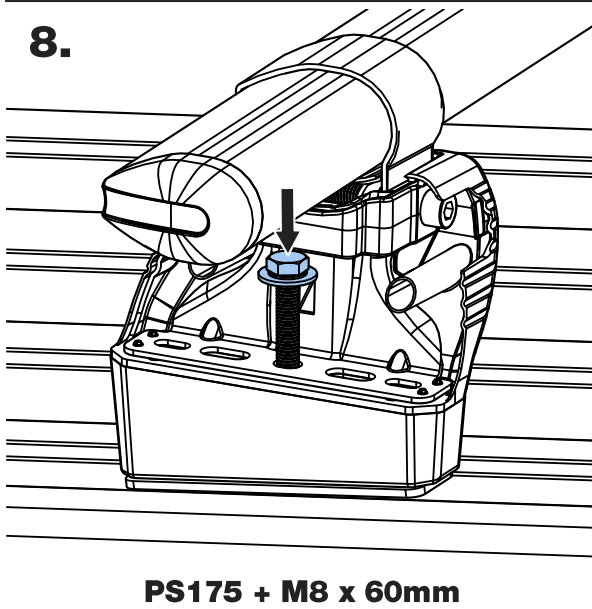


9.

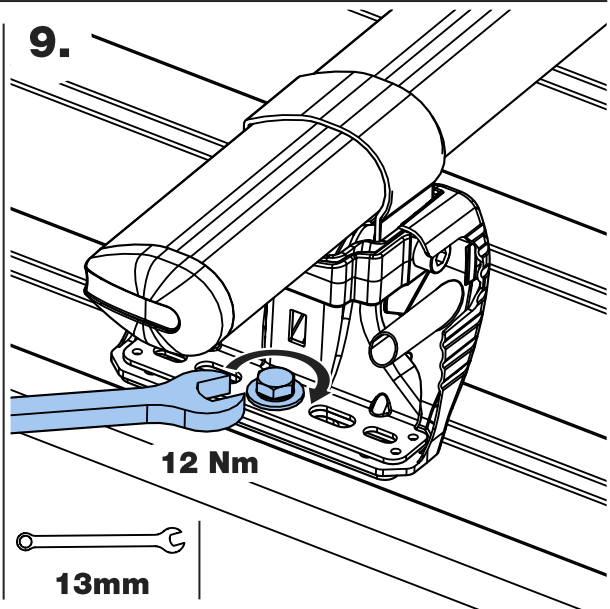


10.

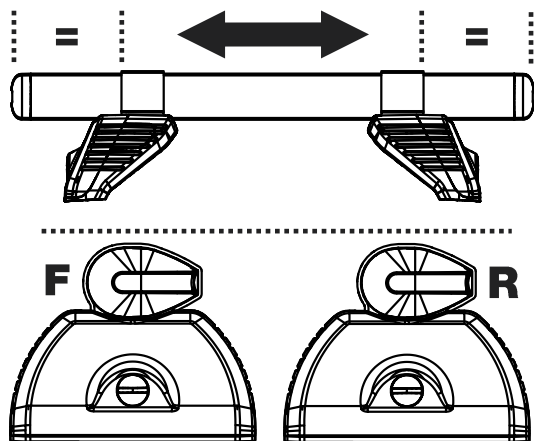

11.

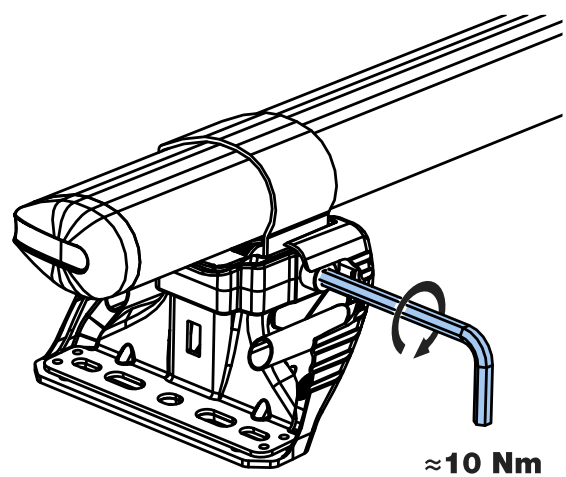

**12.**

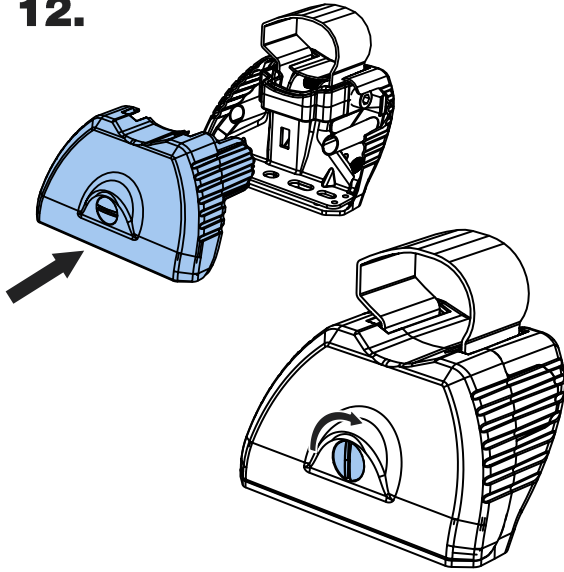

**13.**

