







ID3PR/FL KammBar

Instructions


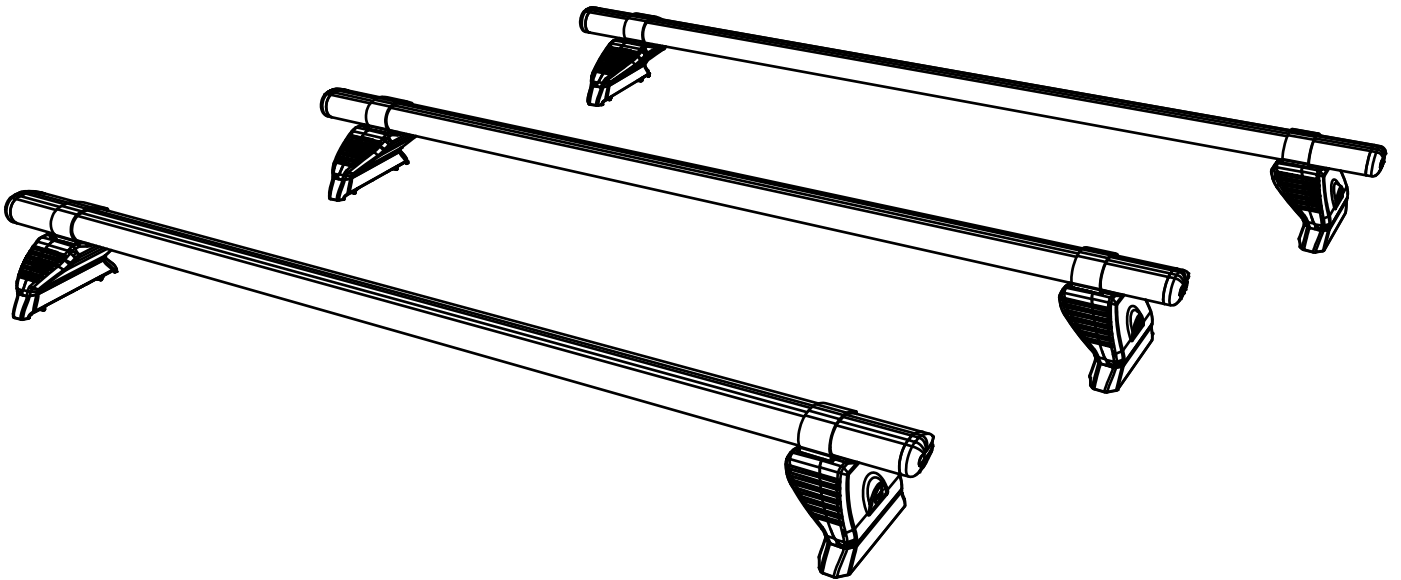


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

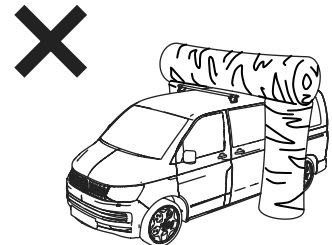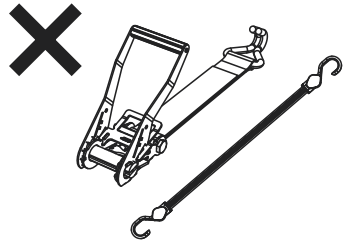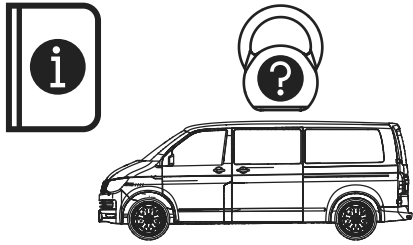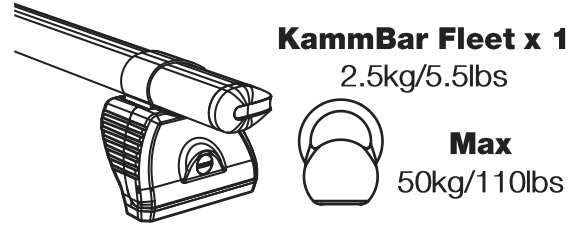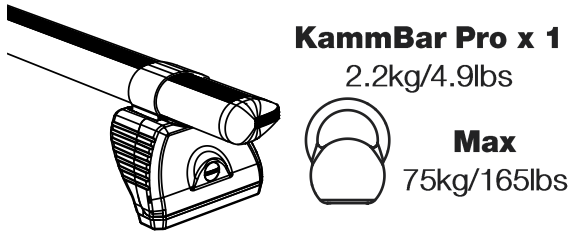





KammBar Pro

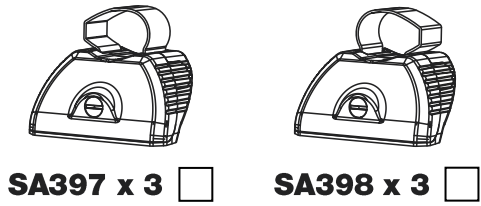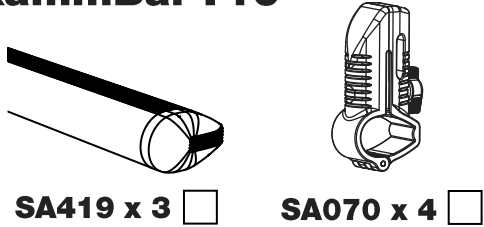


KammBar Fleet

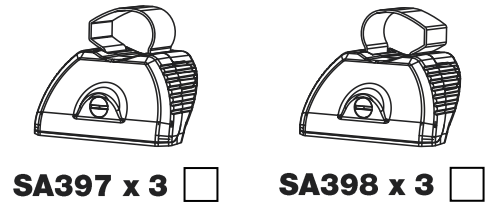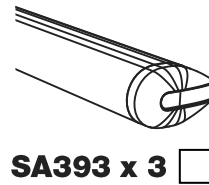


Fitting Kit

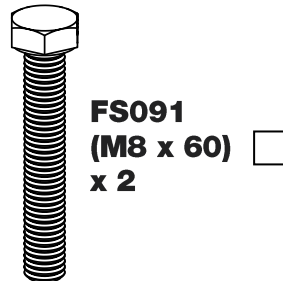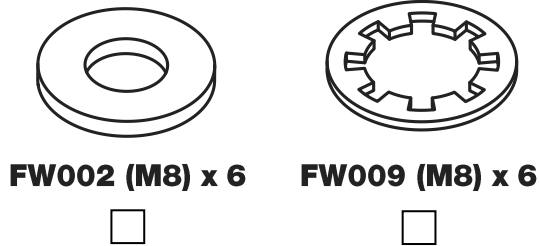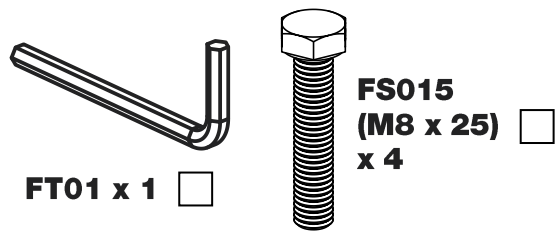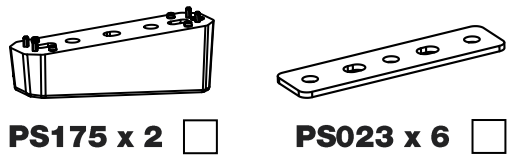


1.

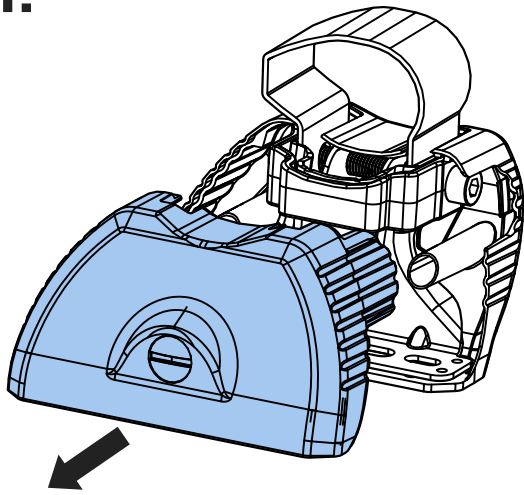

2.

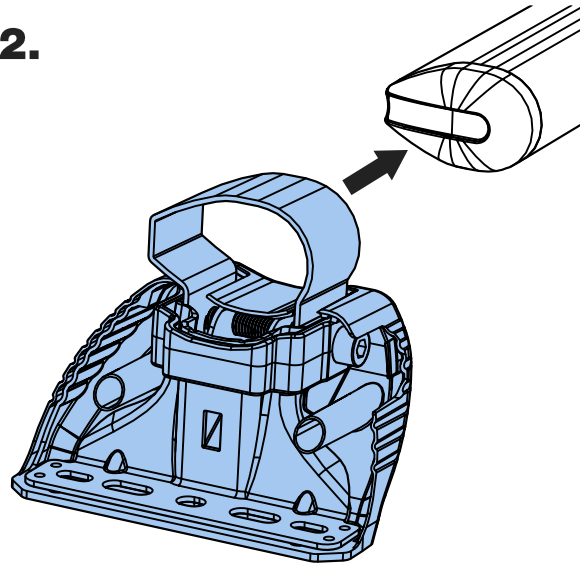

3.




SA397
PS175




SA397




SA397

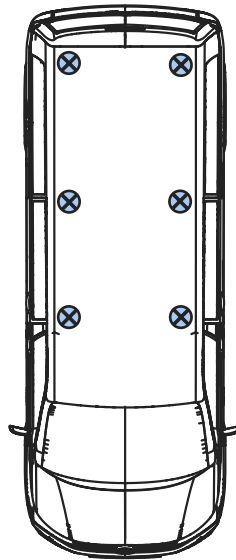


SA398
PS175




SA398




SA398




4.

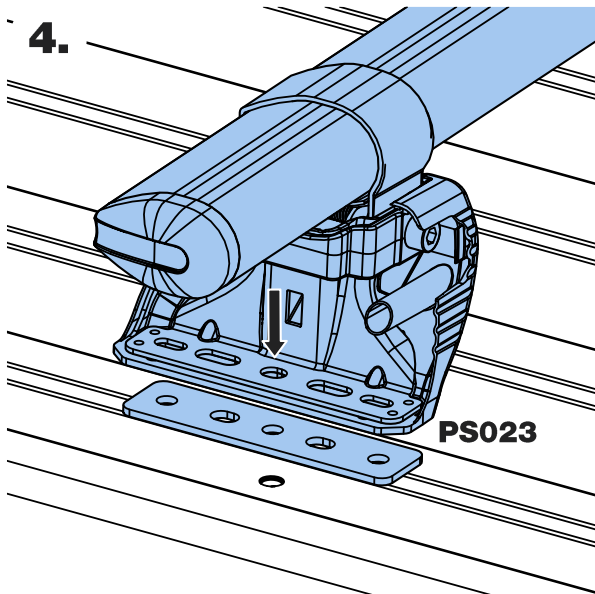


5.

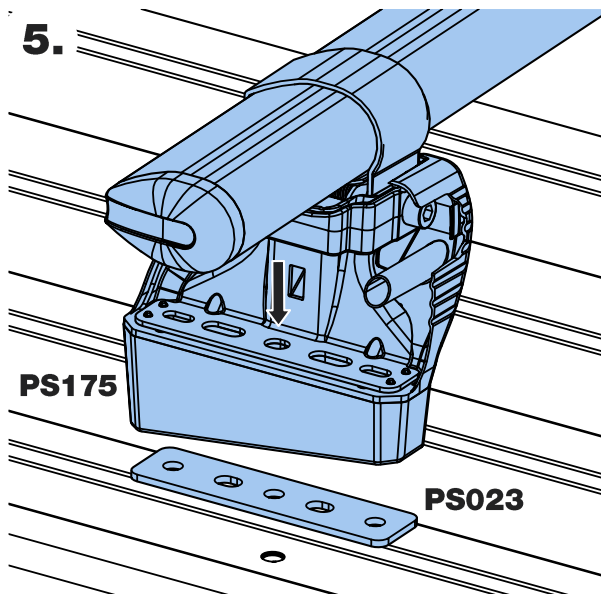


6.

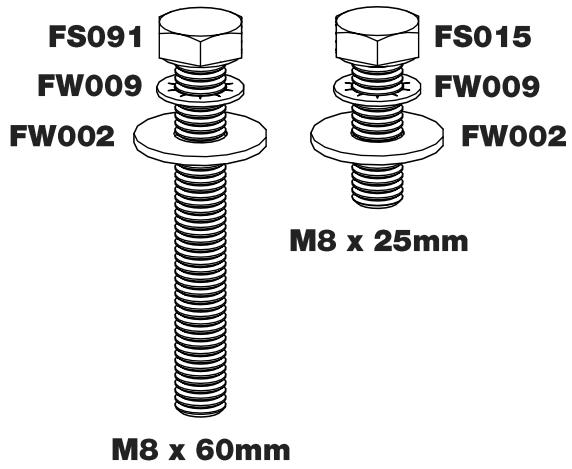


7.

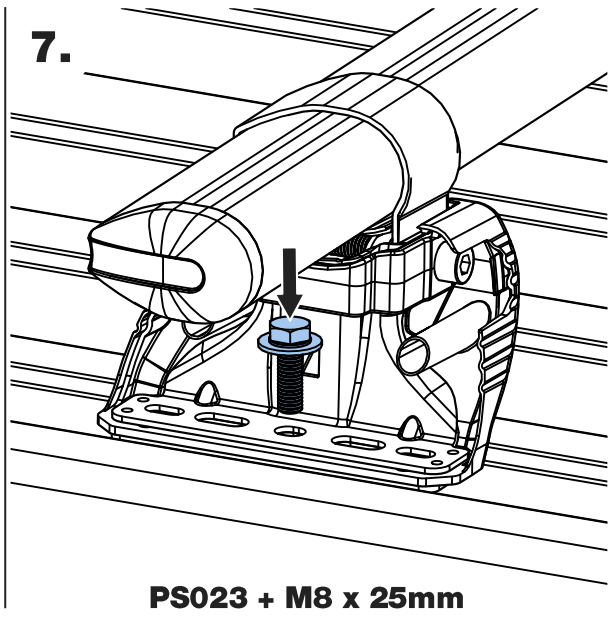


8.

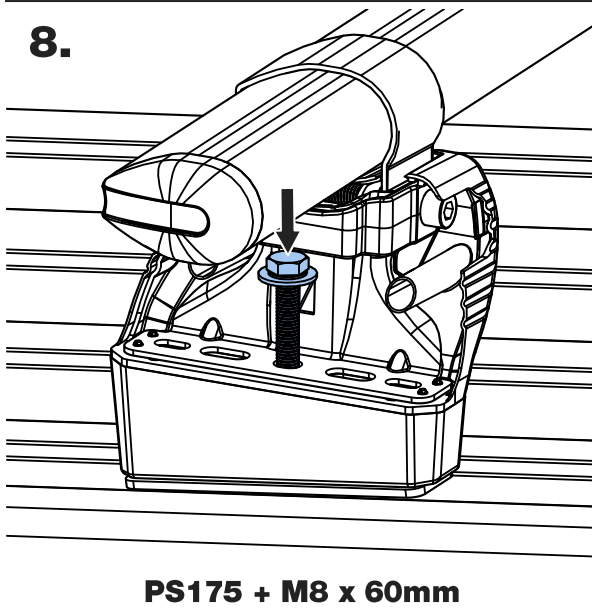


9.

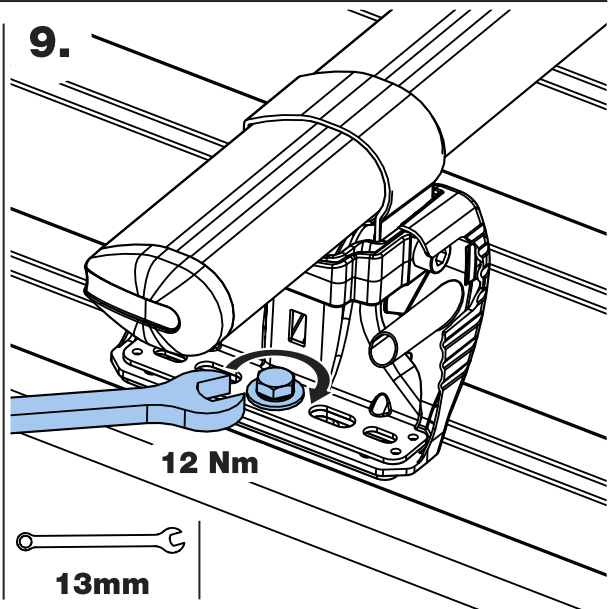


10.

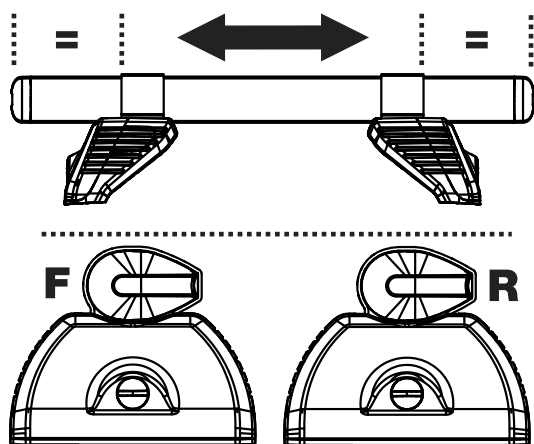

11.

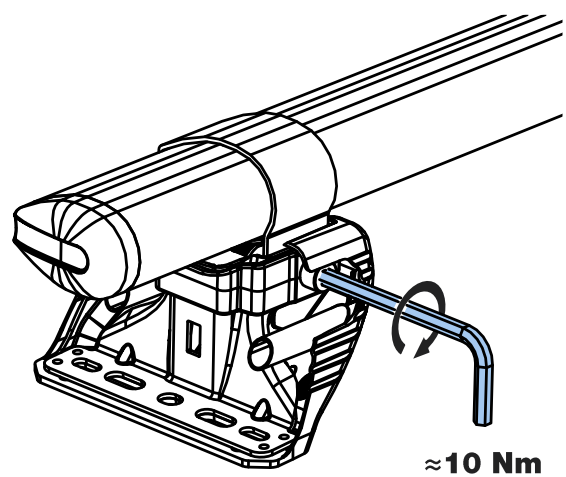

12.

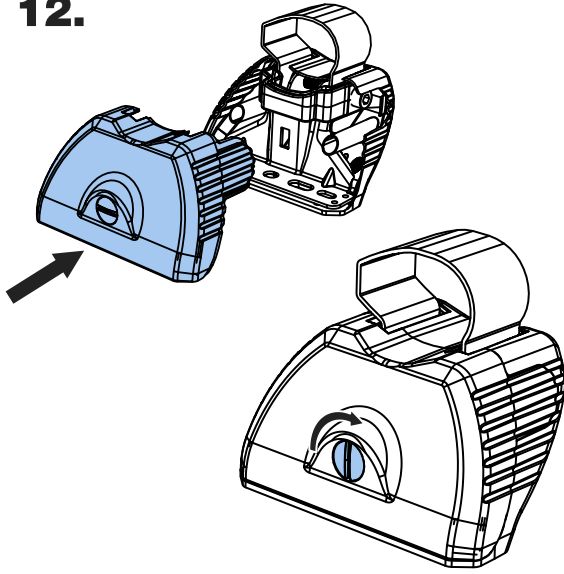

13.

