






QA3PR/FL KammBar

Instructions


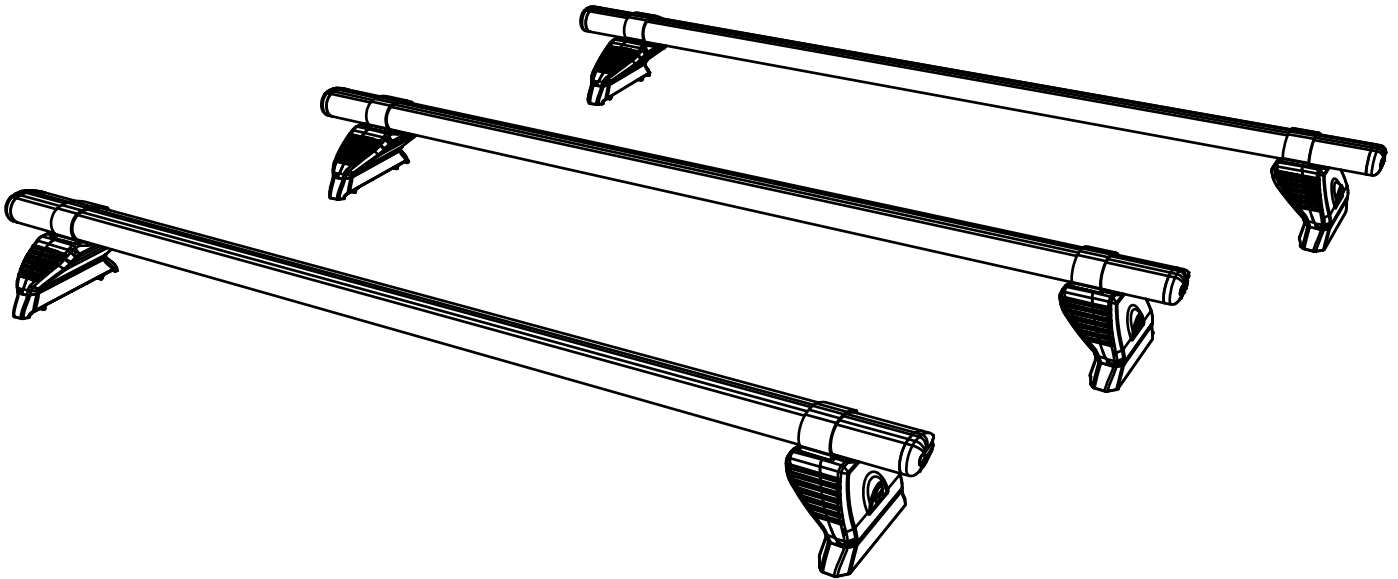


CITY CRASH (✓)



According to ISO/ PAS 11154:2006

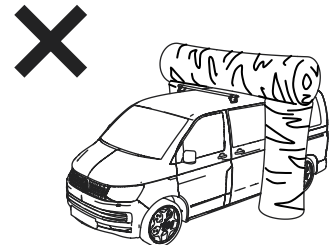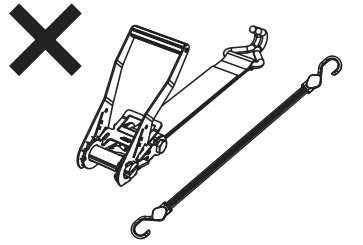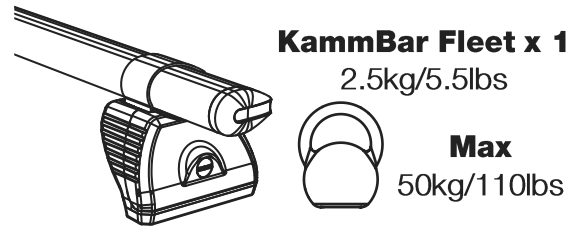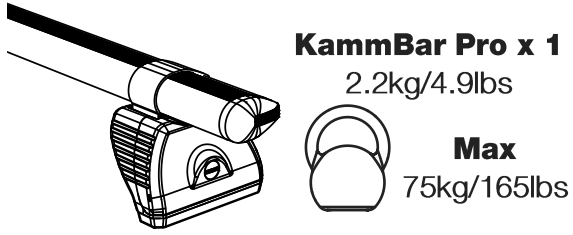




KammBar Pro

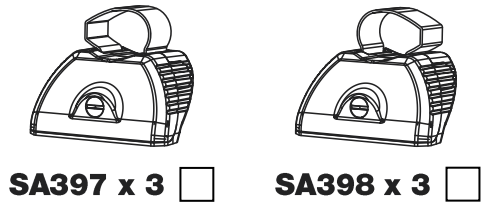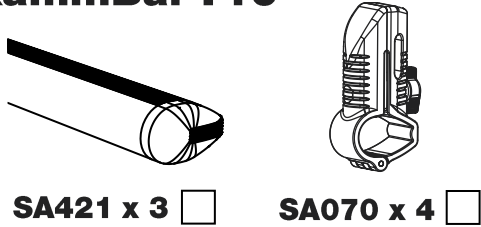


KammBar Fleet

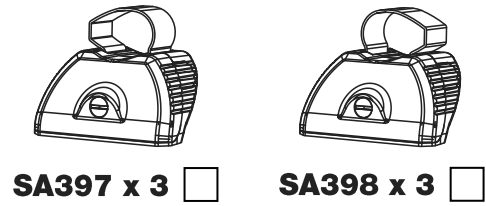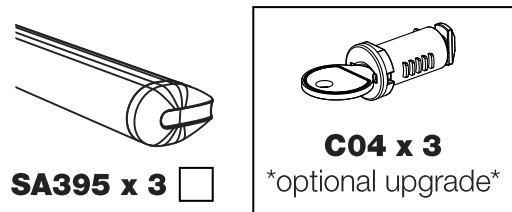


Fitting Kit

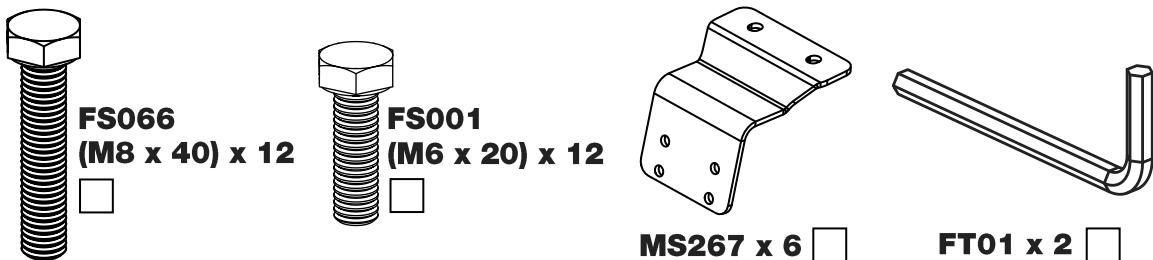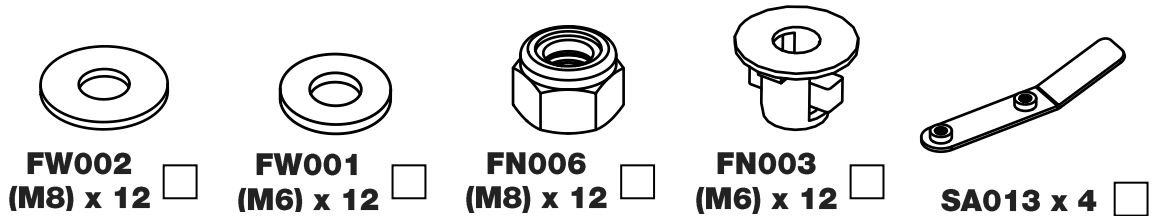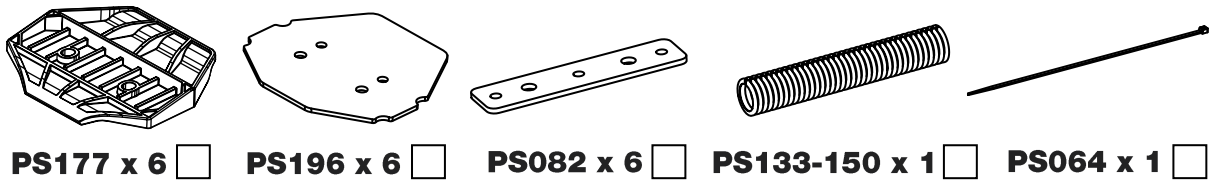

1.

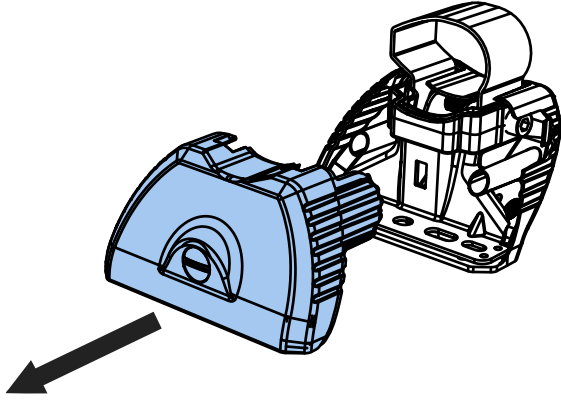

2.

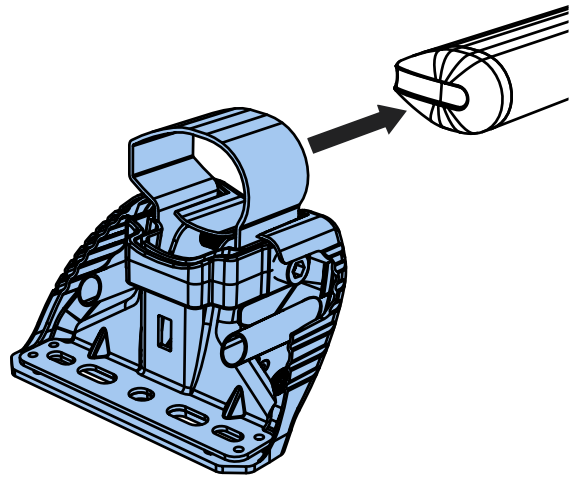

3.




SA397
PS177




SA397
PS177




SA397
PS177

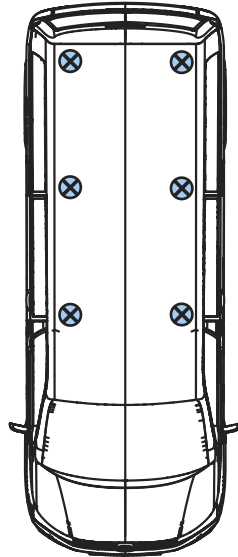


SA398
PS177




SA398
PS177




SA398
PS177















4.






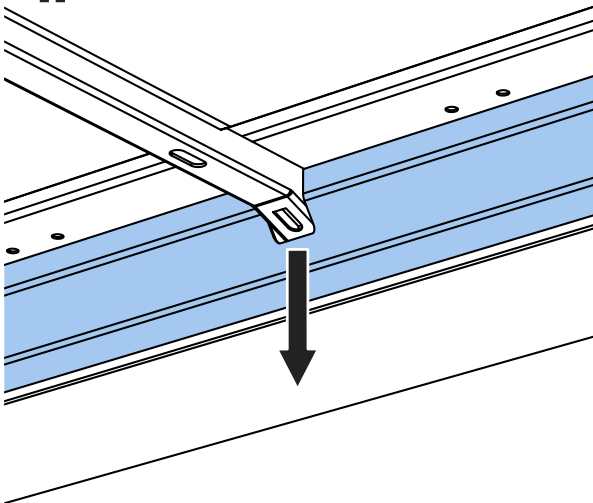


5.

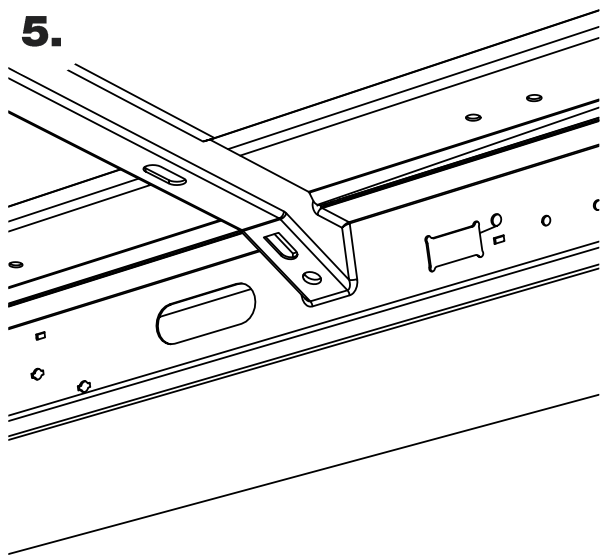


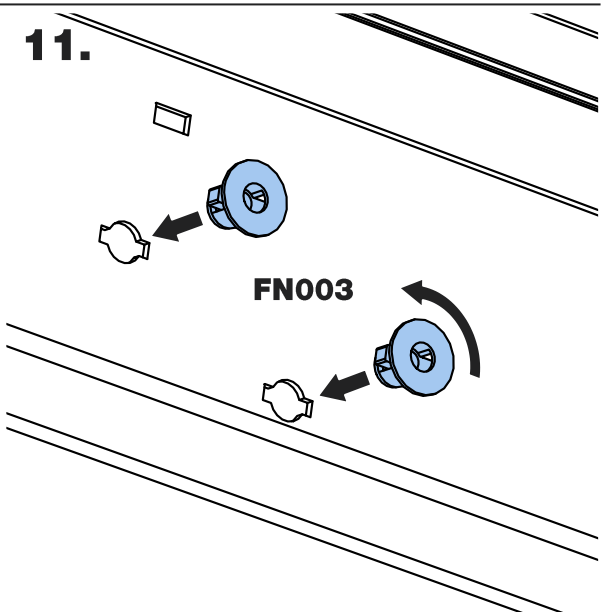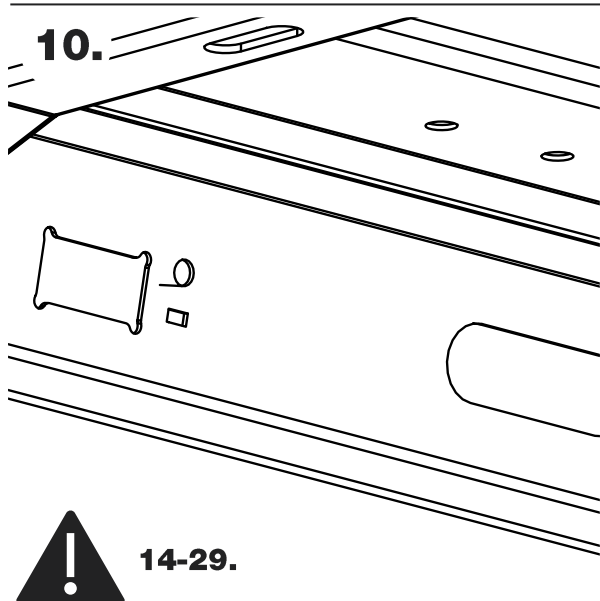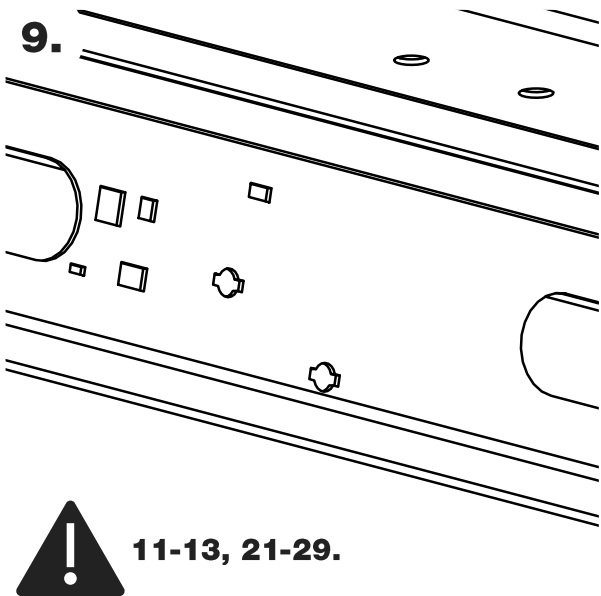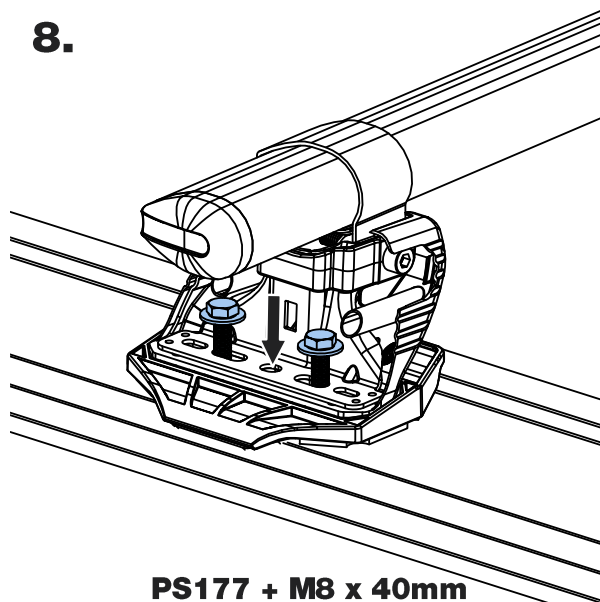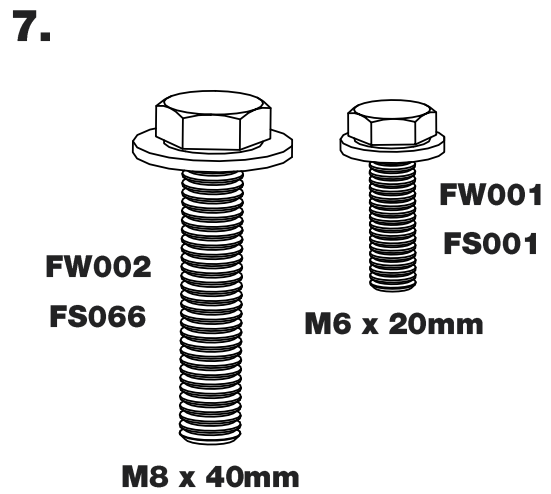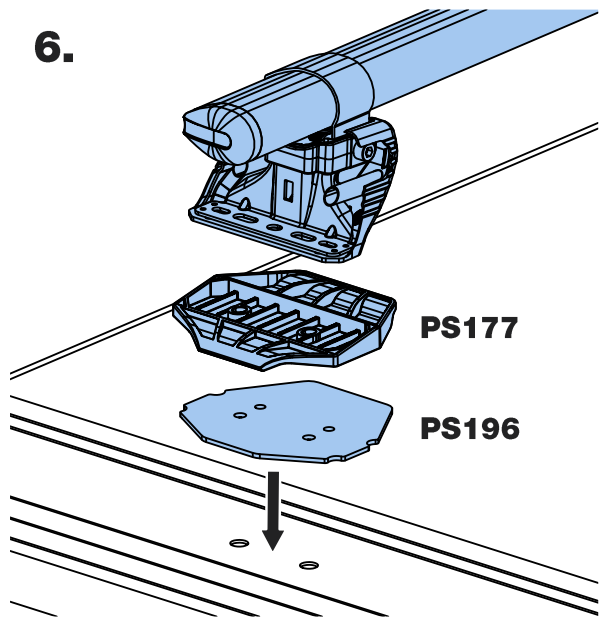

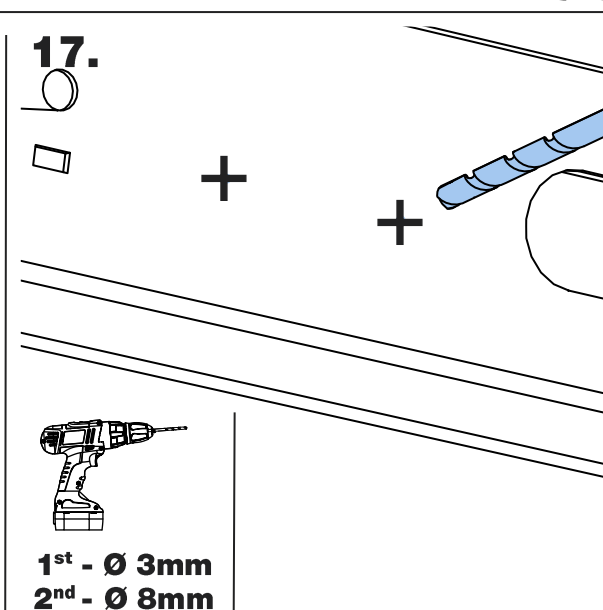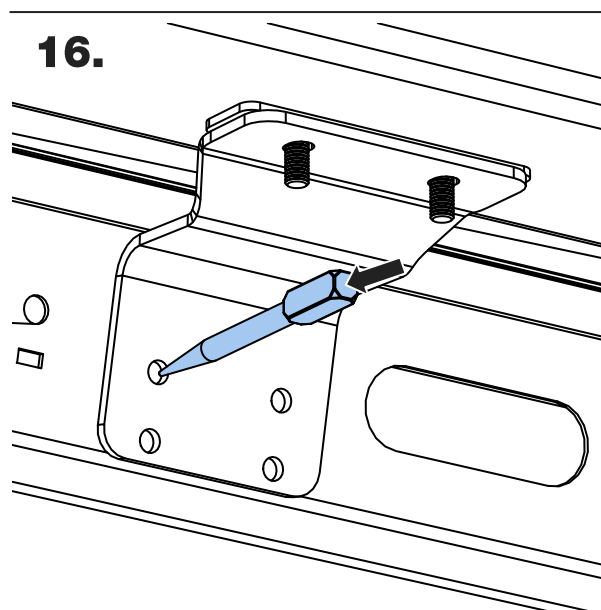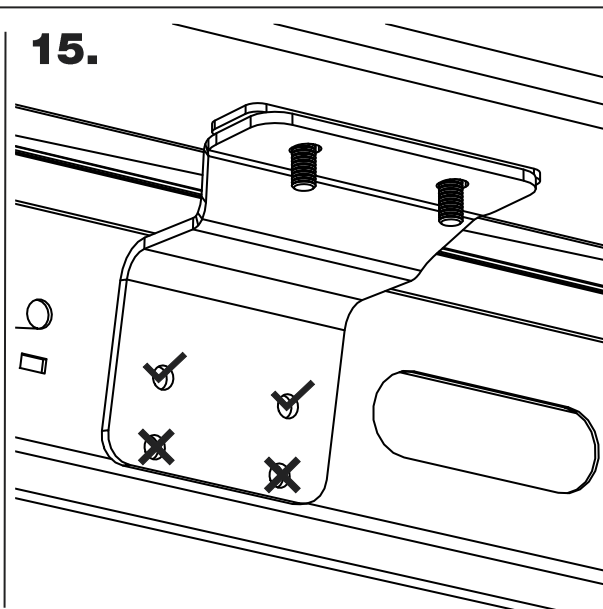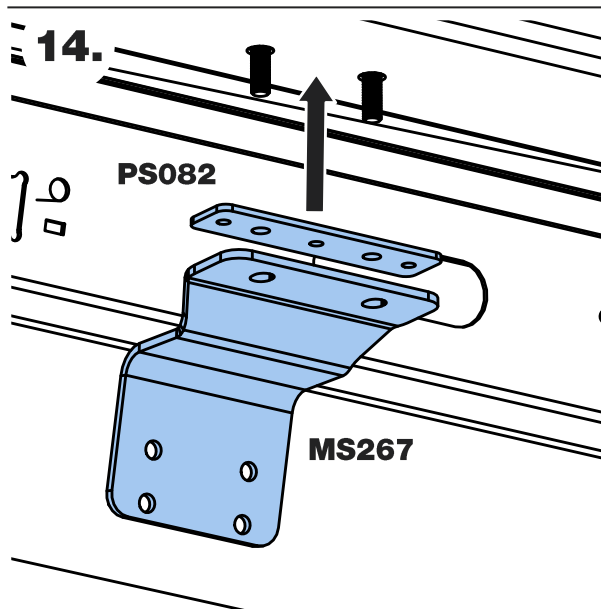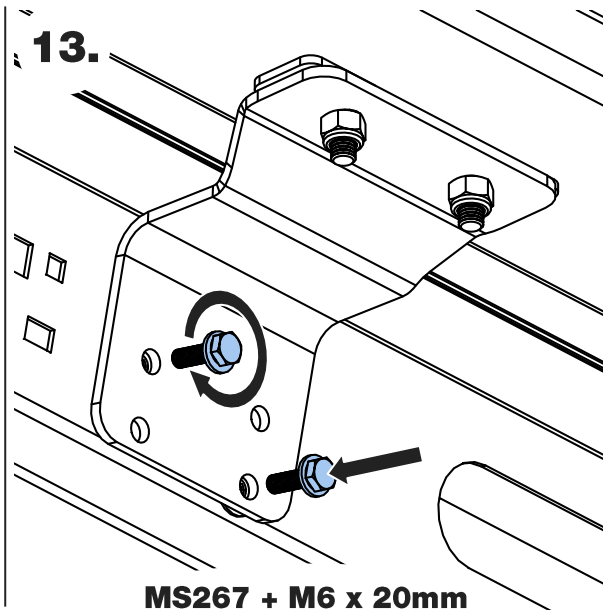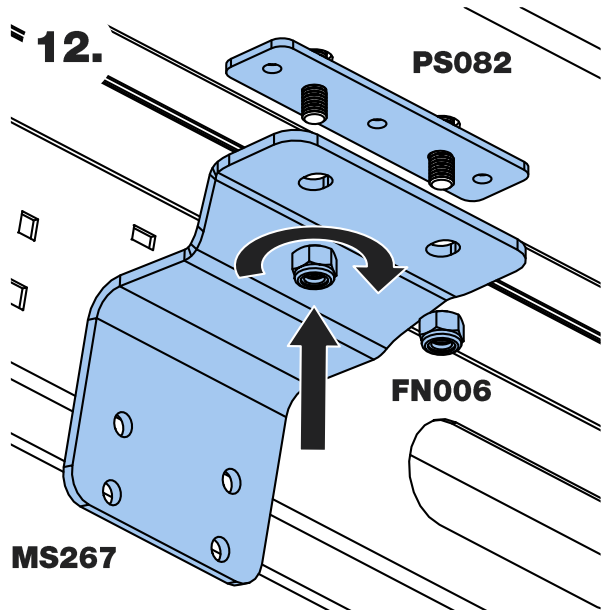


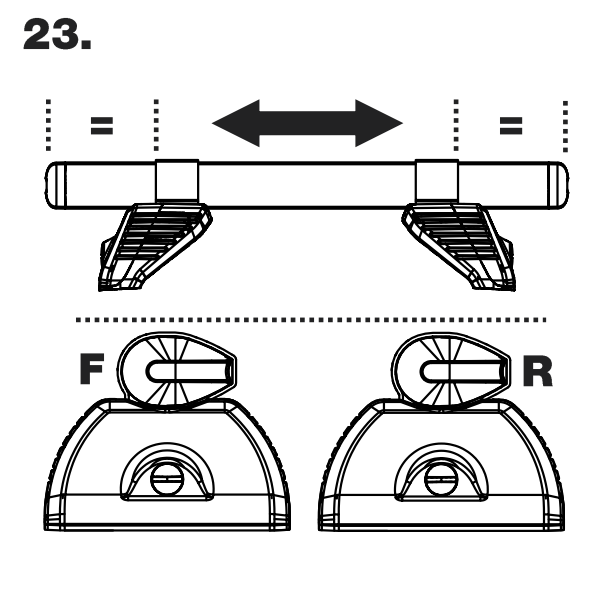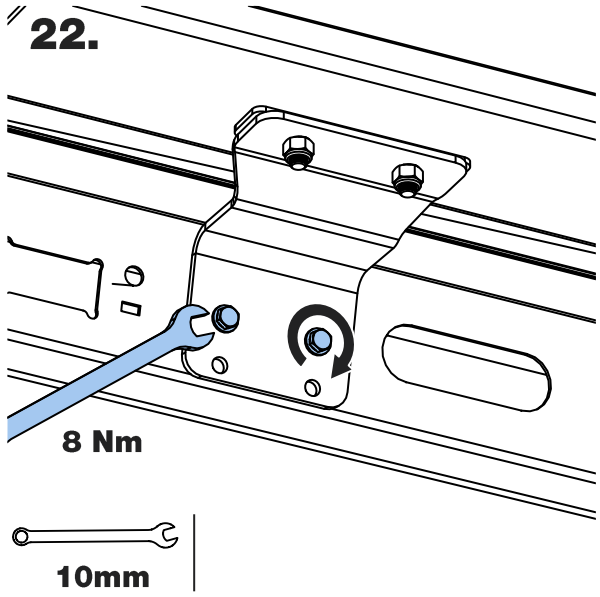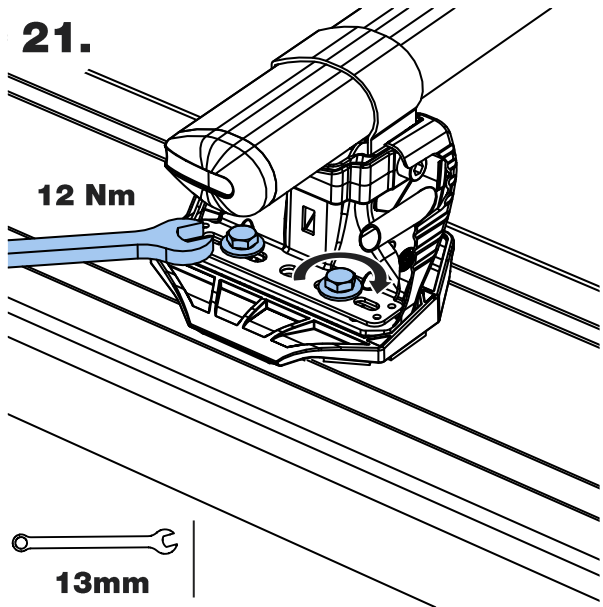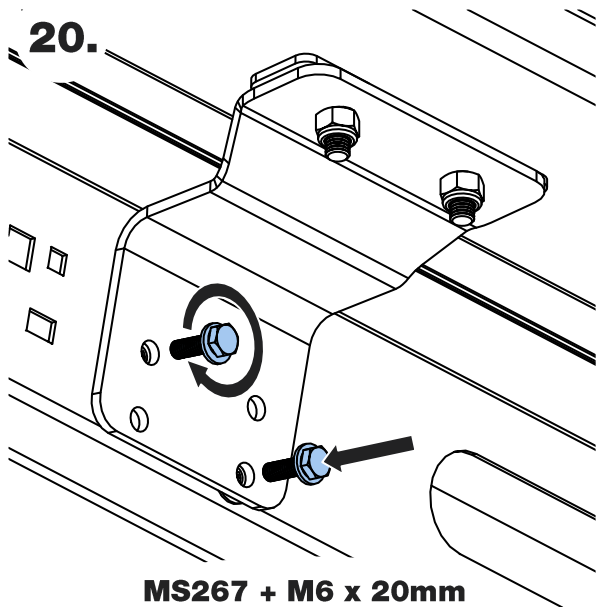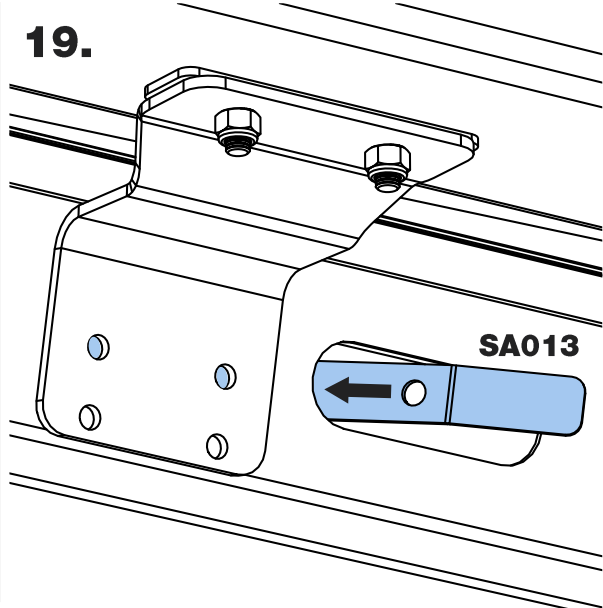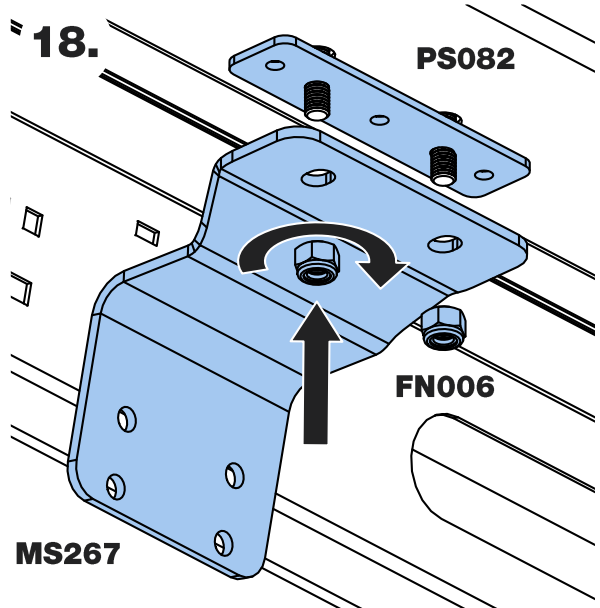


24.

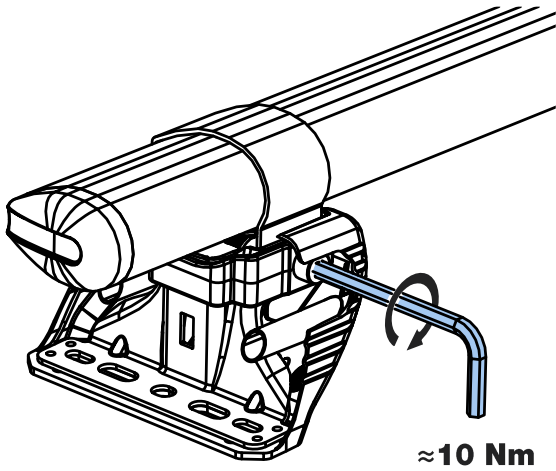


25.

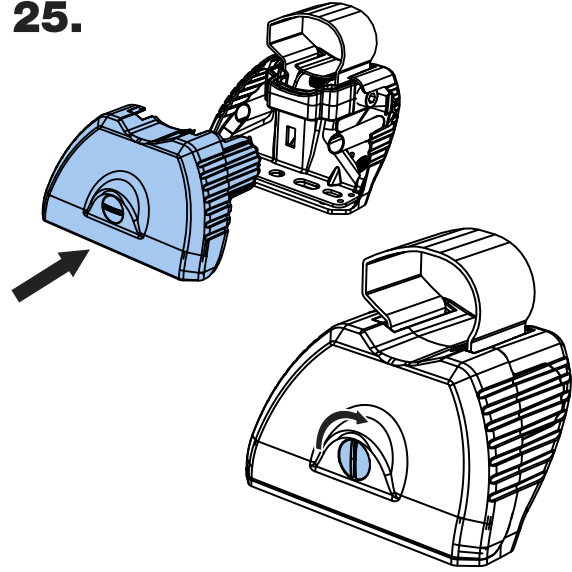


26.

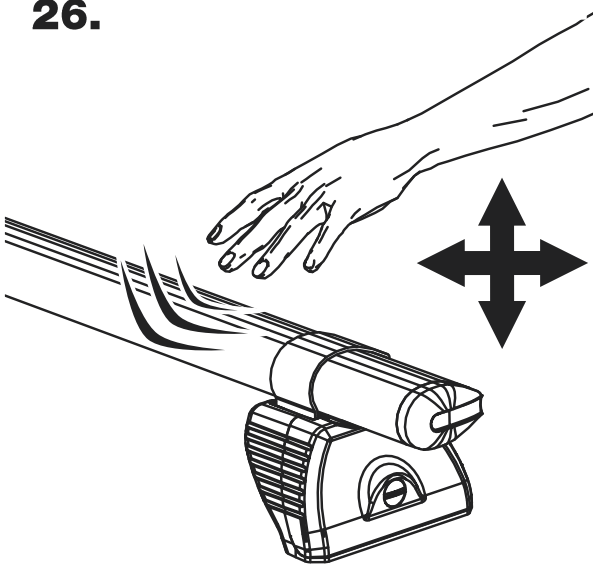

27.

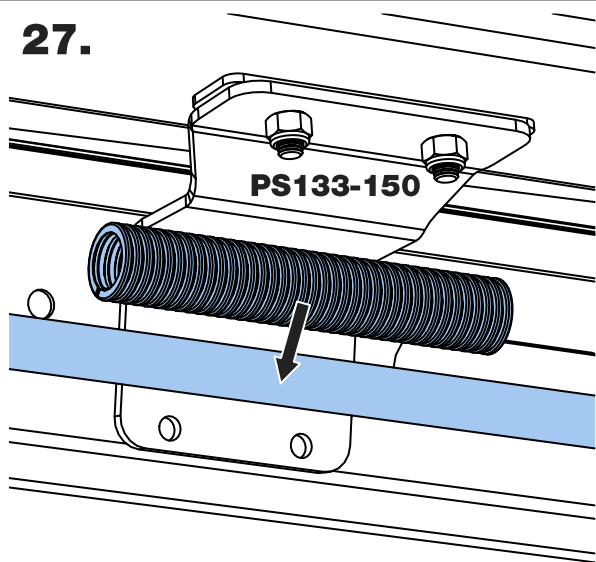

28.

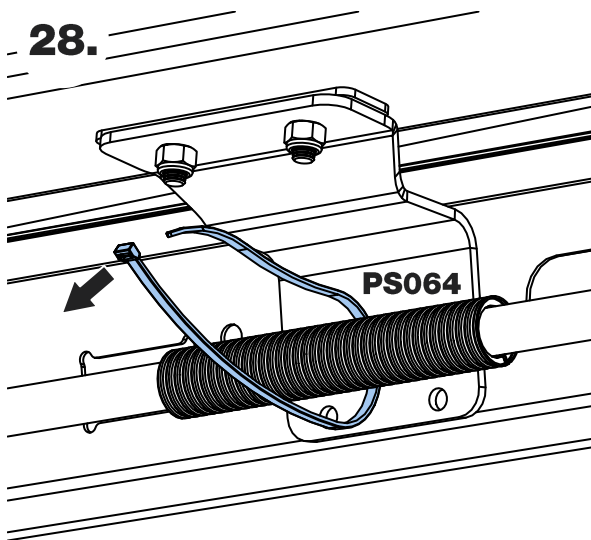

29.

