


RA3PR/FL





KammBar

Instructions

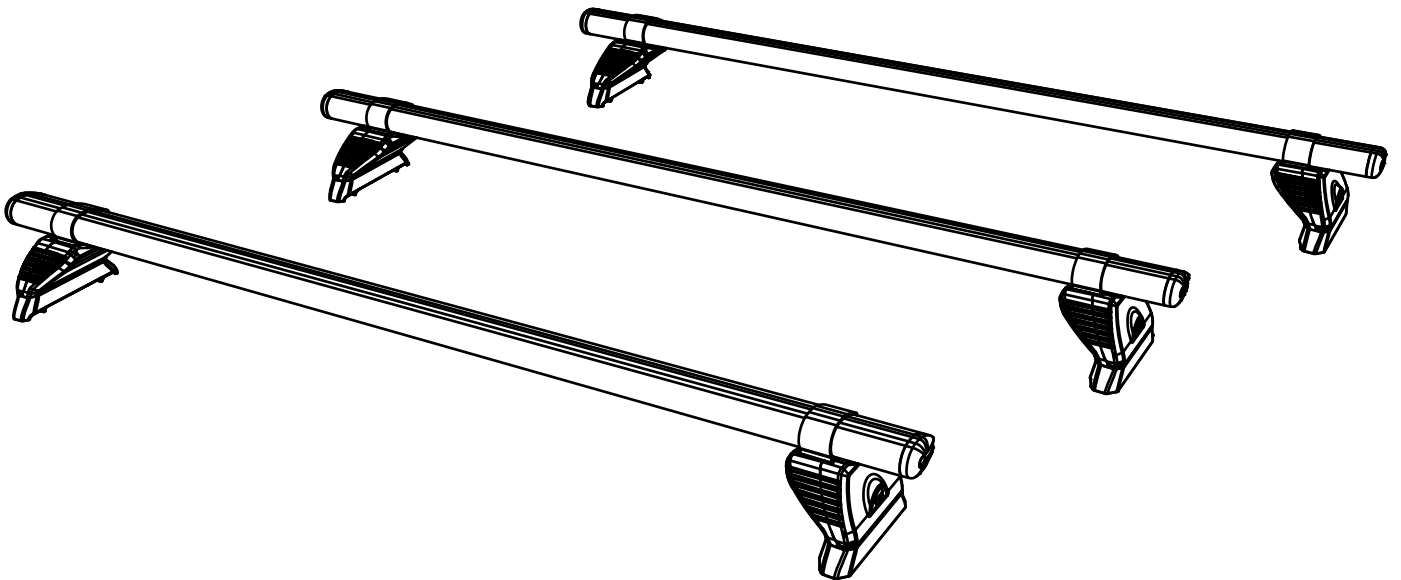


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

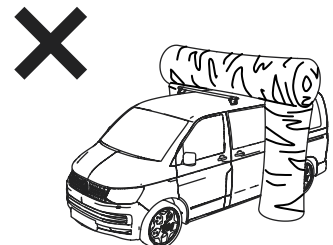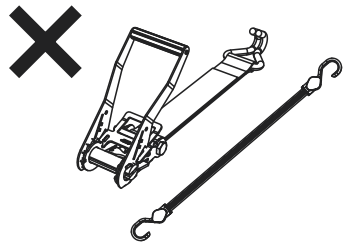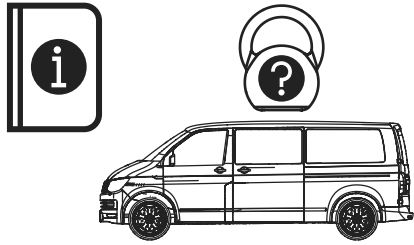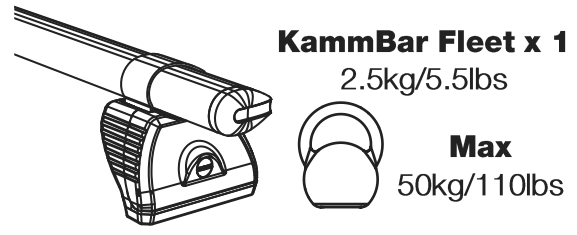


KammBar Pro

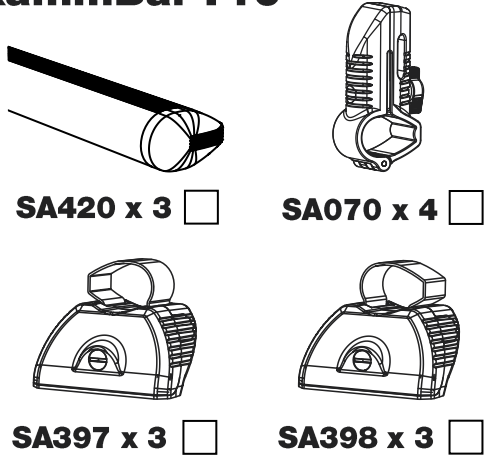


KammBar Fleet

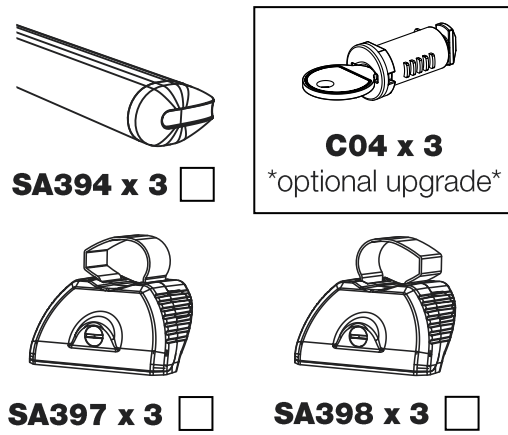


Fitting Kit

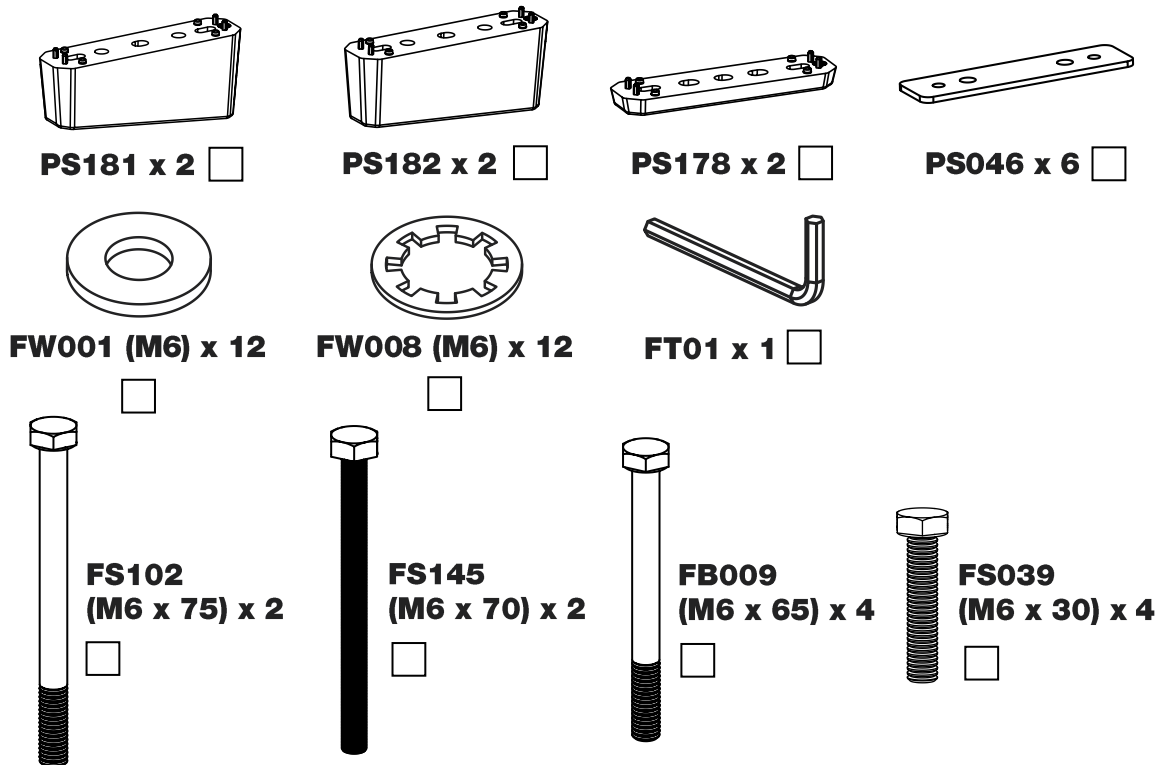

1.

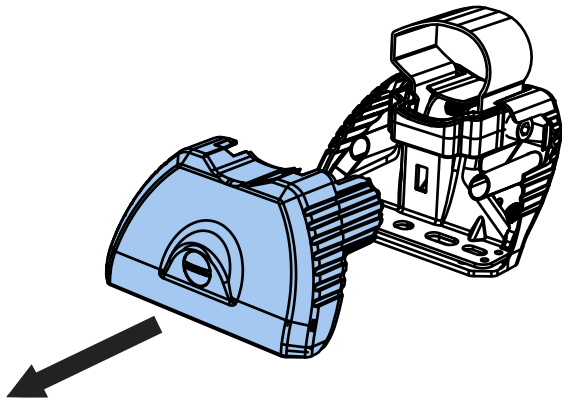

2.

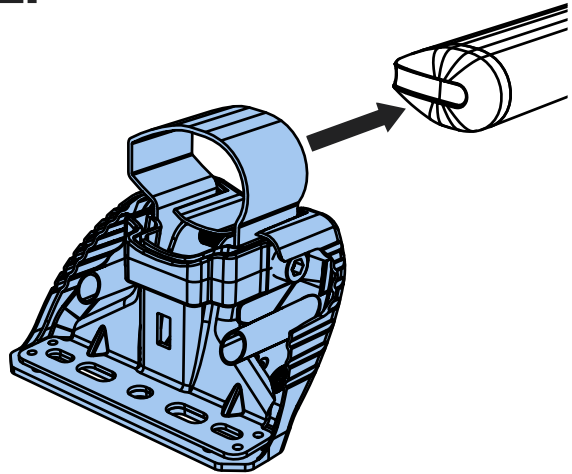

3.



SA397

PS182




SA397

PS178



SA397

PS181

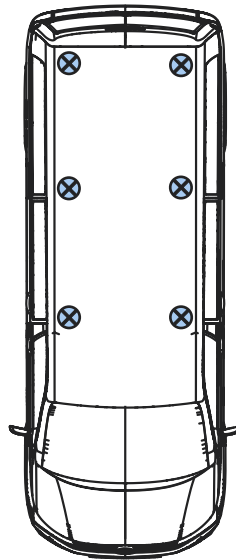


SA398




PS182

SA398




PS178

SA398










PS181

4.

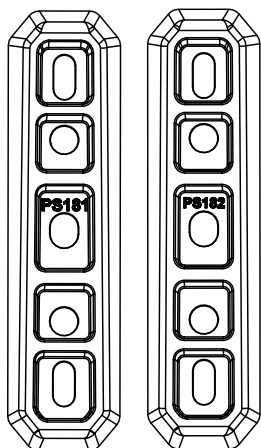


5.

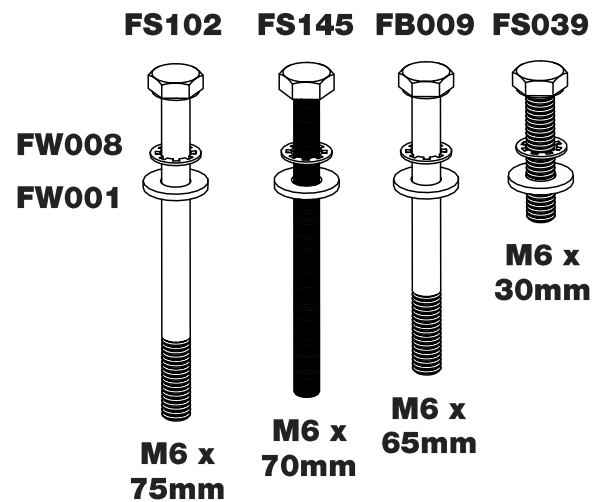


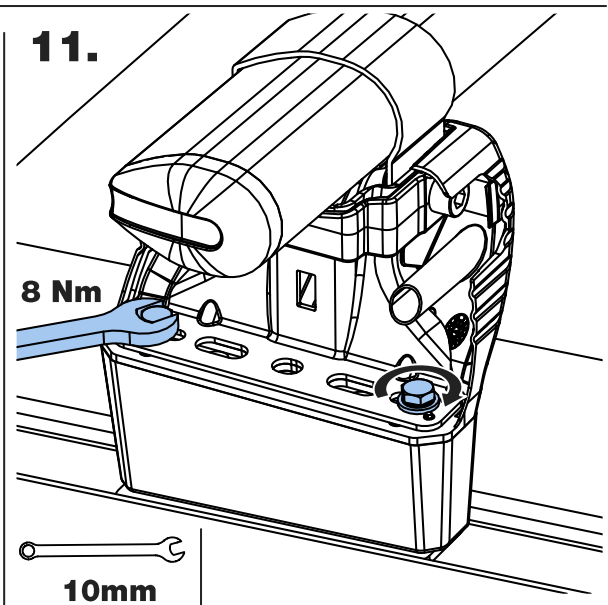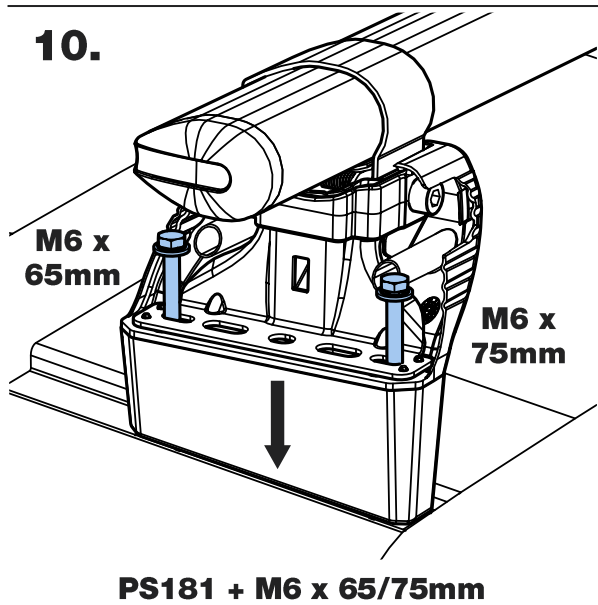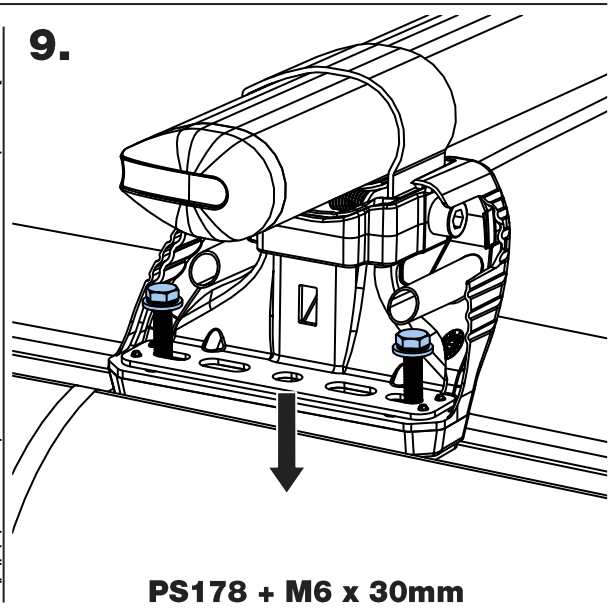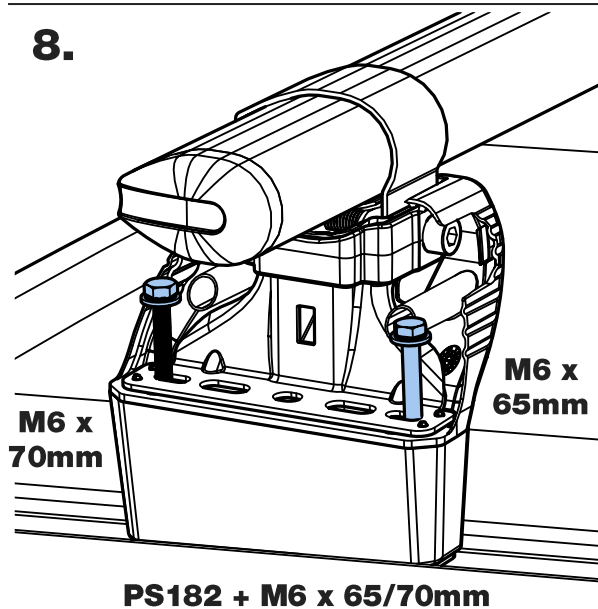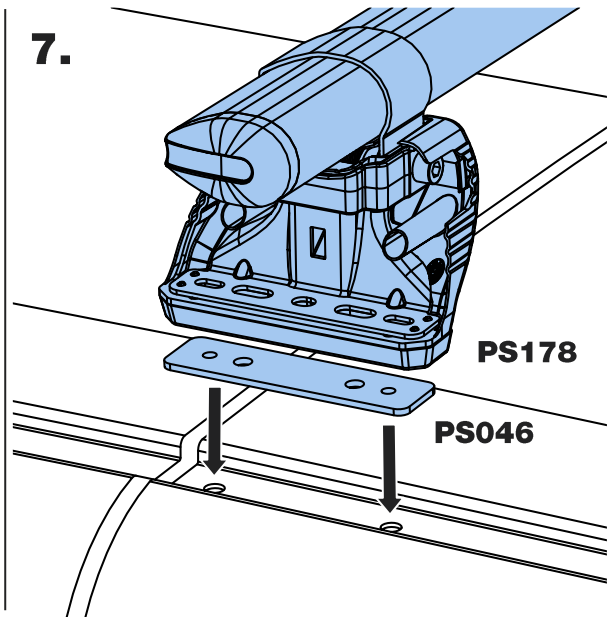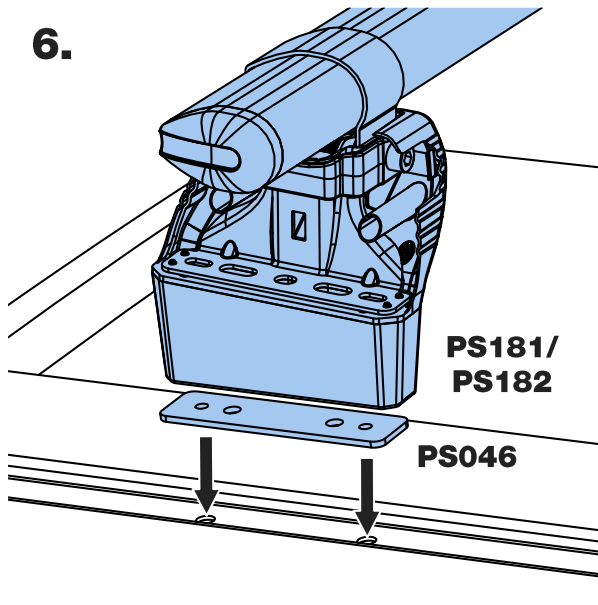


12.

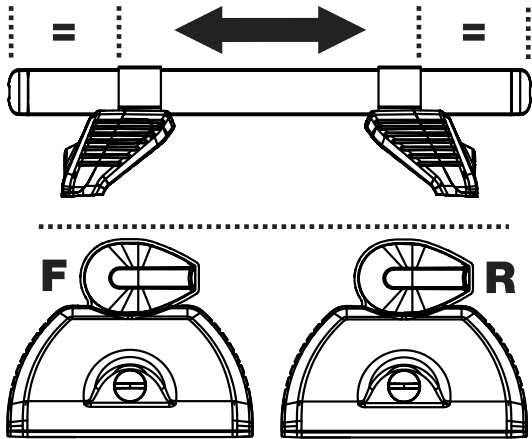

13.

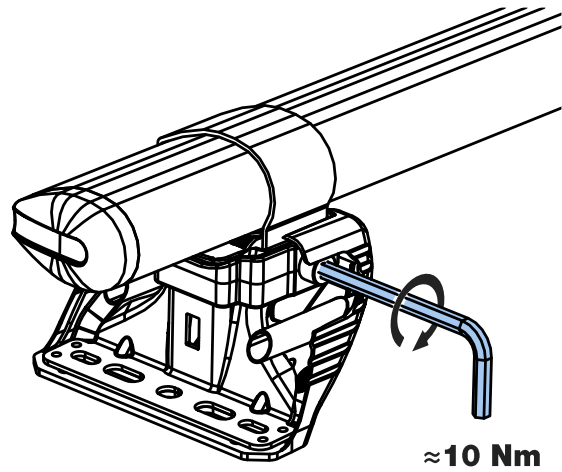

14.

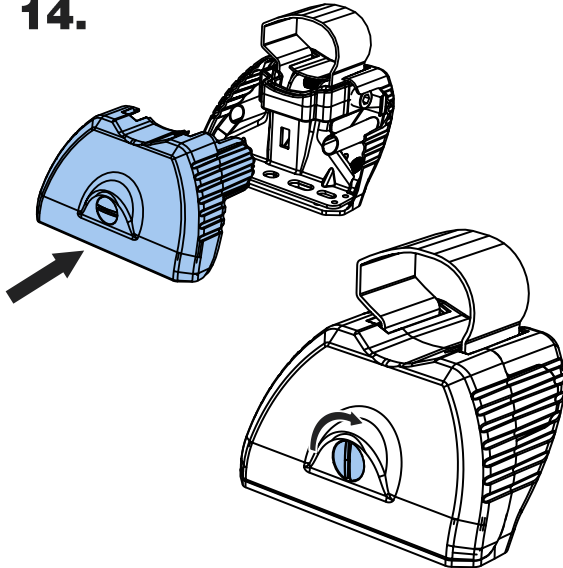

15.

