


# TC2PR/FL

# KammBar

## Instructions

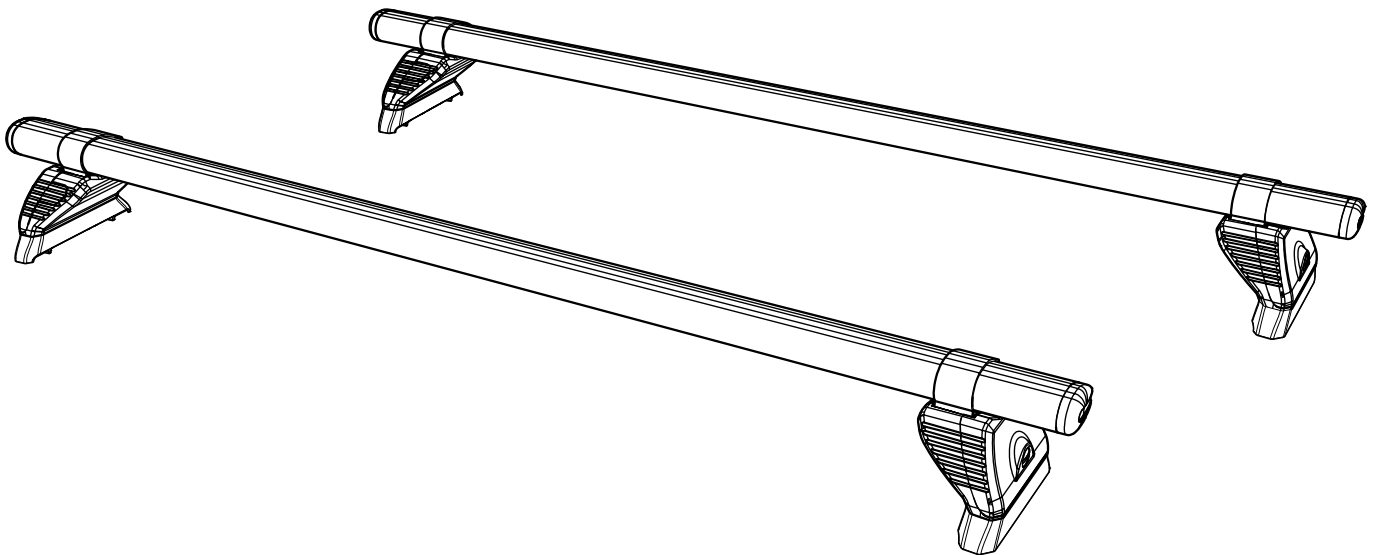


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006




### KammBar Pro

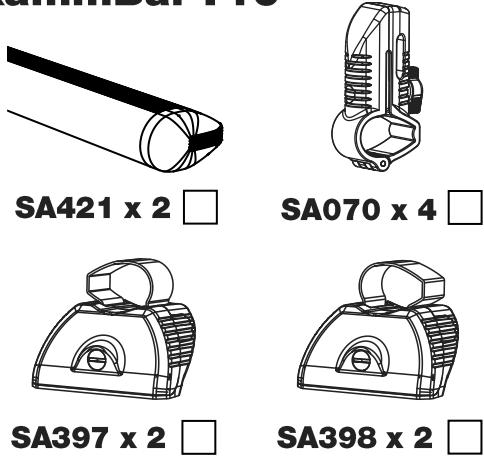

### KammBar Fleet

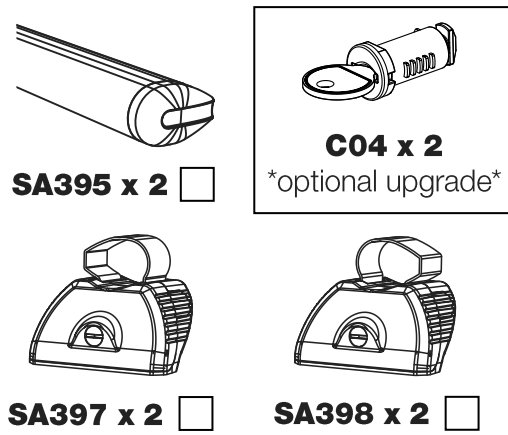


### Fitting Kit

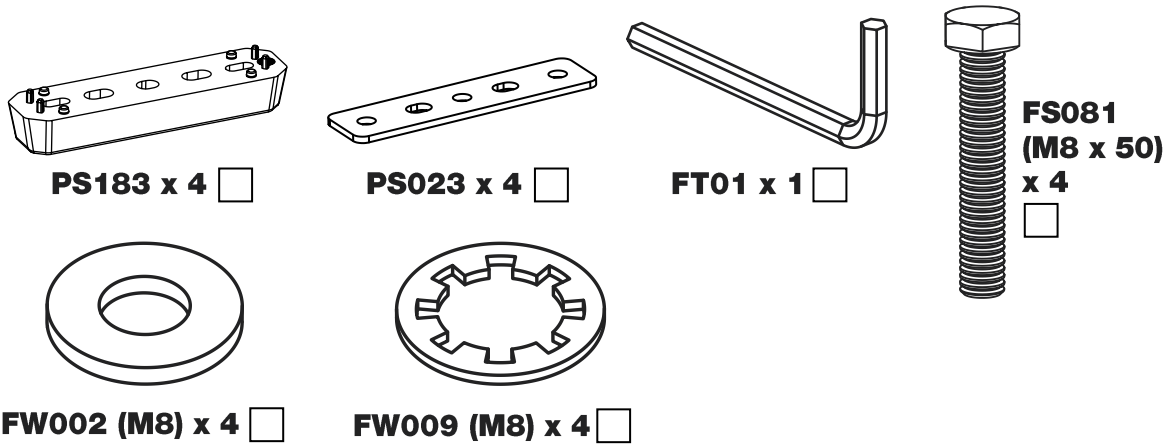


1.




2.

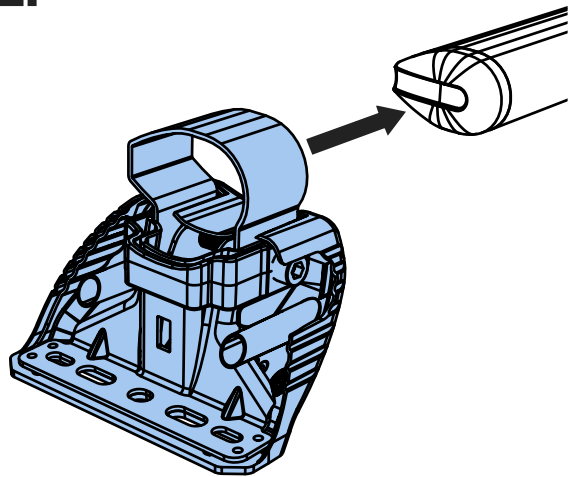



3.



SA397  
PS183

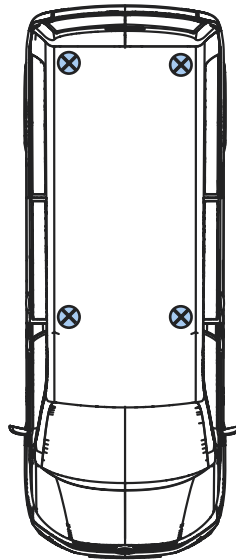


SA398  
PS183




SA397  
PS183


SA398  
PS183



4.

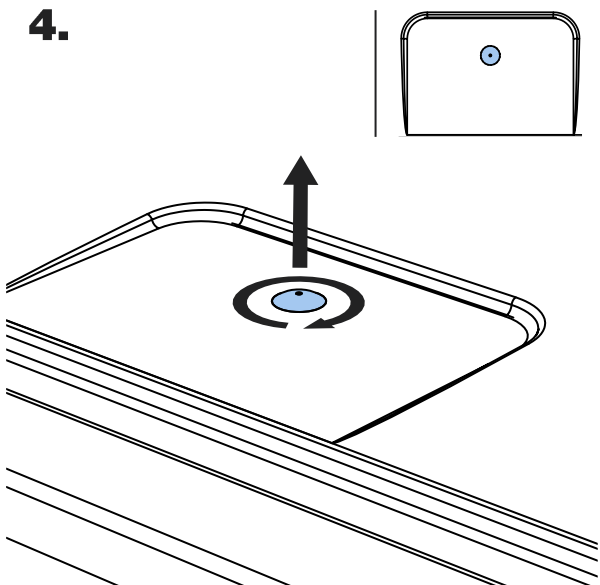


5.

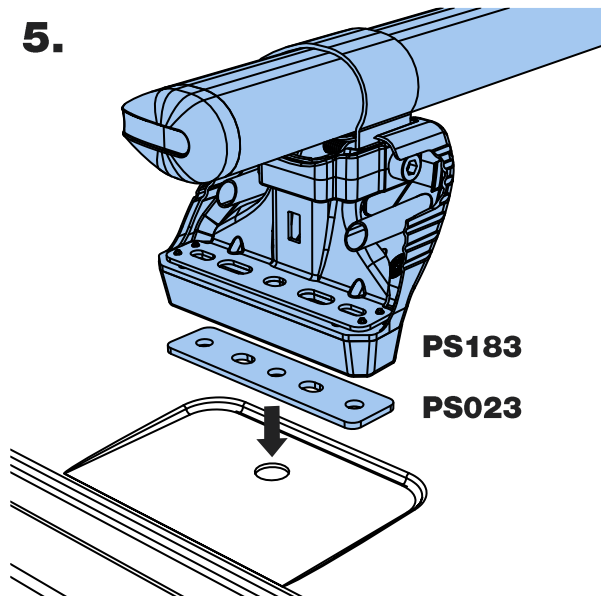



PS183

PS023

6.

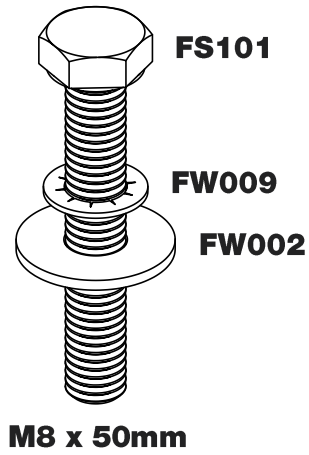


7.

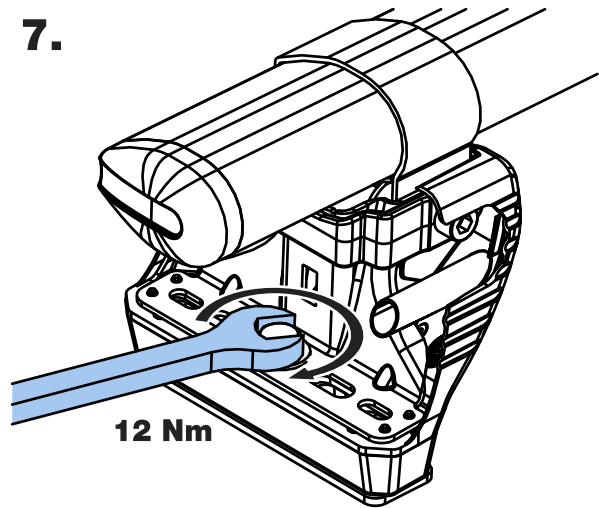


13mm

M8 x 50mm + PS183


8.

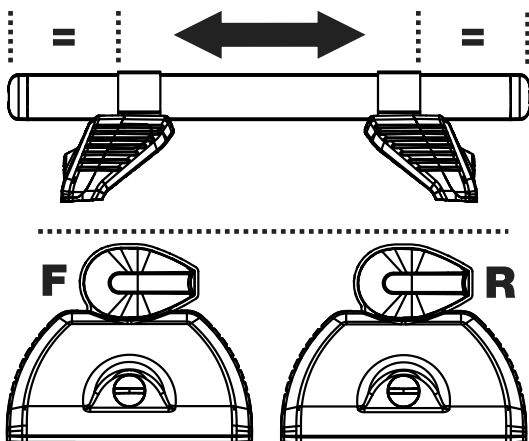

9.

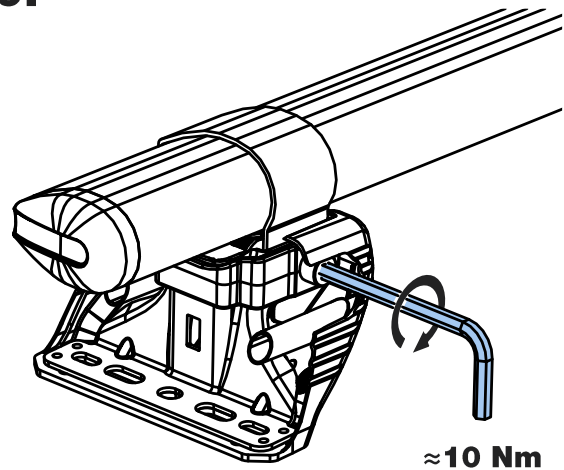

10.

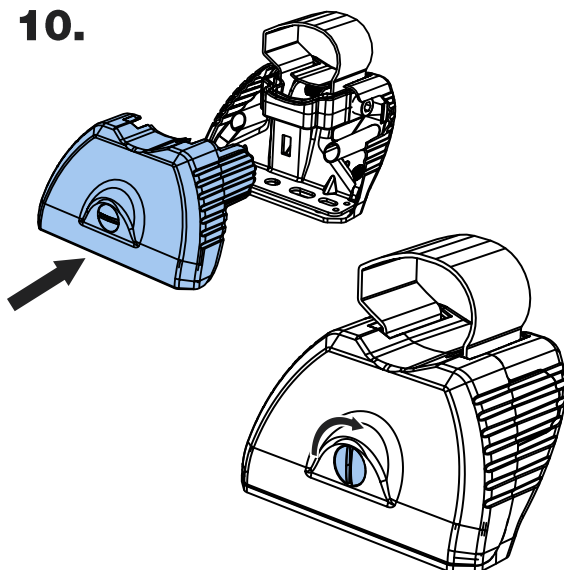

11.

