


TC4PR/FL





KammBar

Instructions

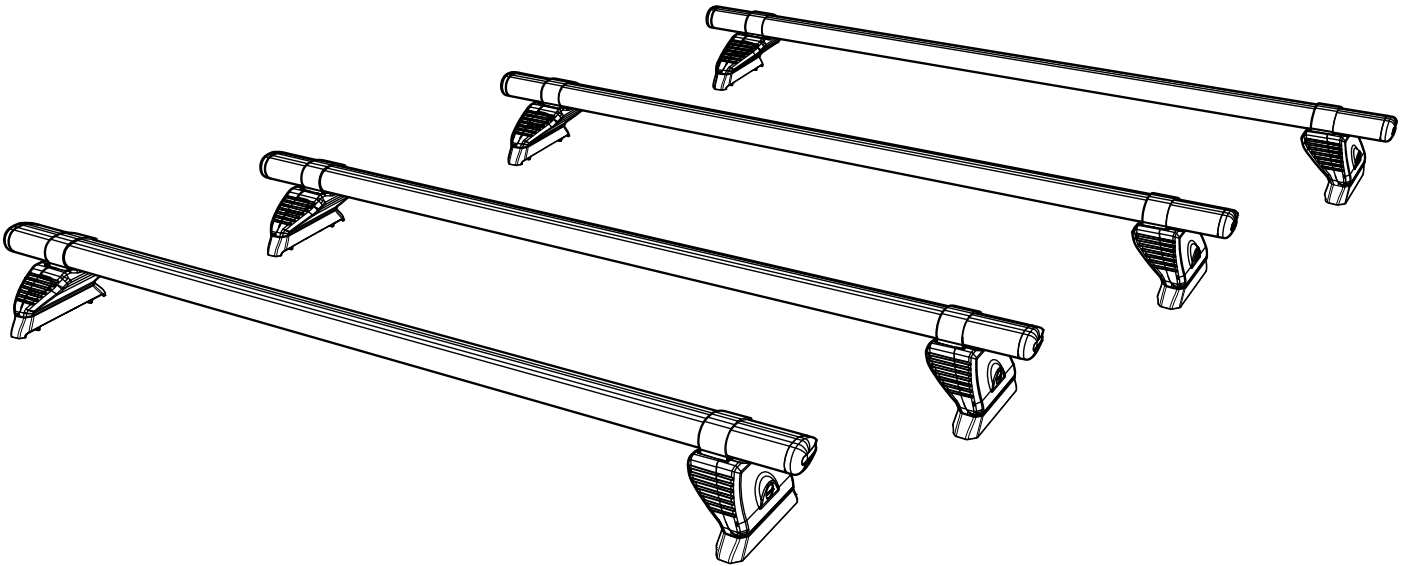


CITY CRASH (✓)


According to ISO/ PAS 11154:2006

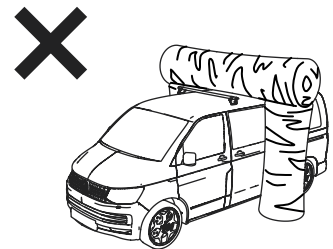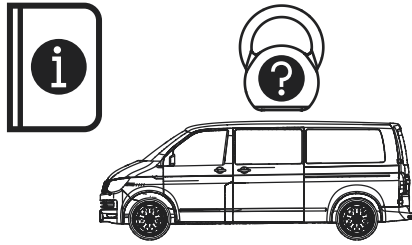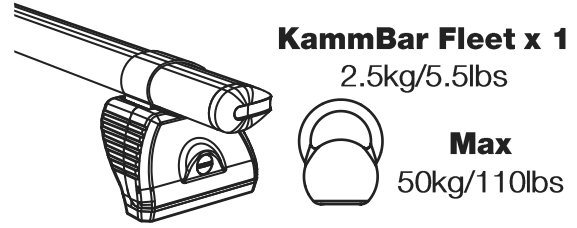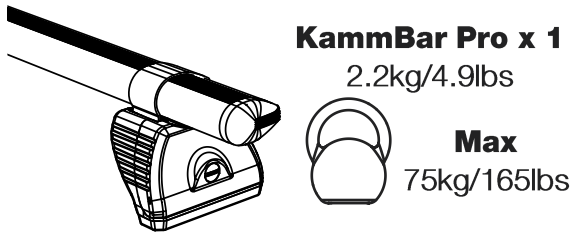


KammBar Pro

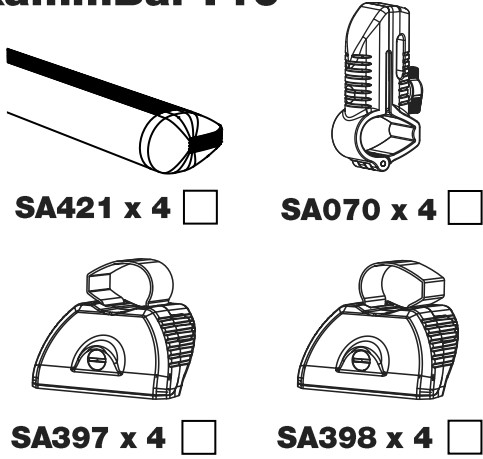

KammBar Fleet

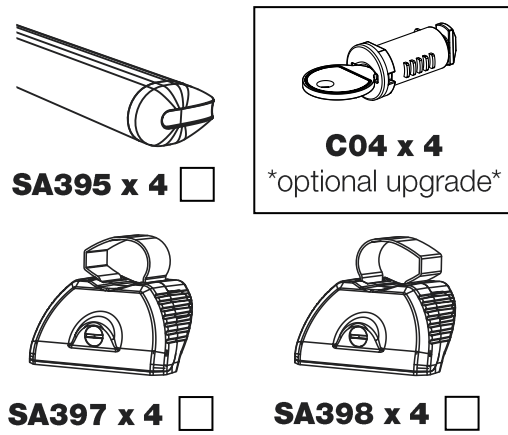

Fitting Kit

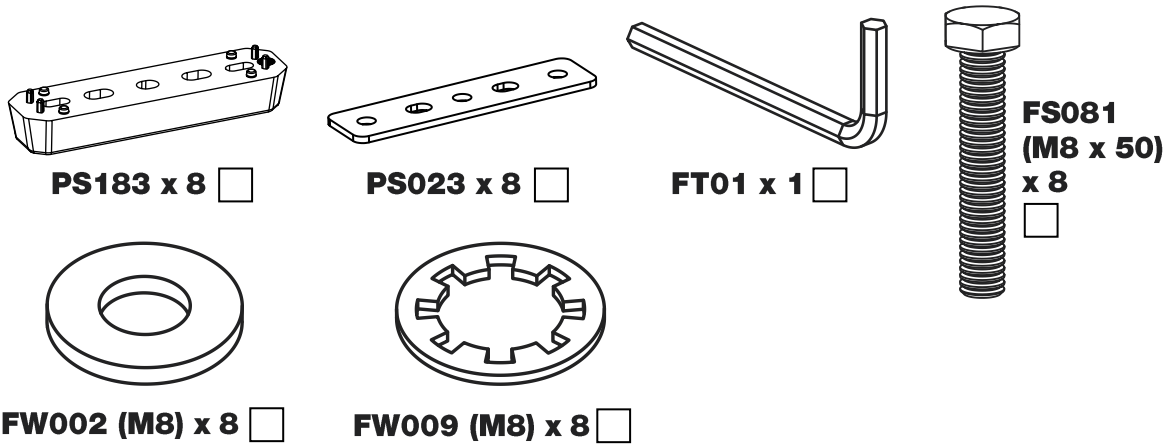


1.




2.




3.




SA397
PS183




SA397
PS183




SA397
PS183




SA397
PS183

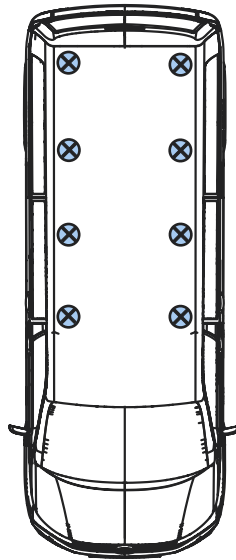


SA398
PS183




SA398
PS183




SA398
PS183




SA398
PS183




4.

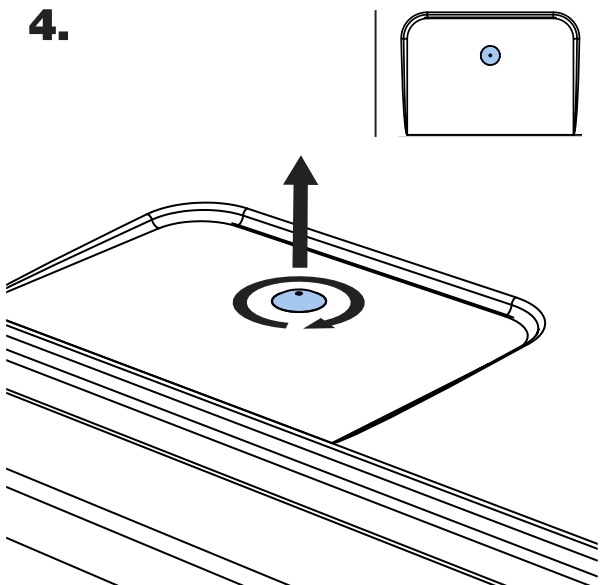



5.

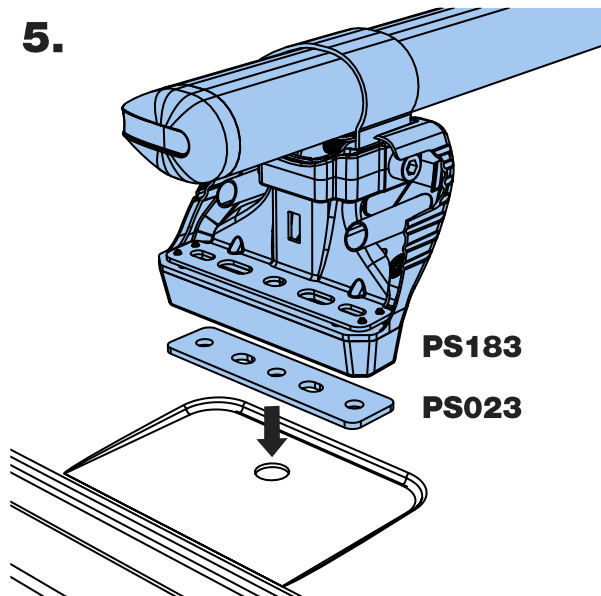

6.

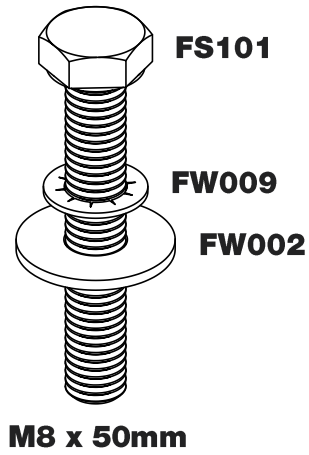


7.

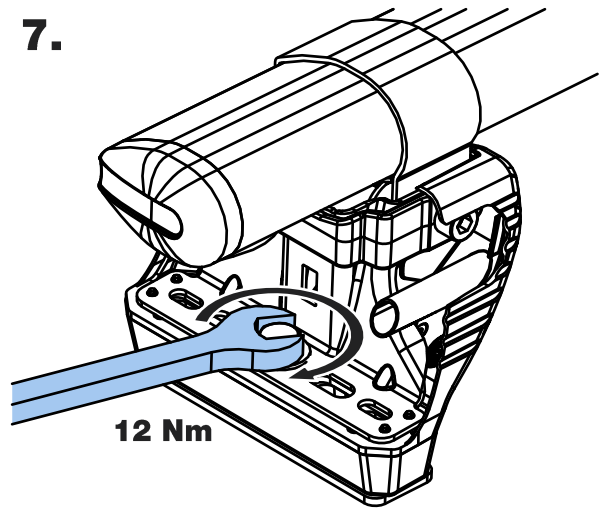


13mm

M8 x 50mm + PS183


8.

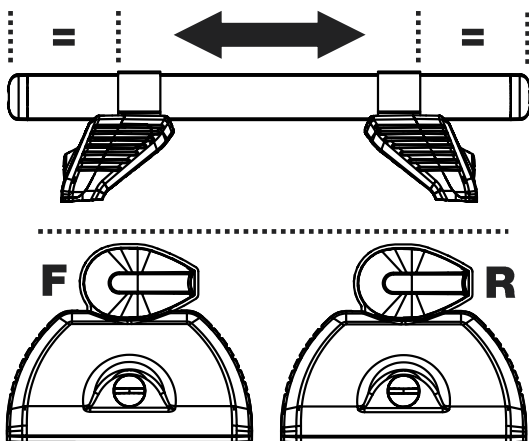

9.

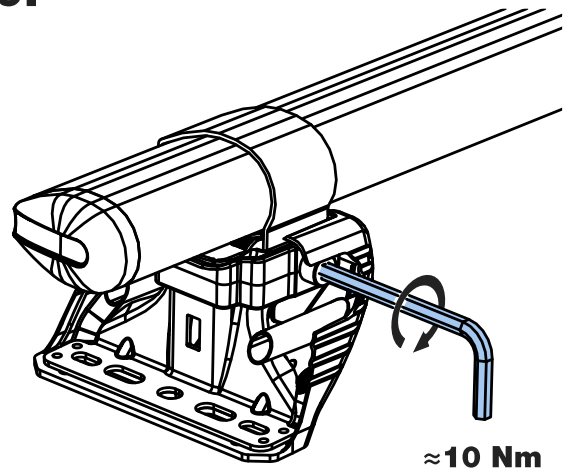

10.

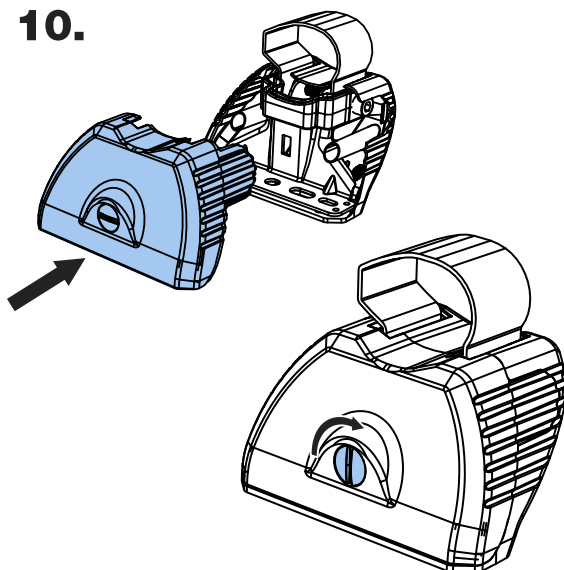

11.

