

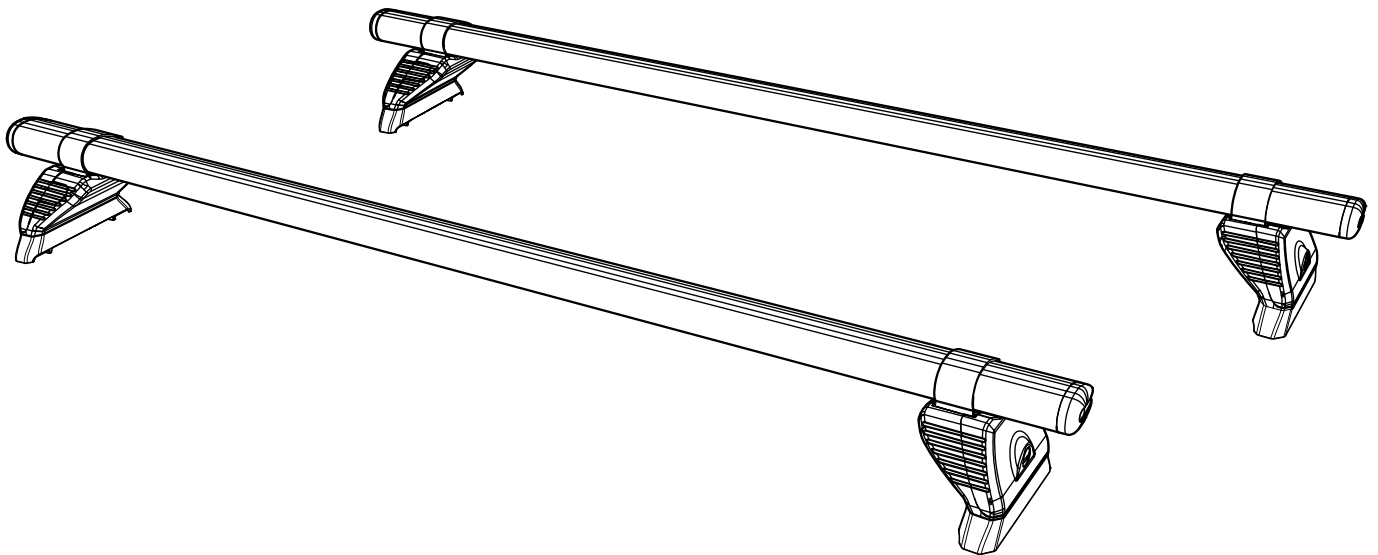
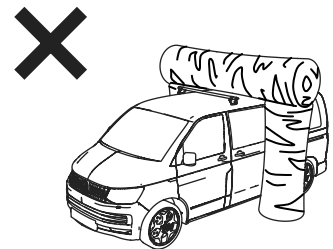
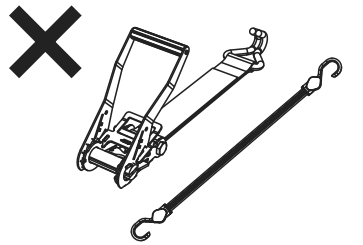


# P2PR/FL KammBar Instructions


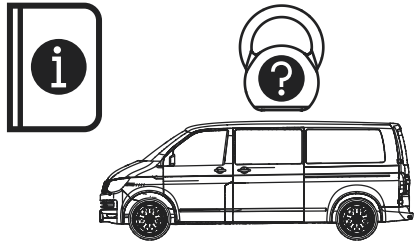


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

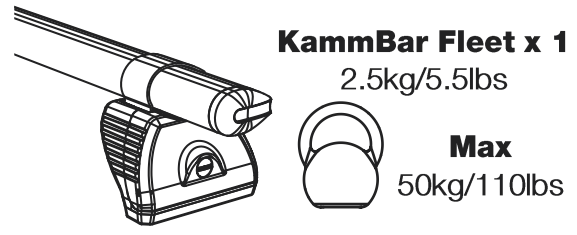




### KammBar Pro

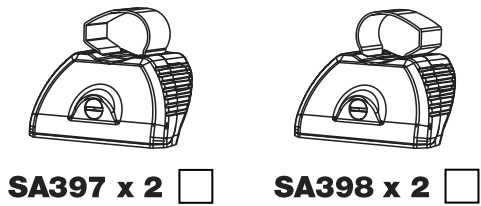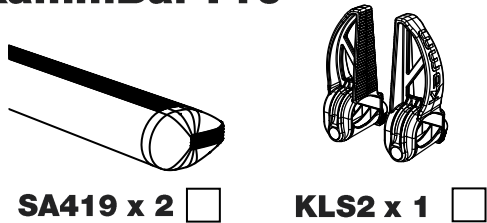


### KammBar Fleet

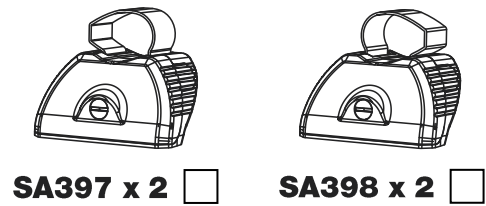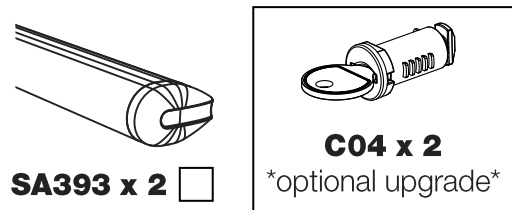


### Fitting Kit

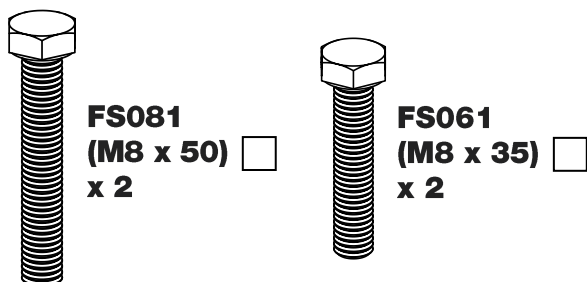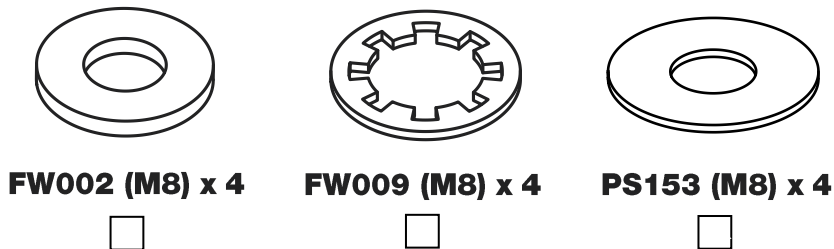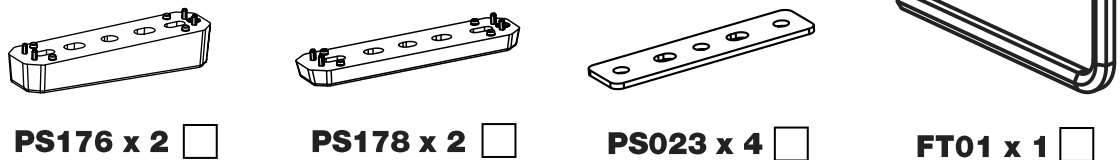


1.

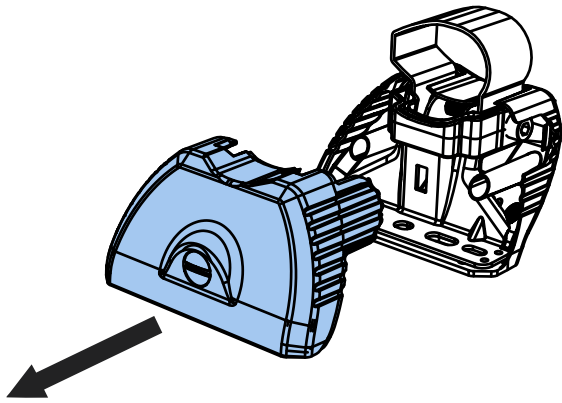

2.

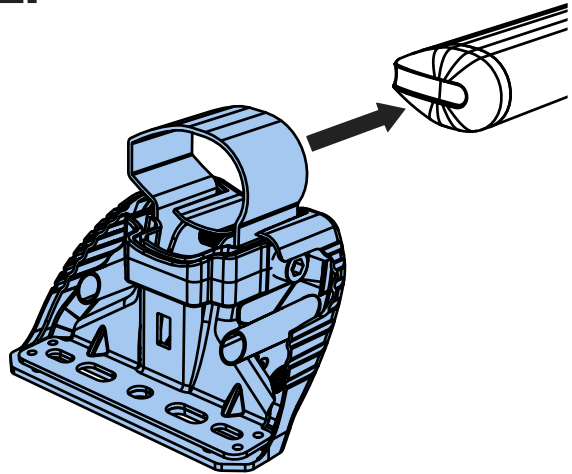

3.





SA397

PS178

SA398

PS178





SA397


PS176

SA398


PS176

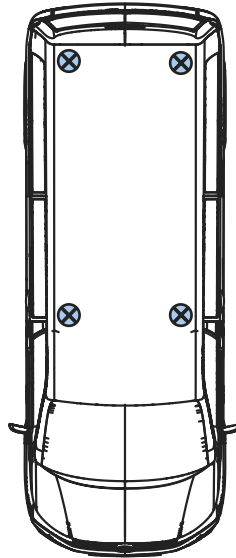


4.

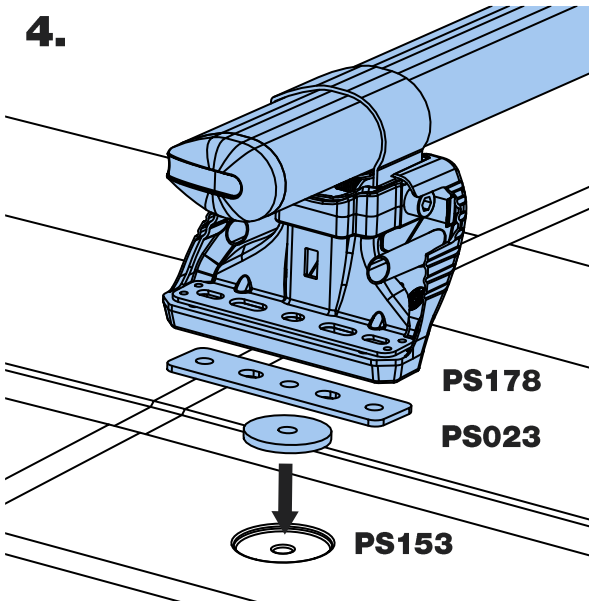


5.

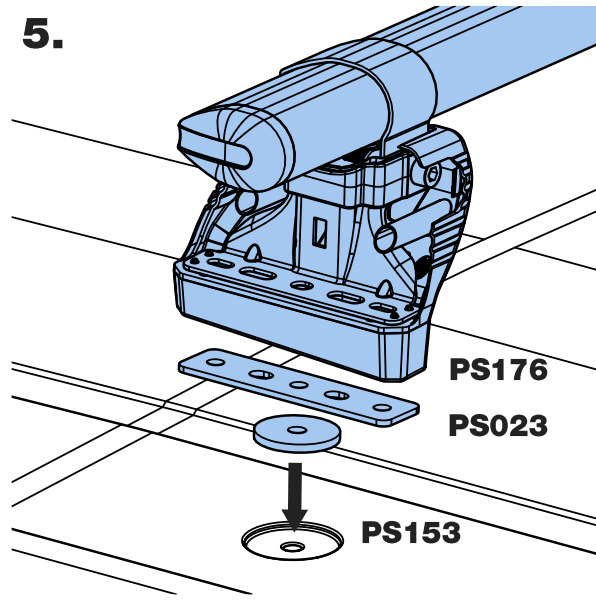


6.

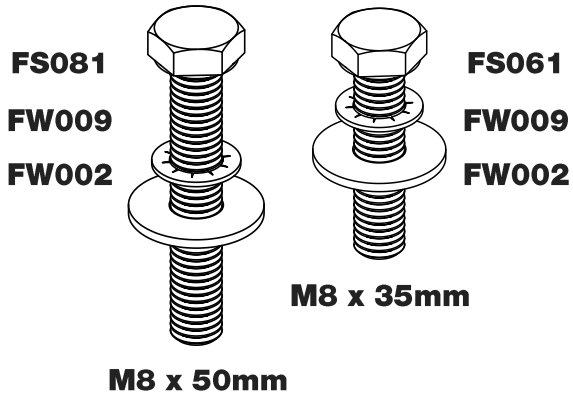


7.

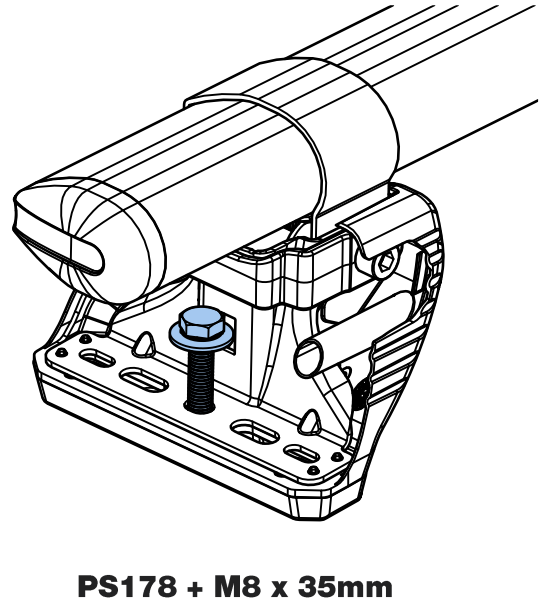


8.

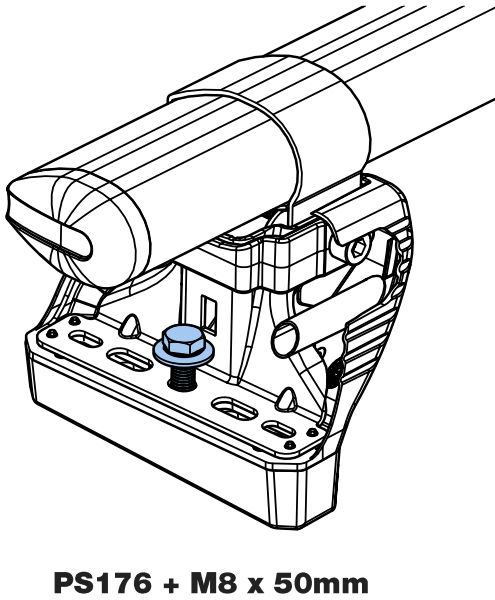


9.

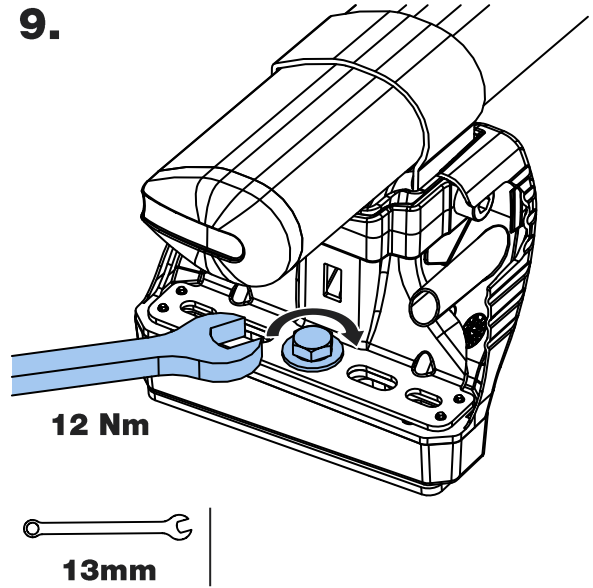


10.

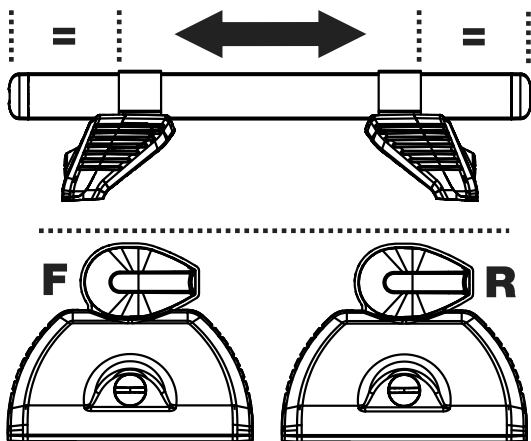

11.

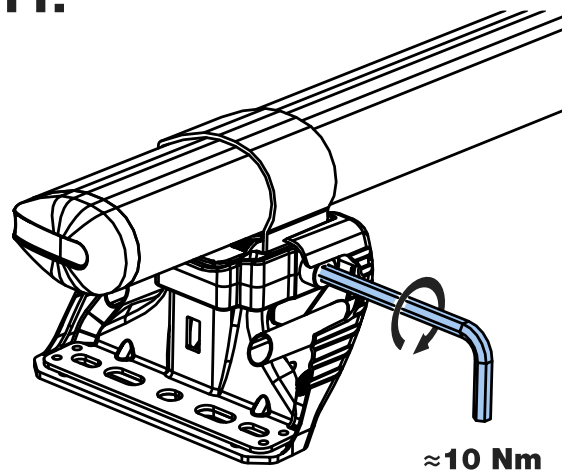

12.

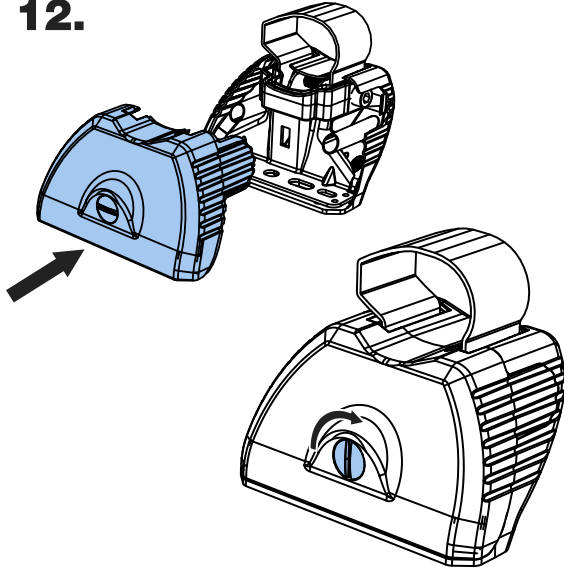

13.

