


# KB2PR/FL




# KammBar

## Instructions


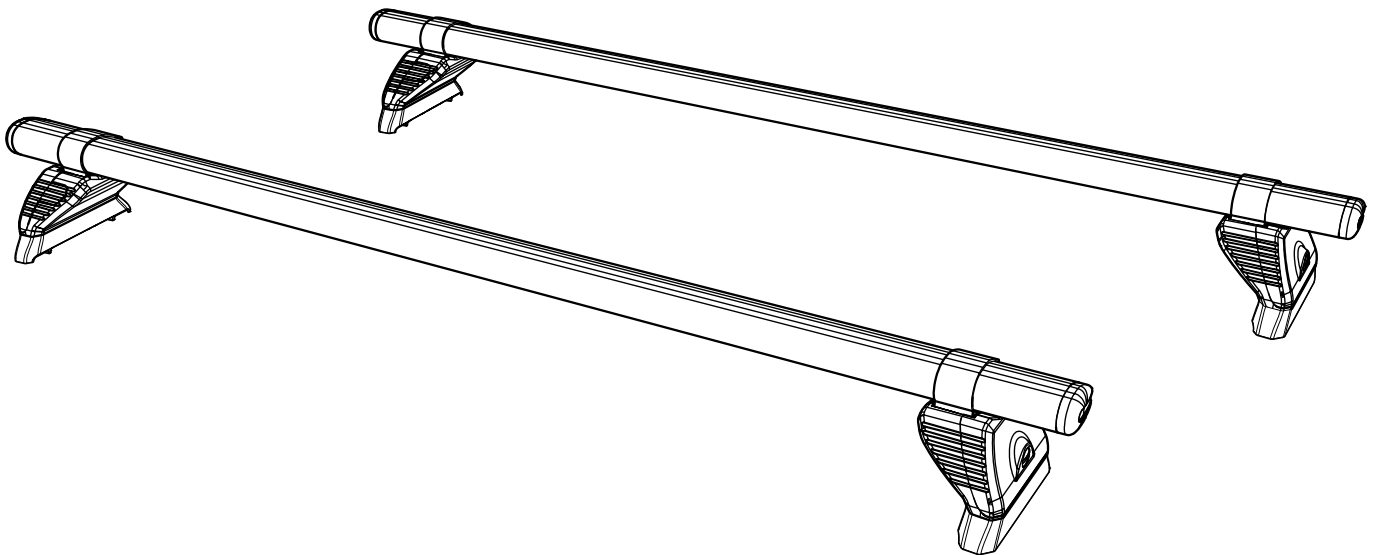


**CITY CRASH** (✓)



According to ISO/ PAS 11154:2006

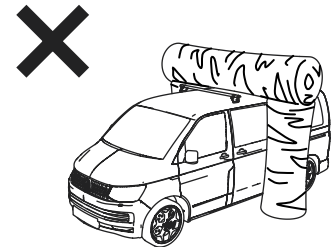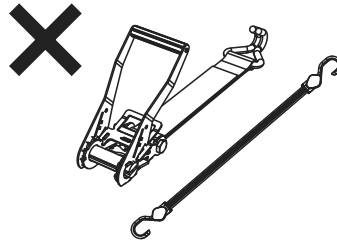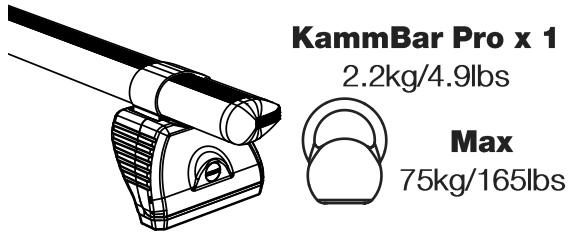




### KammBar Pro

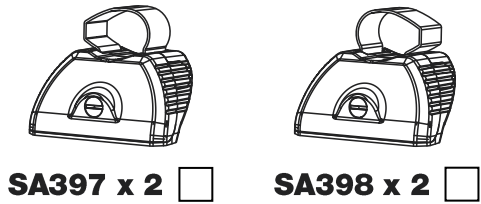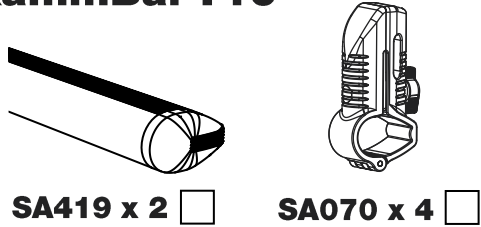

### KammBar Fleet

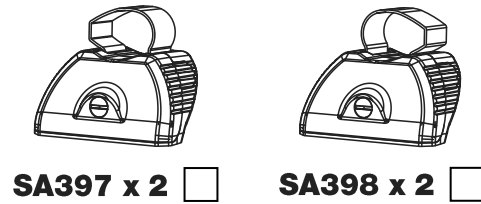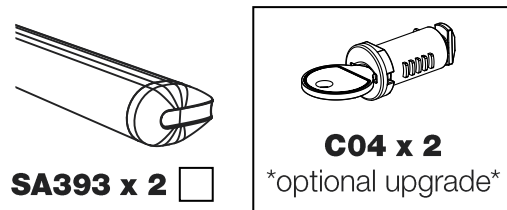


### Fitting Kit

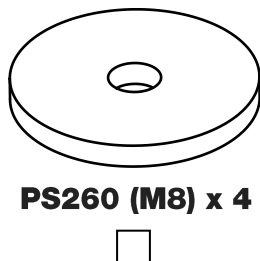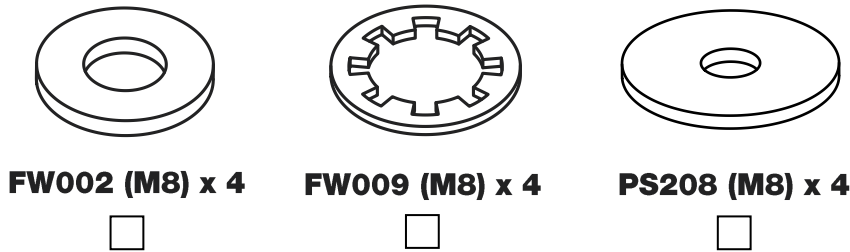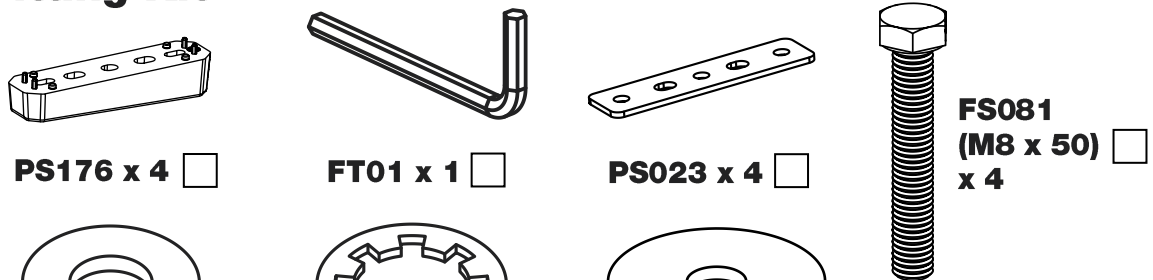


1.




2.

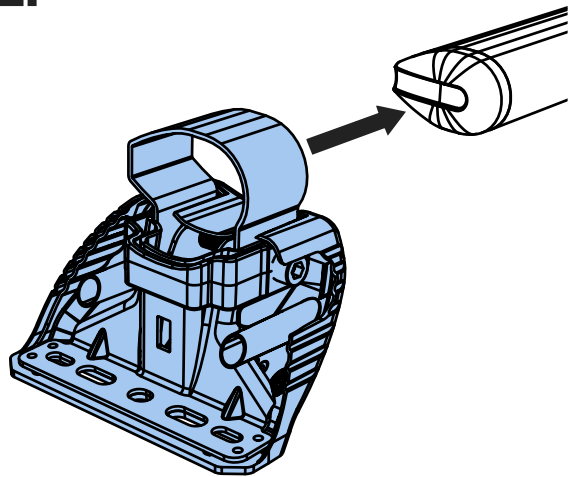


3.




SA397





PS176

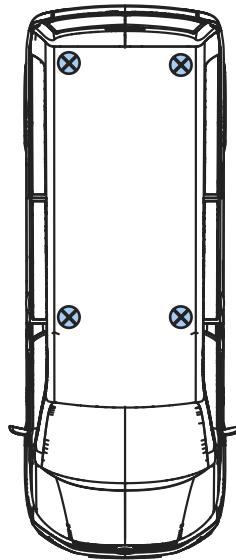

SA398



PS176




SA397



PS176


SA398



PS176



4.

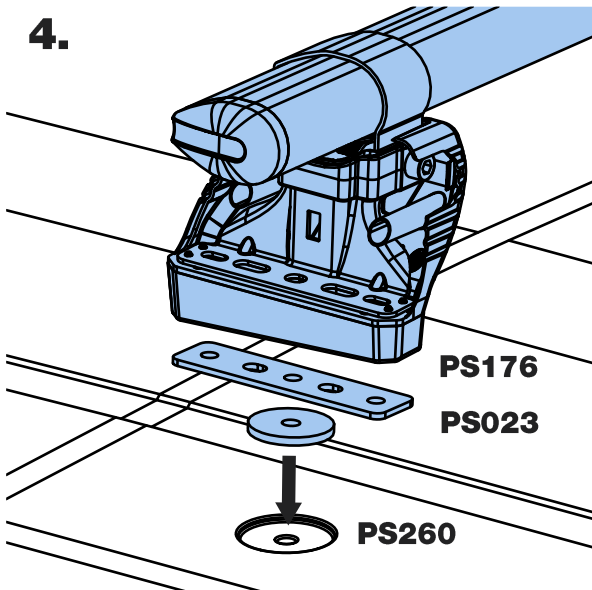


PS176

PS023

PS260

5.

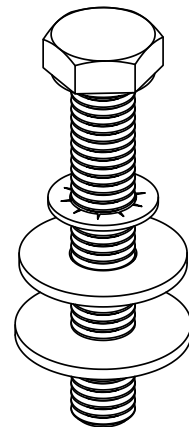

FS081


FW009

FW002

PS208


M8 x 50mm

6.

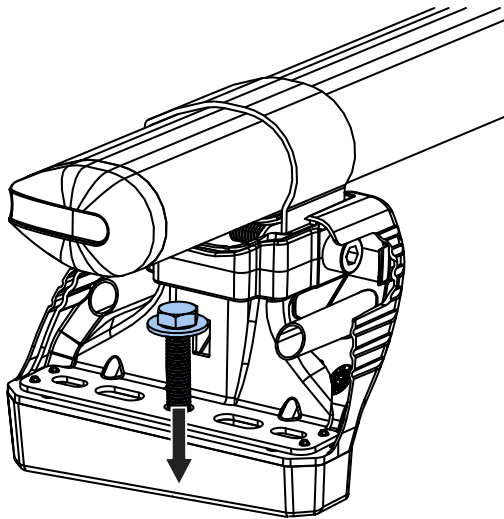


PS176 + M8 x 50mm

7.

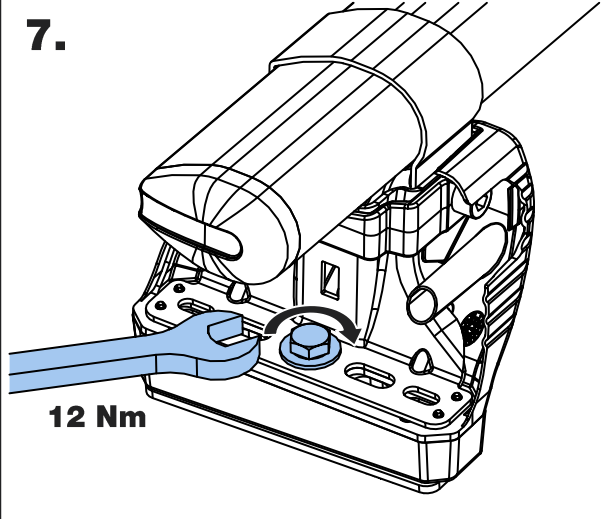


12 Nm




13mm

8.

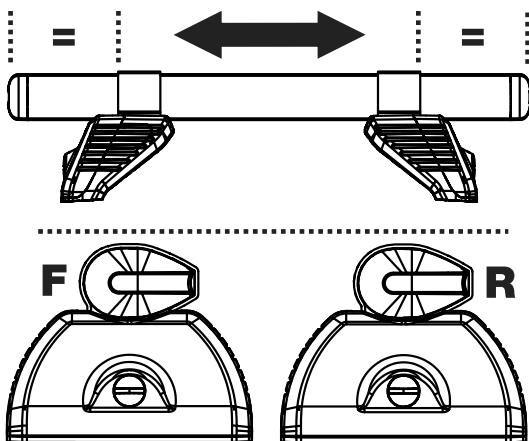


9.

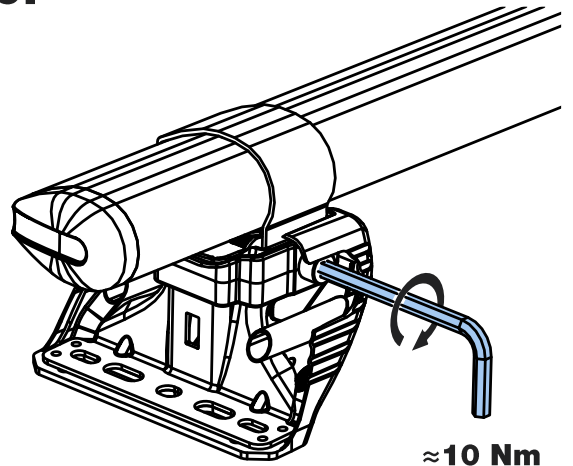

≈ 10 Nm

10.

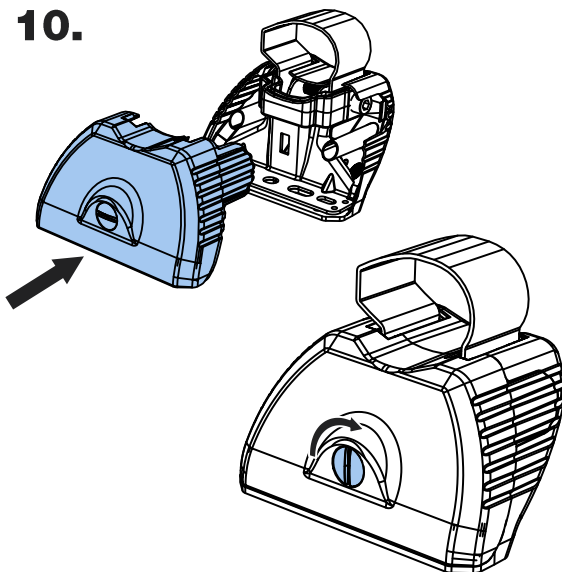

11.

